

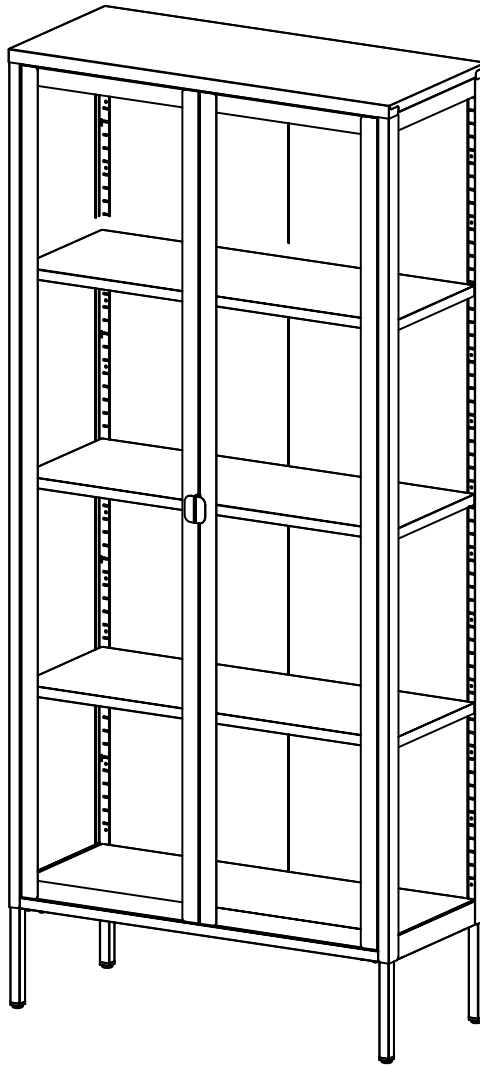


Open Concept


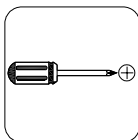










Thank you for purchase.
Instruction Manual



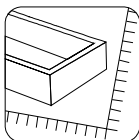


Important:


Please read through instructions carefully
Before assembly and keep for future reference.

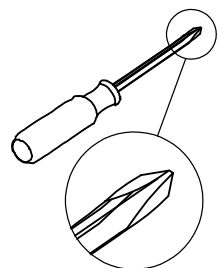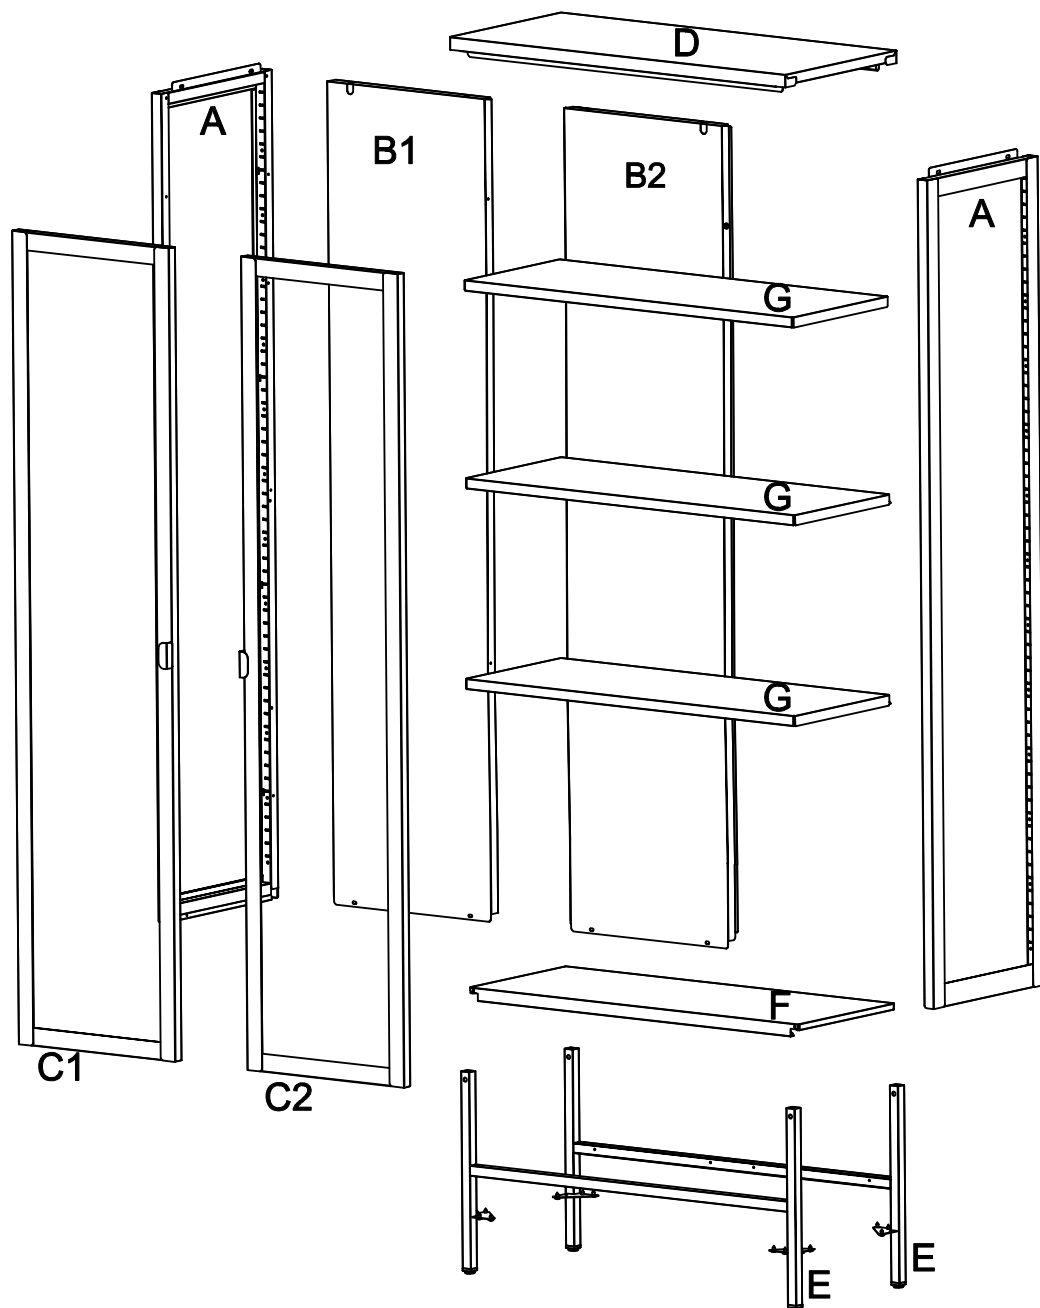

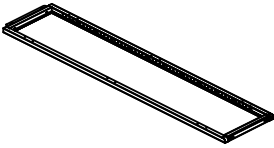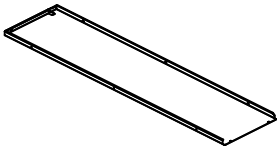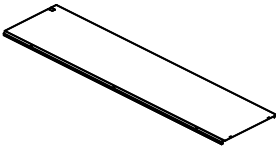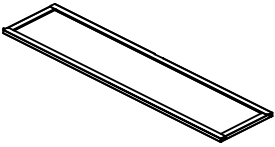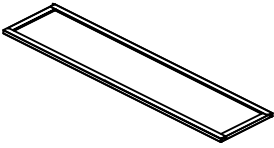
A x 2  1418x350x24mm	B1 x 1  1390x355x23mm	B2 x 1  1390x367x23mm	C1 x 1  1371x348.5x20mm
C2 x 1  1371x348.5x20mm	D x 1  751.6x352x38mm	E x 2  746x380x20mm	F x 1  736x301x25mm
G x 3  736x300x6mm			

① x41  Ø5*12mm	② x2  Ø6*30mm	③ x2  Ø12*0.8mm	④ x16 	⑤ x4 
⑥ x2 	⑦ x16 	⑧ x2  Ø8*38mm	⑨ x2  Ø4*38mm	⑩ x6 

(1) - Attach (A) to (E) as below shown.


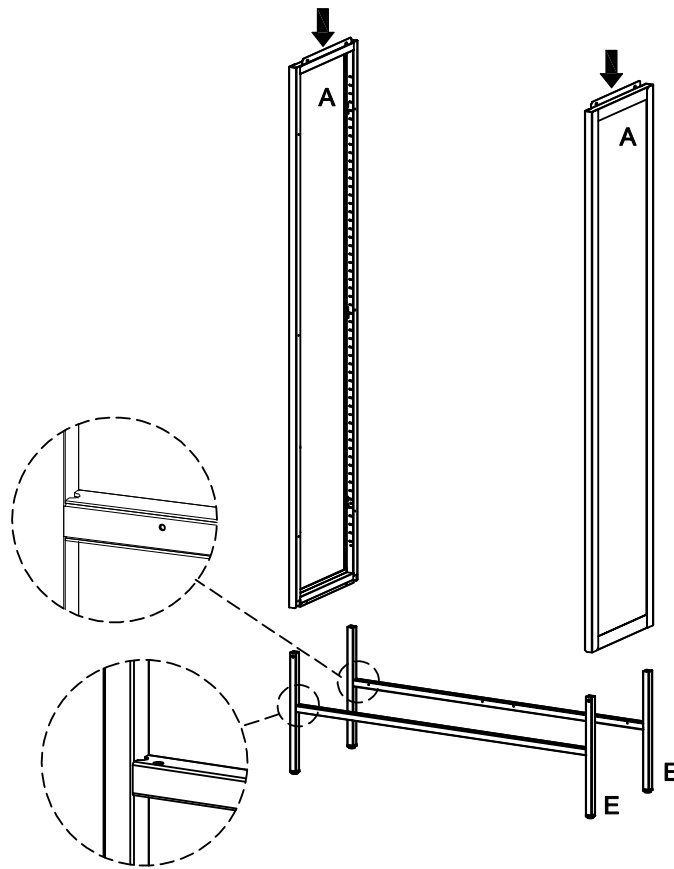


(2) - Attach (5) to (A) & (E) as below shown.


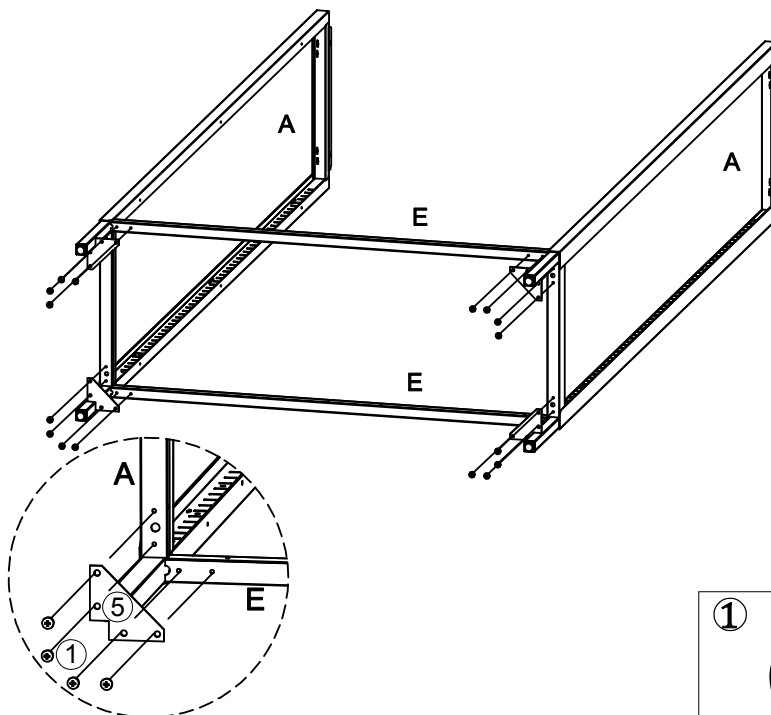


①	X16	⑤	X4


(3) - Attach (B1) & (B2) to (A) as below shown.

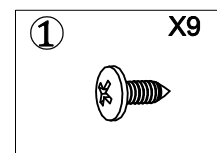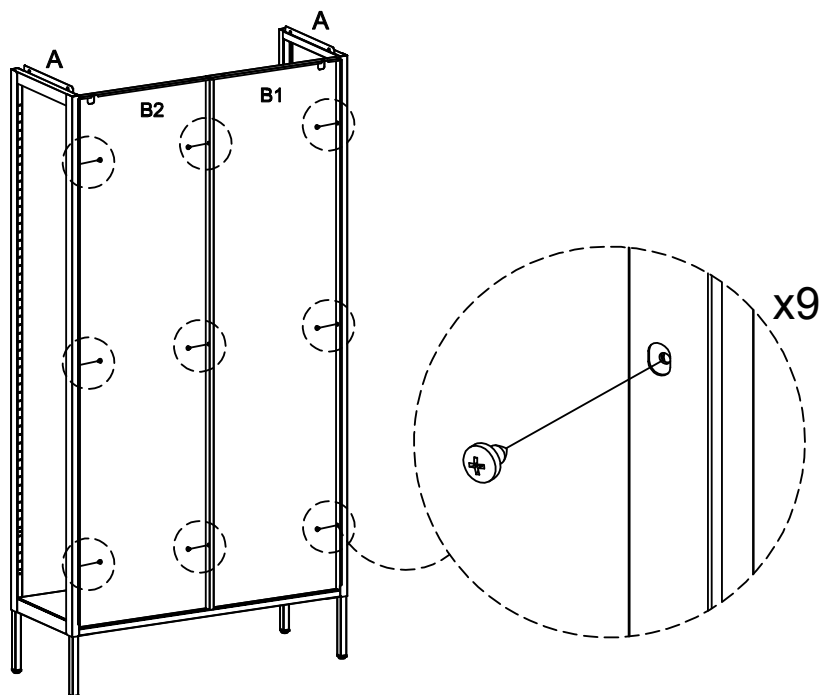


(4) - Attach (B1) & (B2) to (E) as below shown.

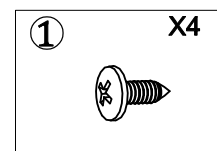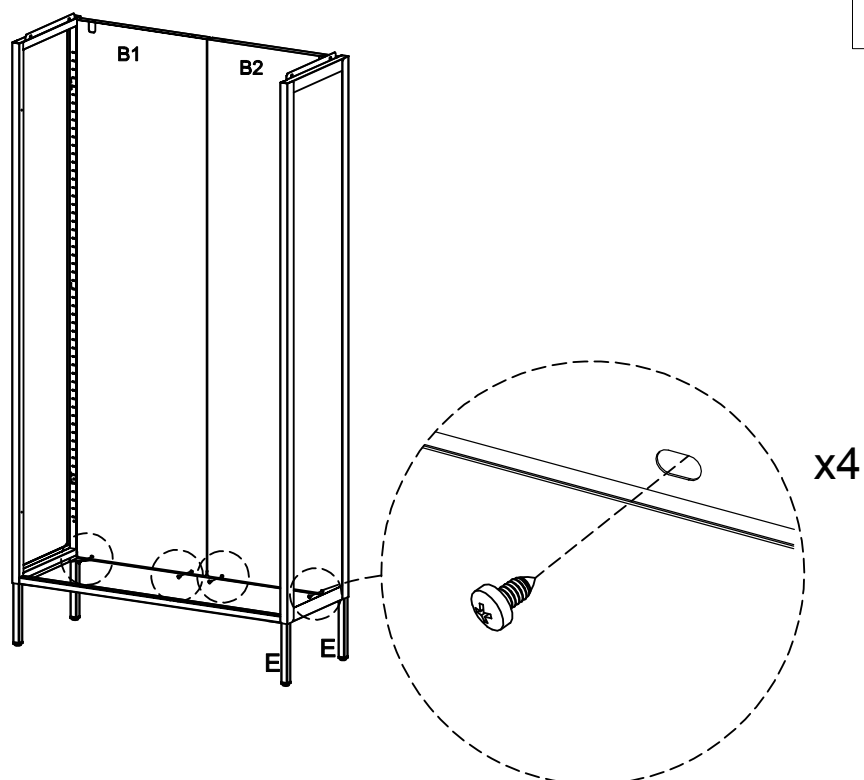



(5) - Attach (F) to (A) as below shown.

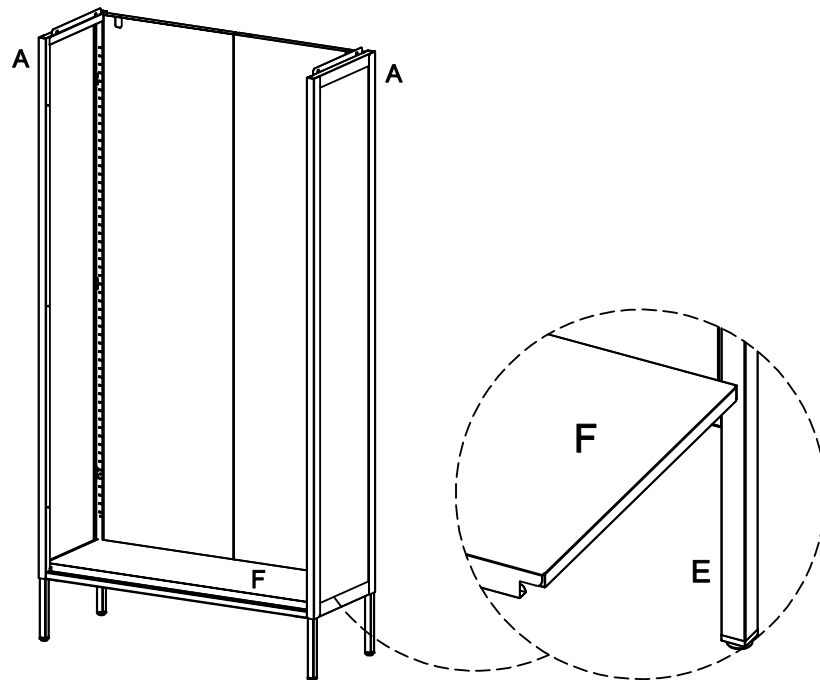



(6) - Attach (D) to (A) & (B1) & (B2) as below shown.

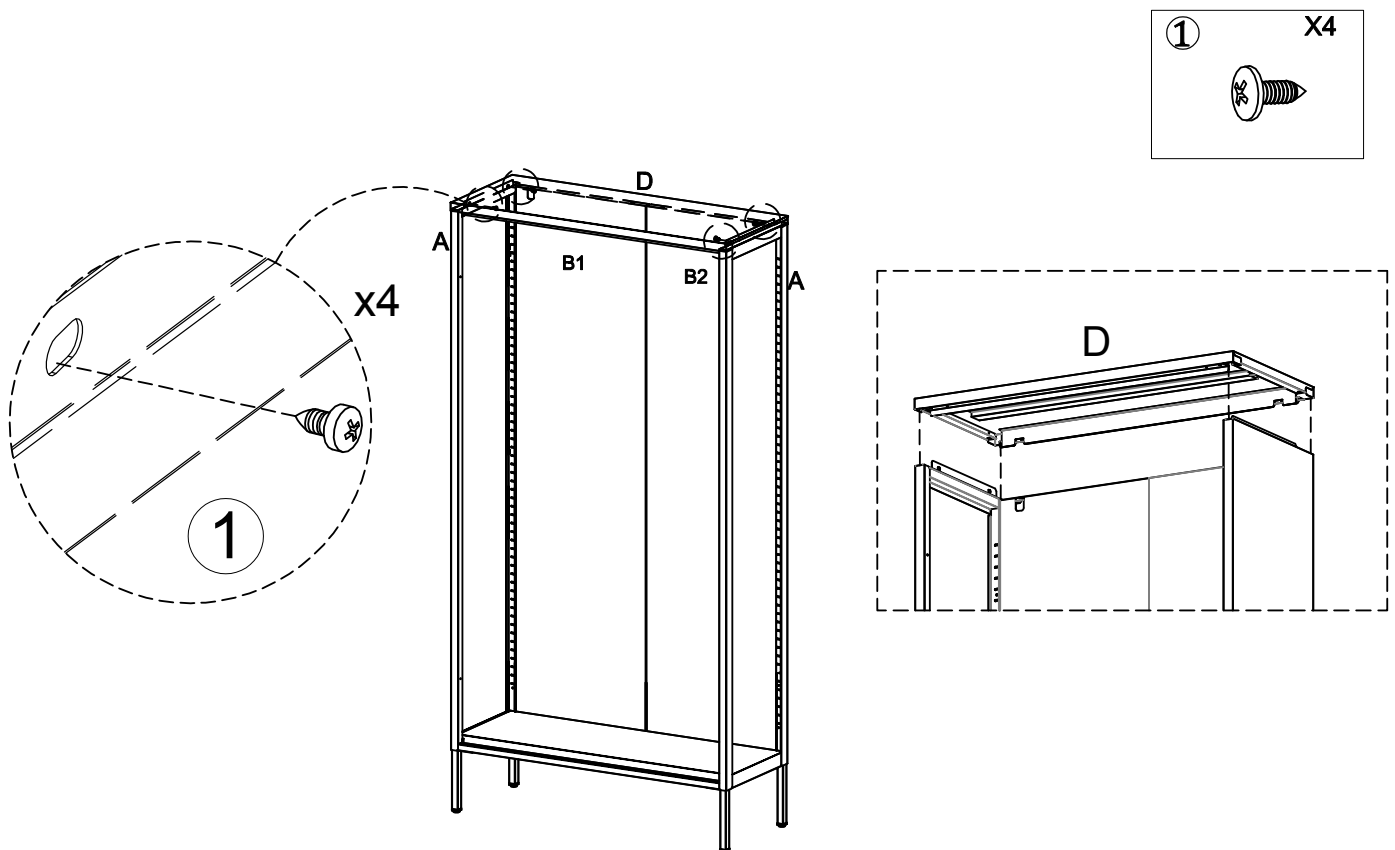


(7) - Attach (B1) & (B2) & (4) to (D) as below shown.

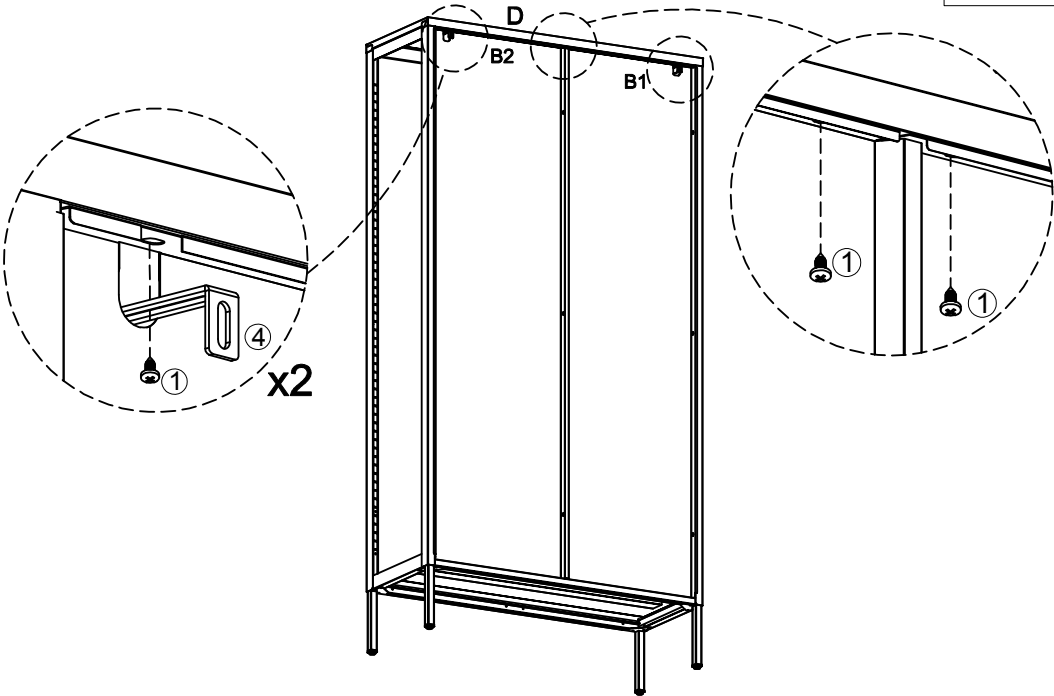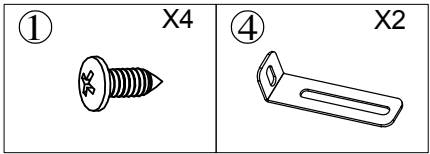


(8) - Attach (G) to pre-assembled unit as below shown.

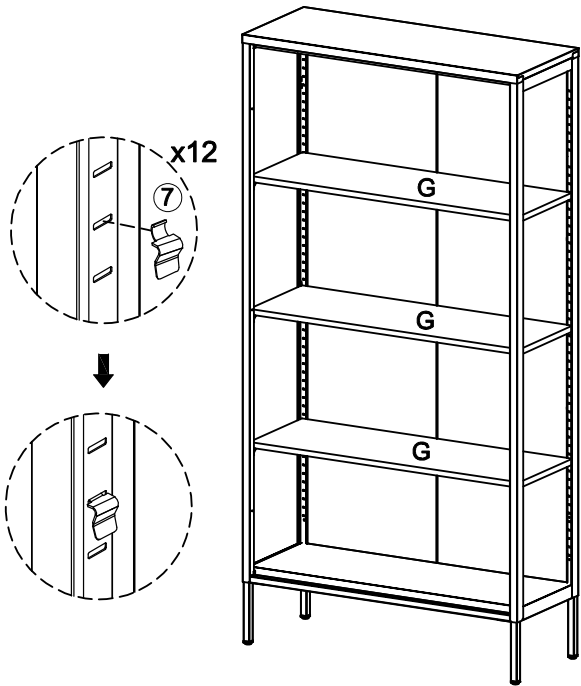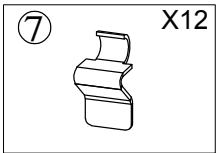


(9) - Attach (2) & (3) to pre-assembled unit as below shown.

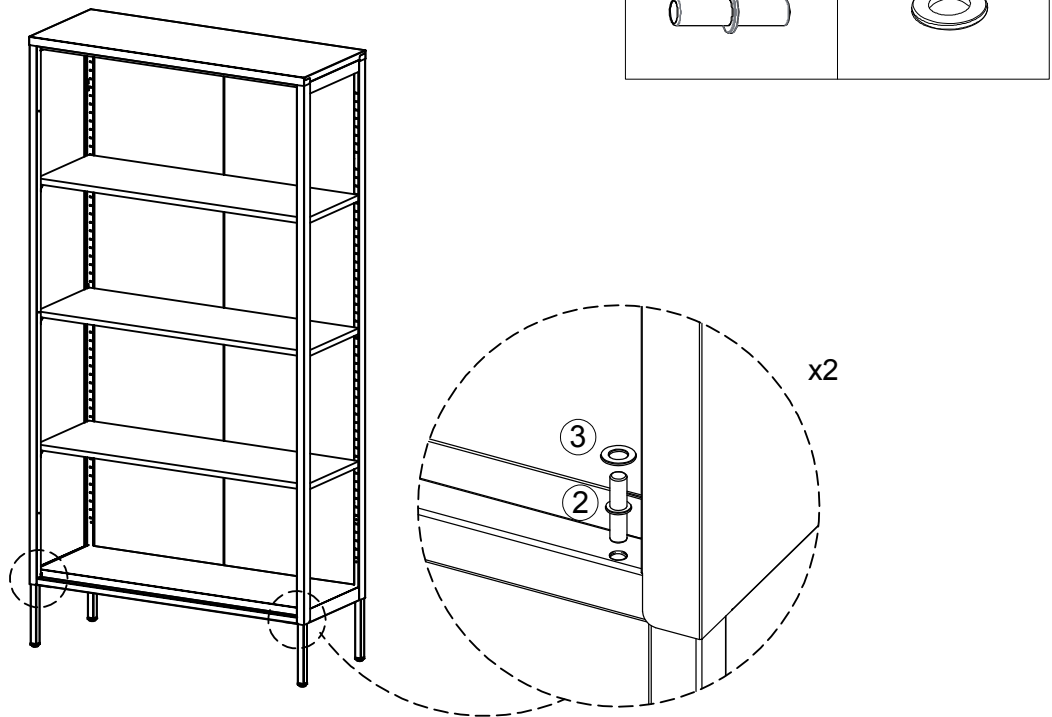


(10) - Attach (C1) & (C2) to pre-assembled unit as below shown.

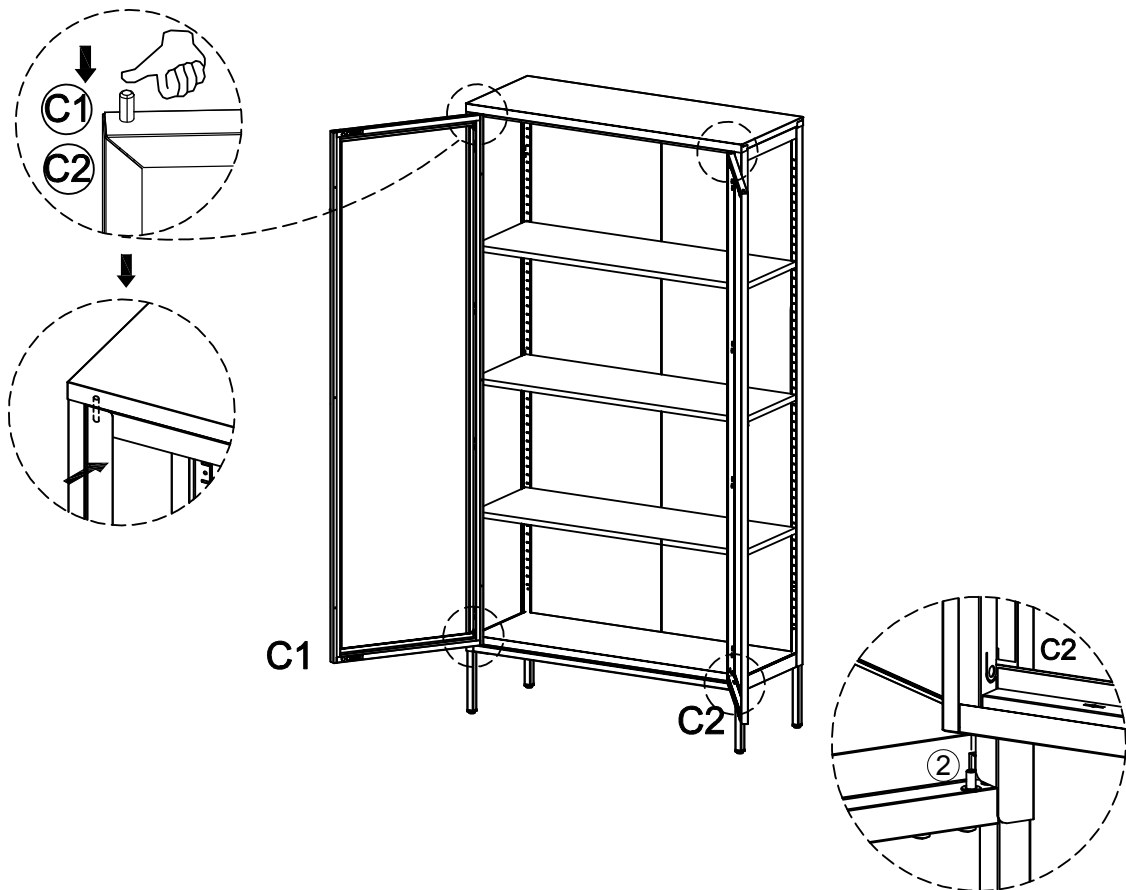


(11) - Attach (6) to (C1) & (C2) as below shown.

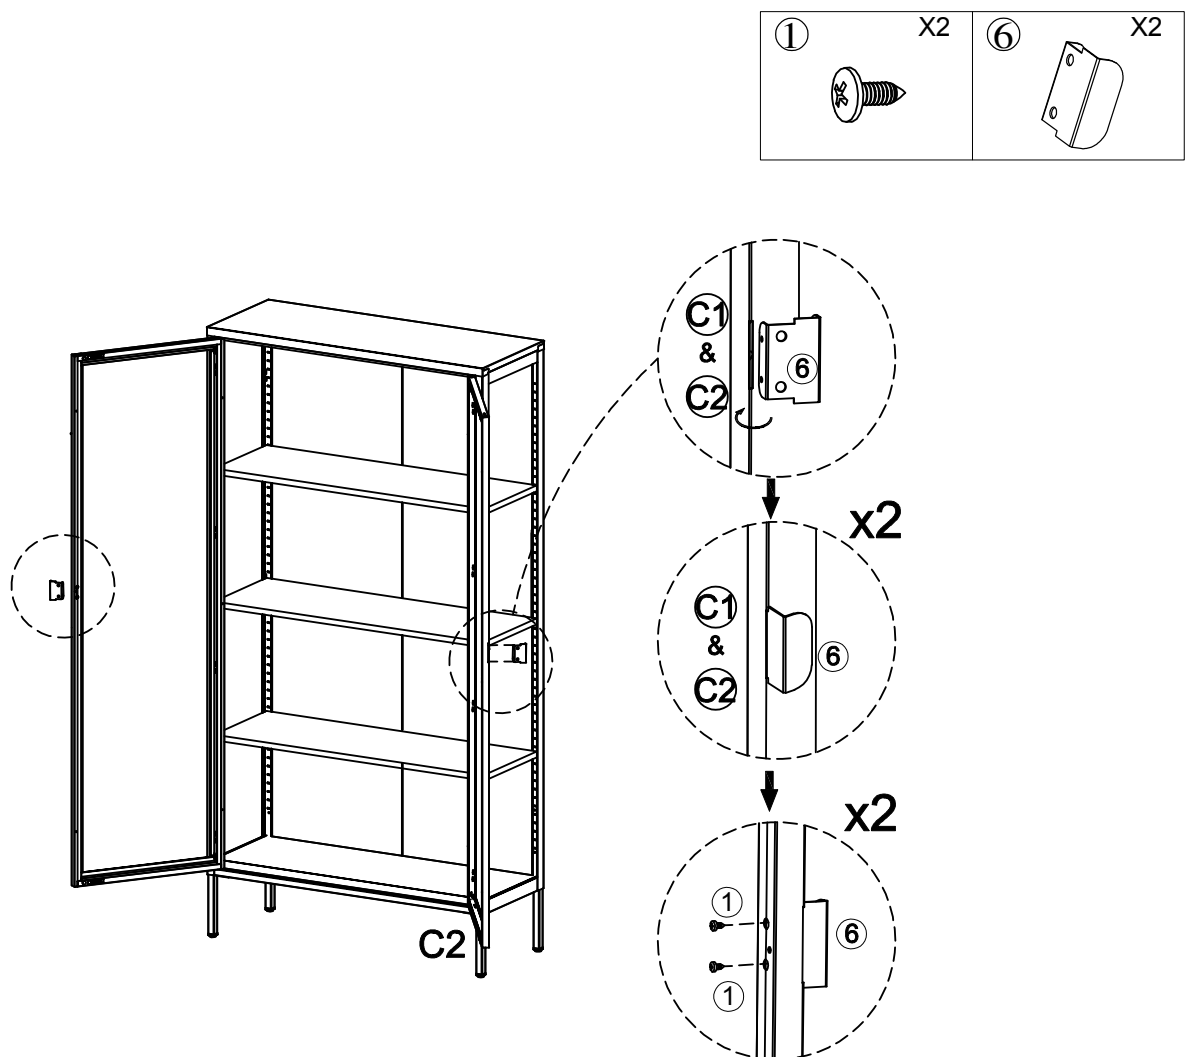

spare parts of glass buckle

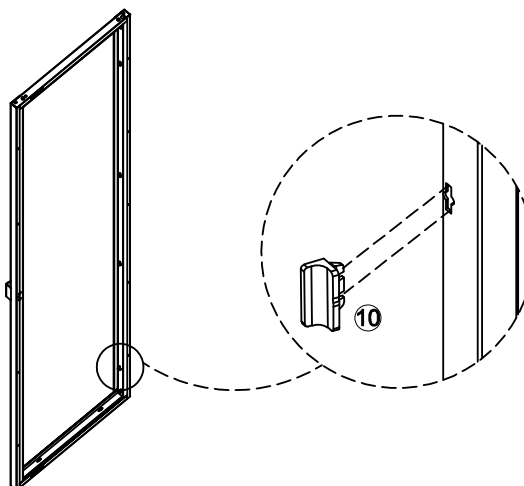

(12)

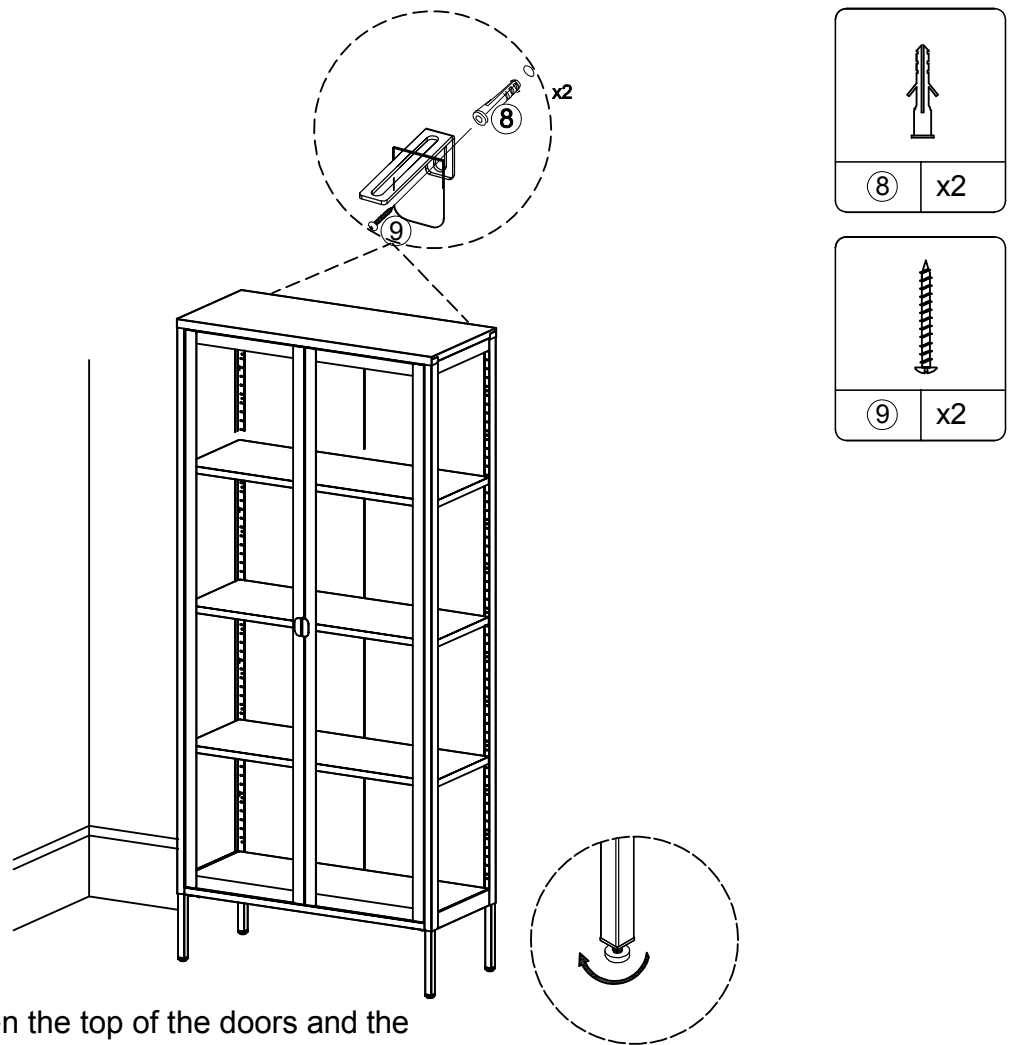

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

Open Concept

Great Job! You're done it

Don't forget to share how it looks in
your space and tag us on Instagram

@spacegeneralnz

www.spacegeneral.co.nz