

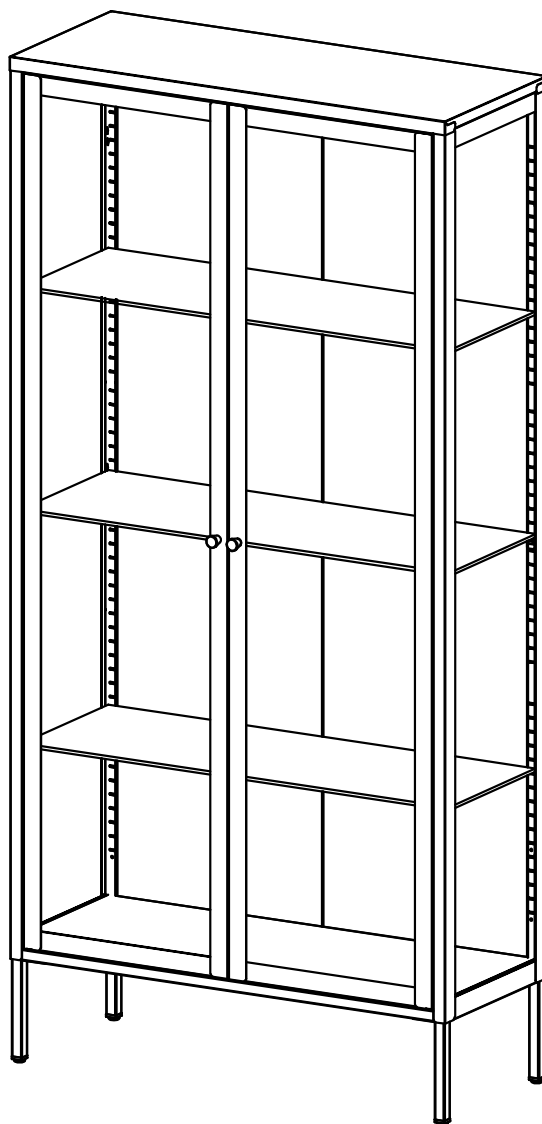


Open Concept


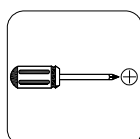


Thank you for purchase.
Instruction Manual







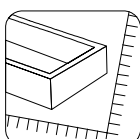








Important:

Please read through instructions carefully
Before assembly and keep for future reference.

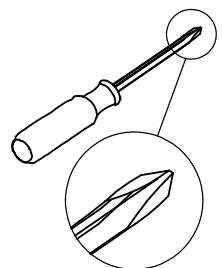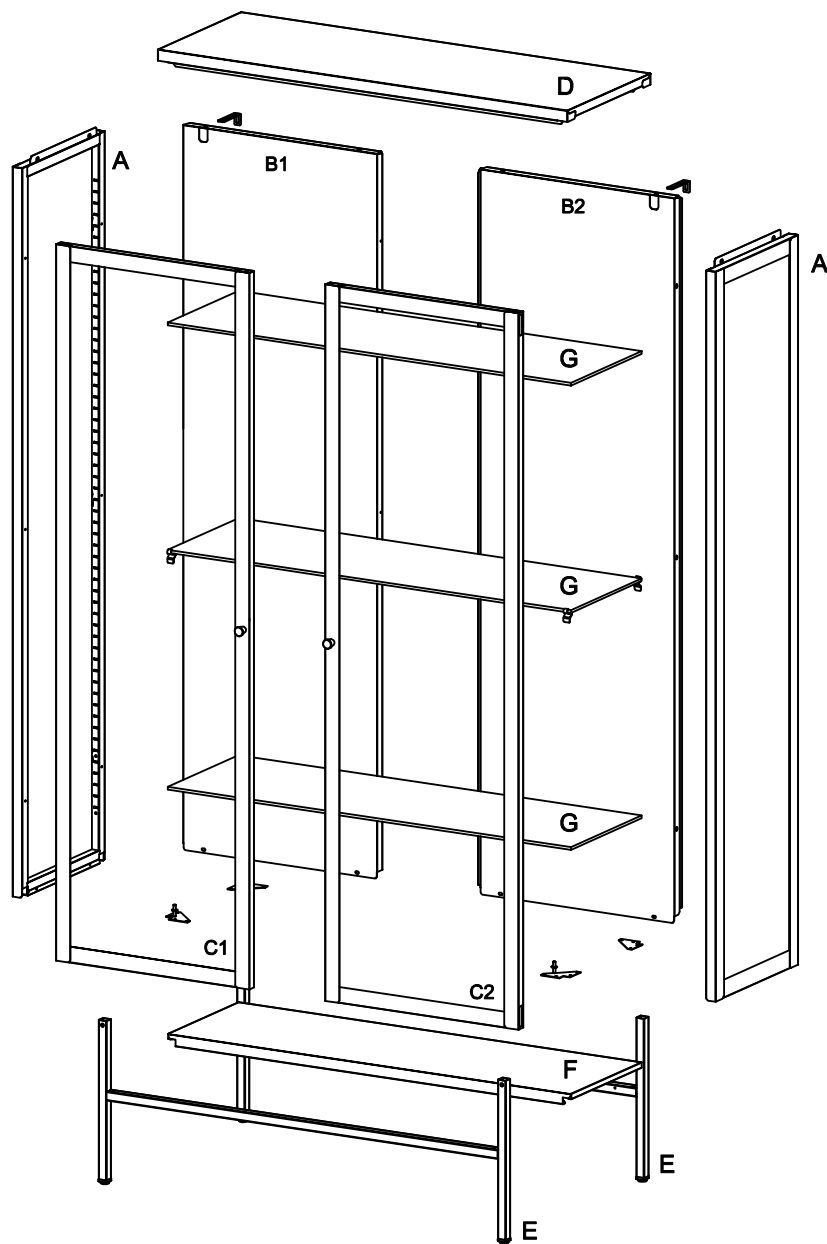


Hardware	Ctn No.	1
----------	---------	---

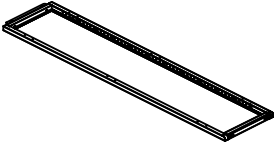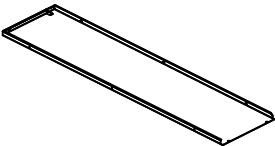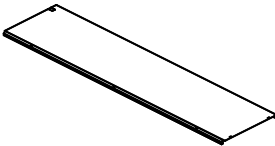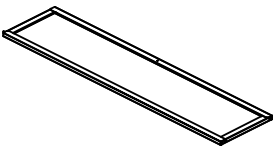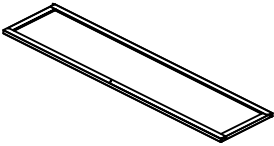
A x 2  1418x350x24mm	B1 x 1  1390x330x23mm	B2 x 1  1390x342x23mm	C1 x 1  1371x323.5x20mm
C2 x 1  1371x323.5x20mm	D x 1  701.6x352x38mm	E x 2  696.5x380x20mm	F x 1  686x301x25mm
G x 3  686x300x6mm			

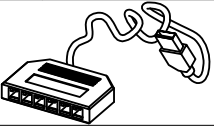① x37  Ø5*12mm	② x2  6*30mm	③ x4  Ø12*0.8mm	④ x2  Ø4*24mm	⑤ x4 
⑥ x2 	⑦ x12 	⑧ x2  15*76mm	⑨ x6 	⑩ x1 
⑪ x4 	⑫ x3 	⑬ x2  Ø8*38mm	⑭ x2  Ø4*38mm	

(1) - Attach (A) to (E) as below shown.


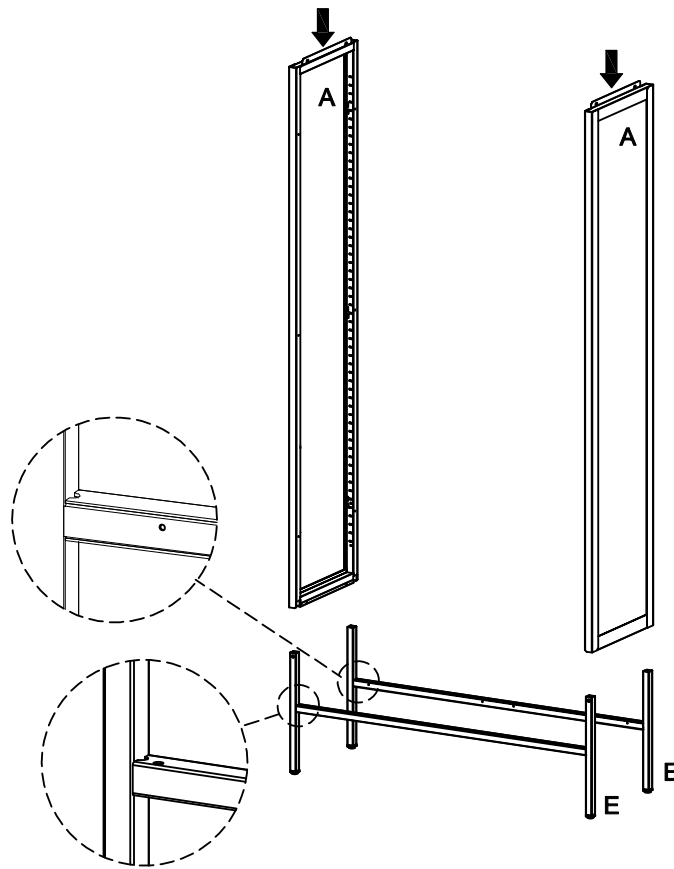


(2) - Attach (5) to (A) & (E) as below shown.


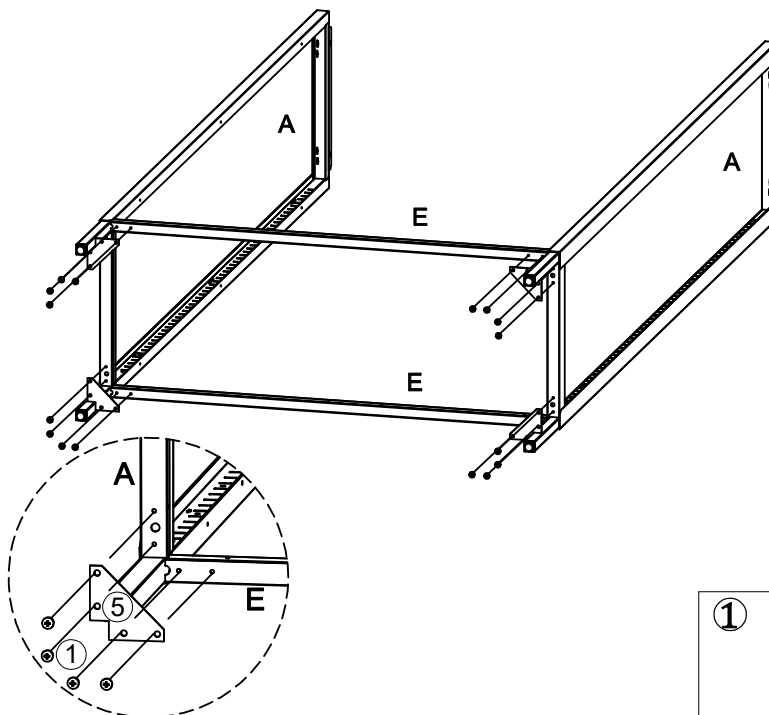


①	X16	⑤	X4
			


(3) - Attach (B1) & (B2) to (A) as below shown.

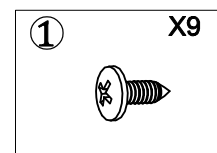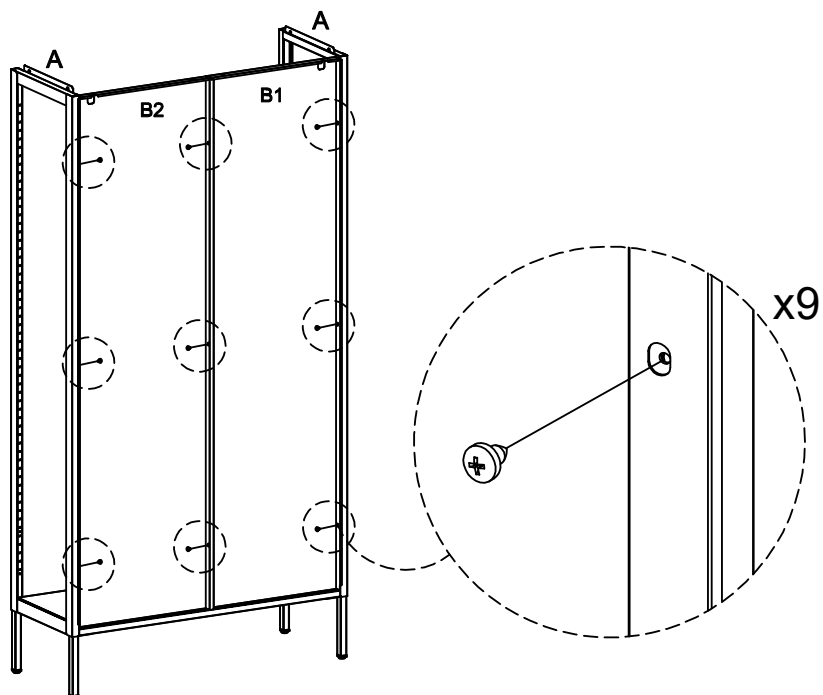


(4) - Attach (B1) & (B2) to (E) as below shown.

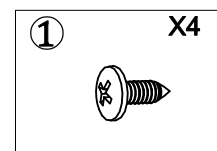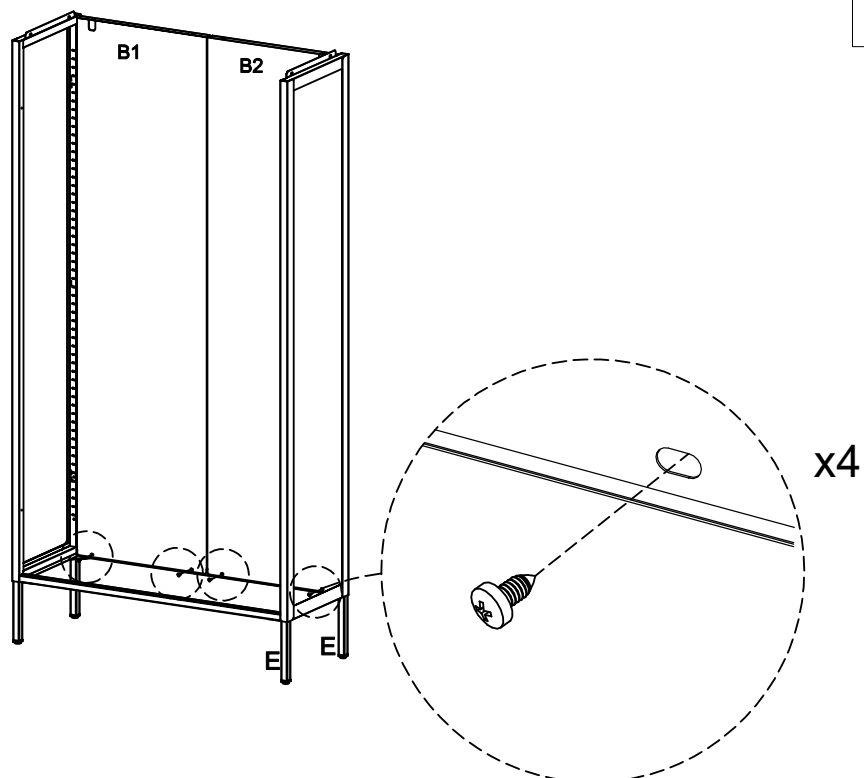



(5) - Attach (F) to (A) as below shown.

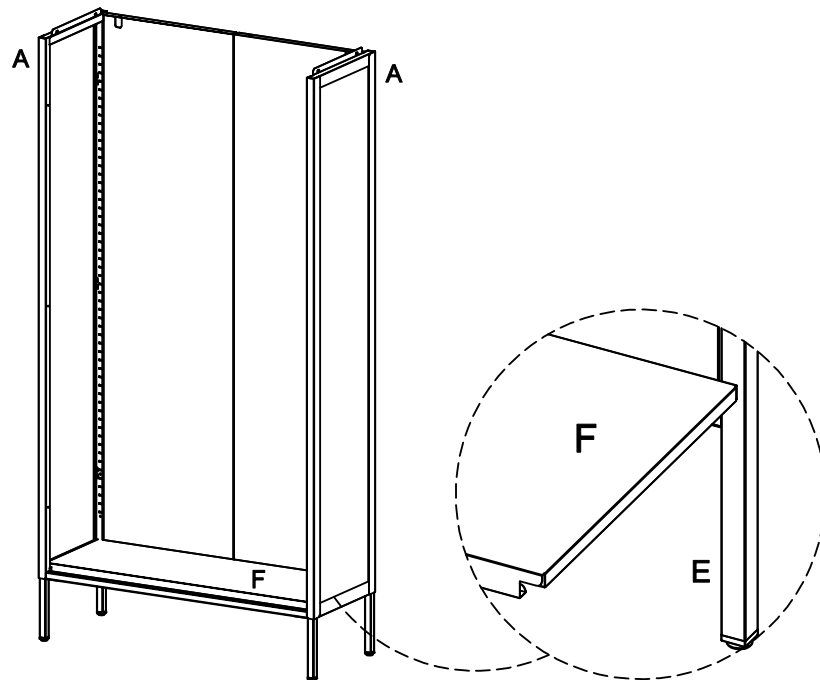



(6) - Attach (D) to (A) & (B1) & (B2) as below shown.

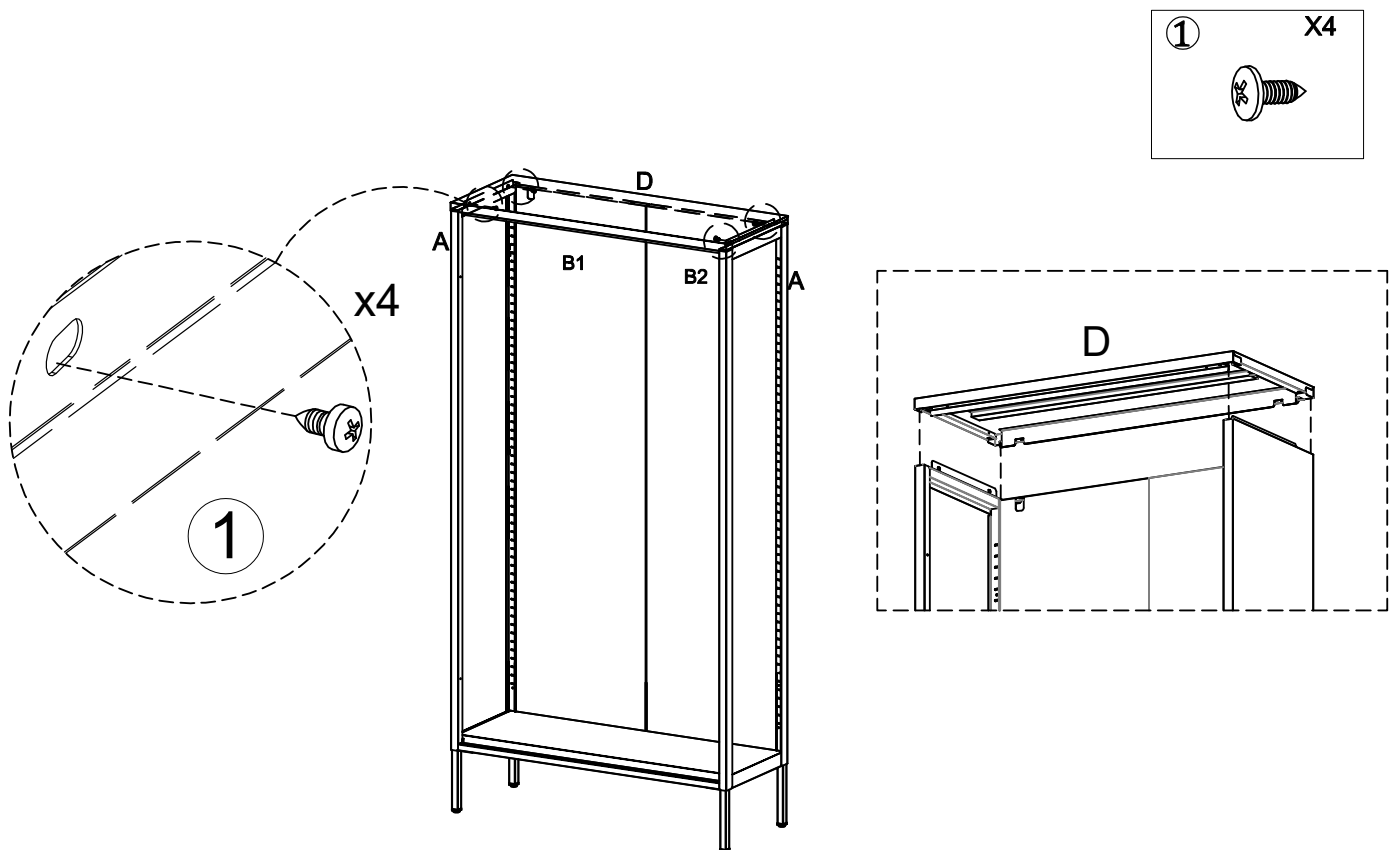



(7) - Attach (B1) & (B2) & (8) to (D) as below shown.

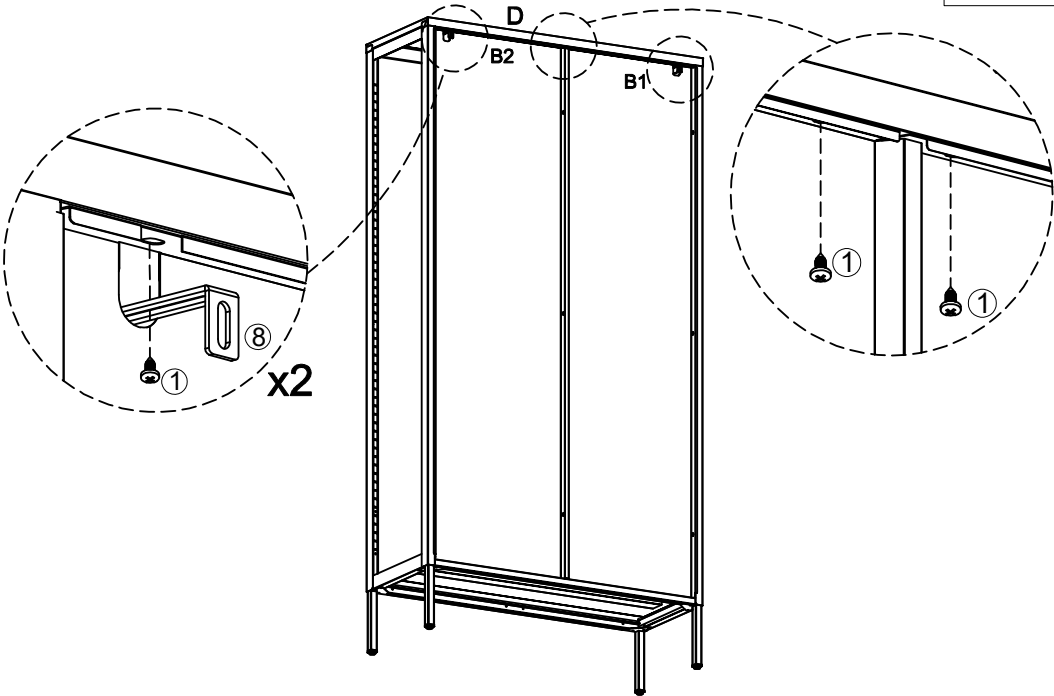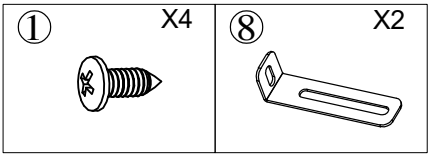



(8) - Attach (G) to pre-assembled unit as below shown.

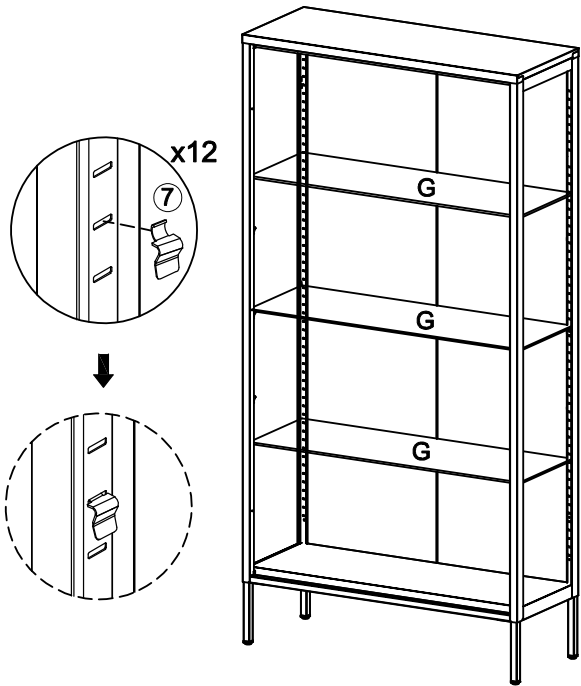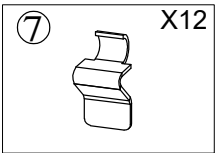



(9) - Attach (2) & (3) to pre-assembled unit as below shown.

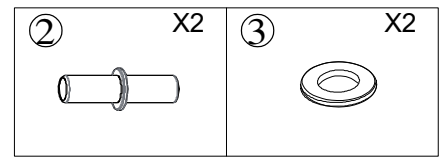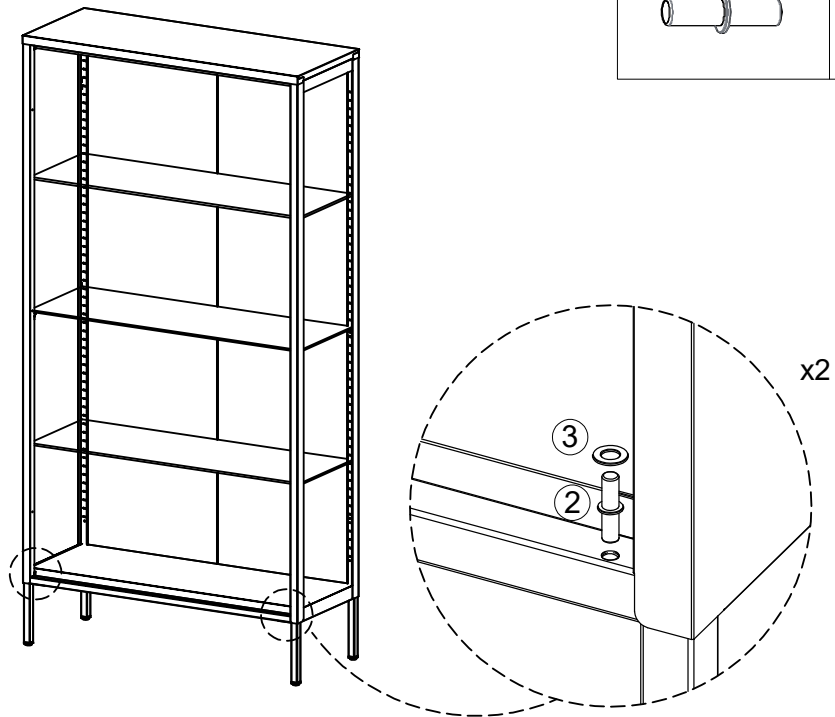







(10) - Attach (6) to (C1) & (C2) as below shown.

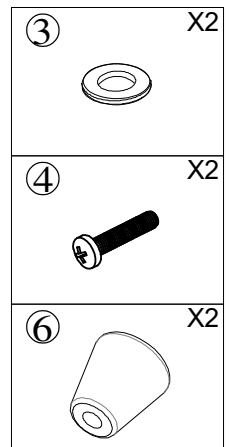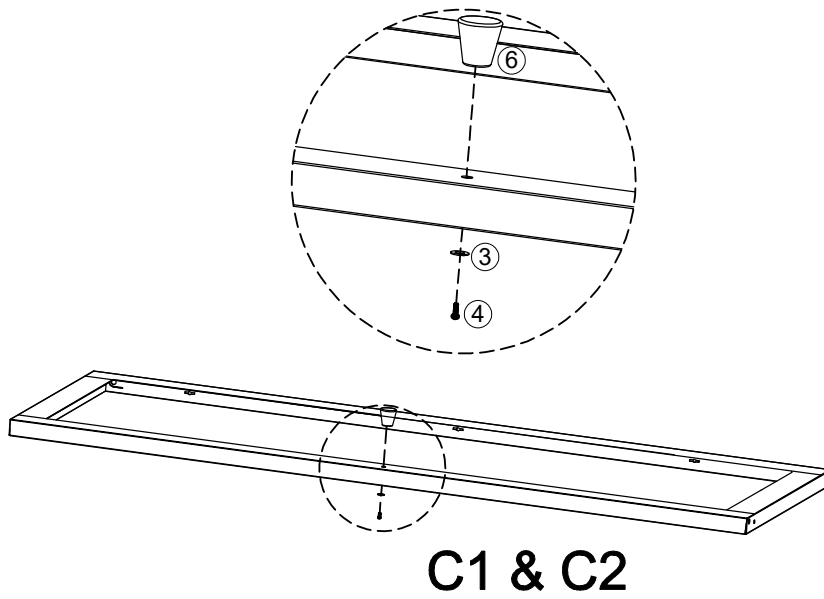








(11) - Attach (C1) & (C2) to pre-assembled unit as below shown.

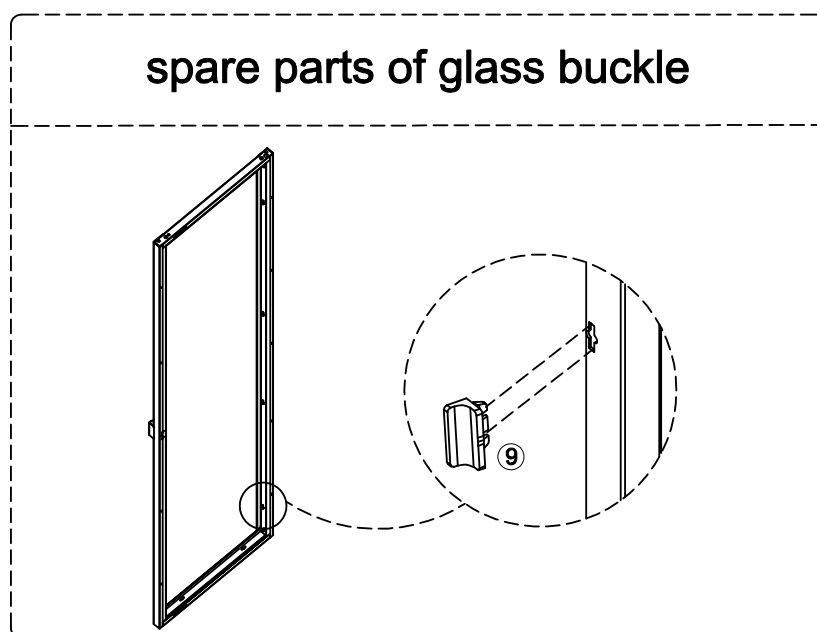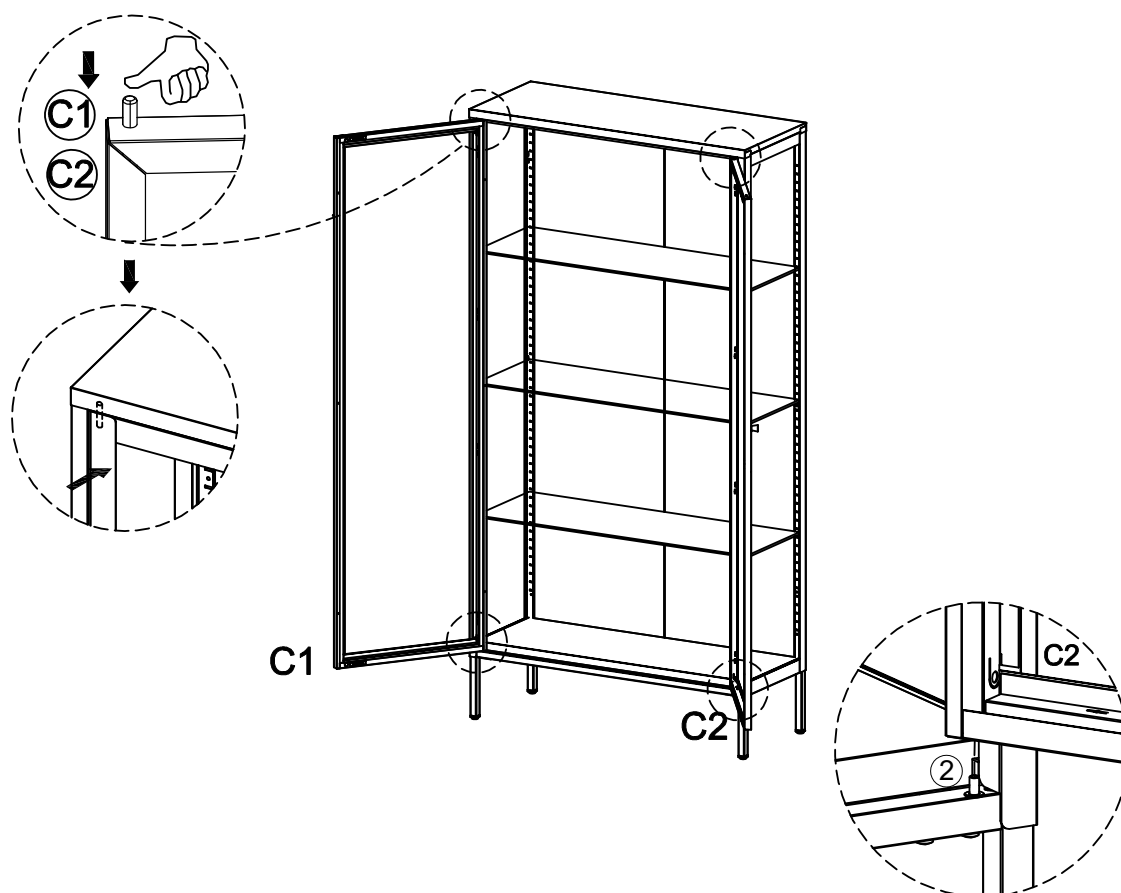



(12) - Attach (11) to (B) as below shown.

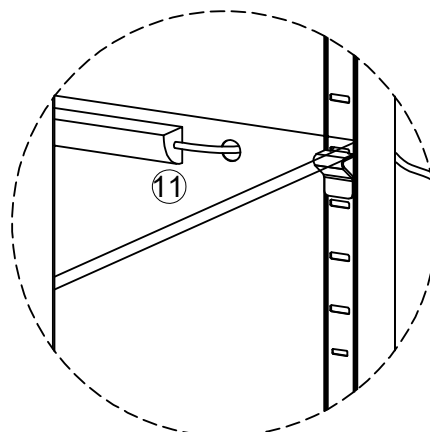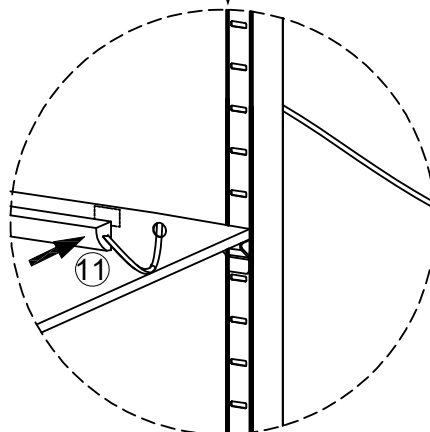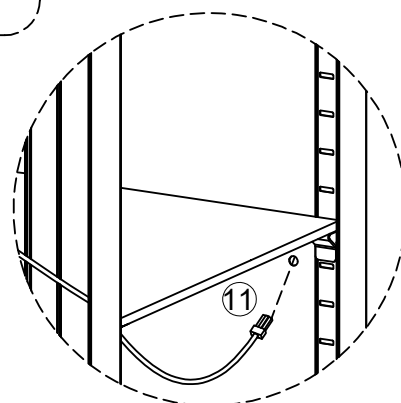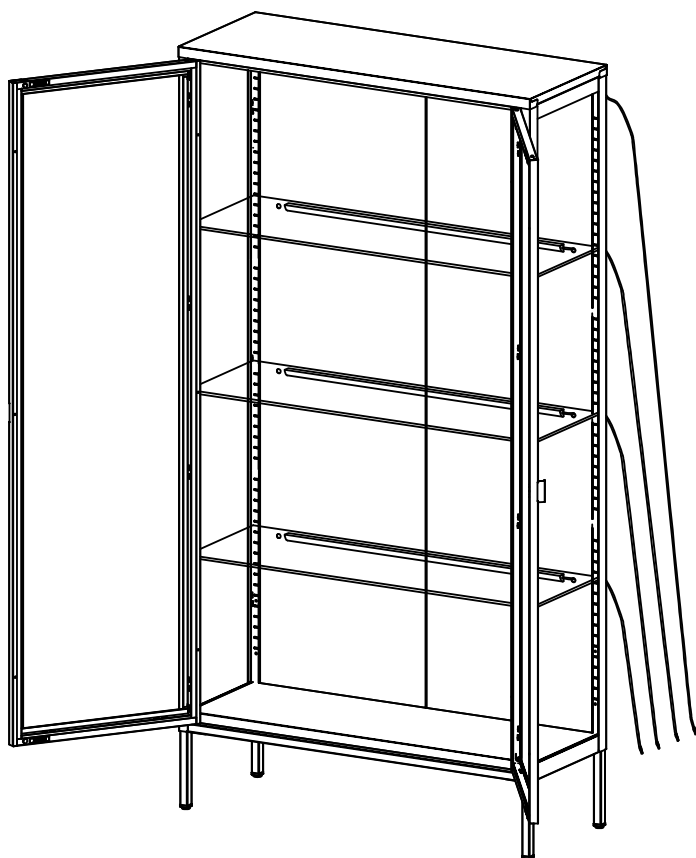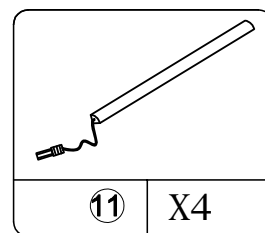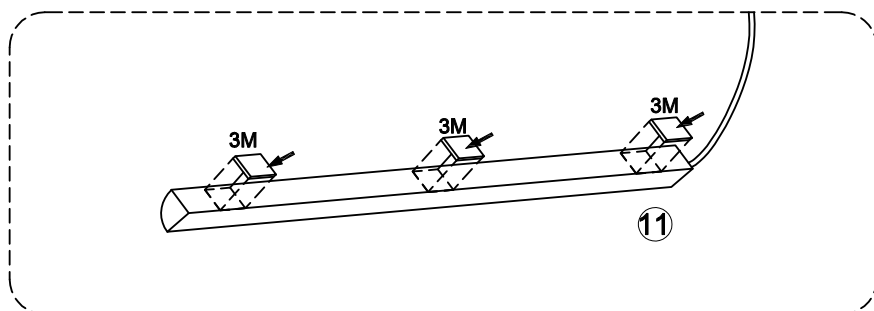

(13)

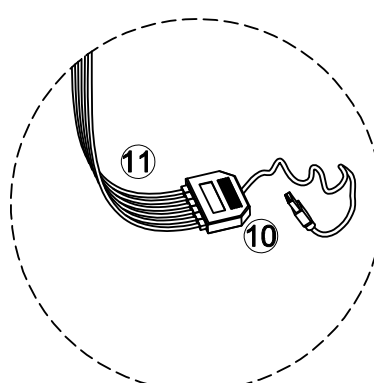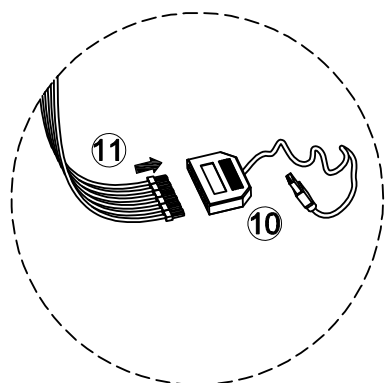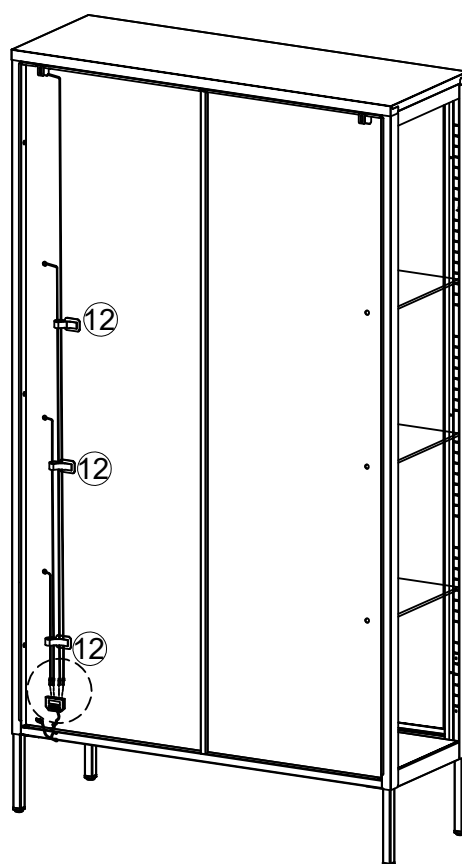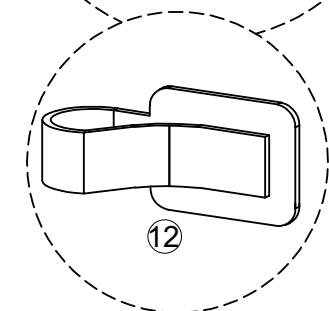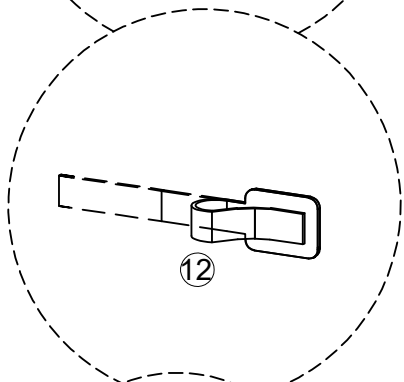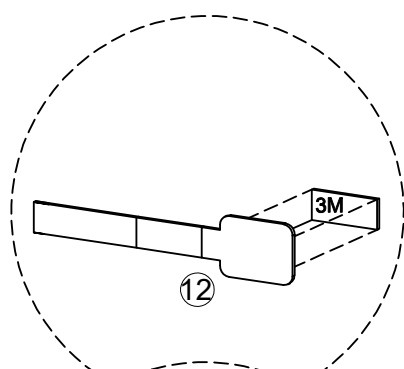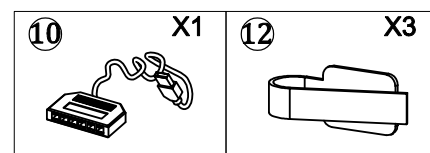

(14)

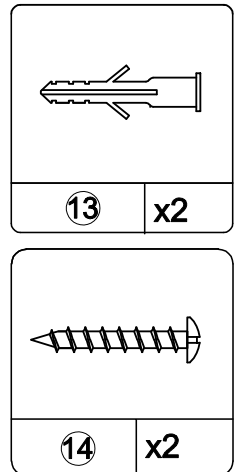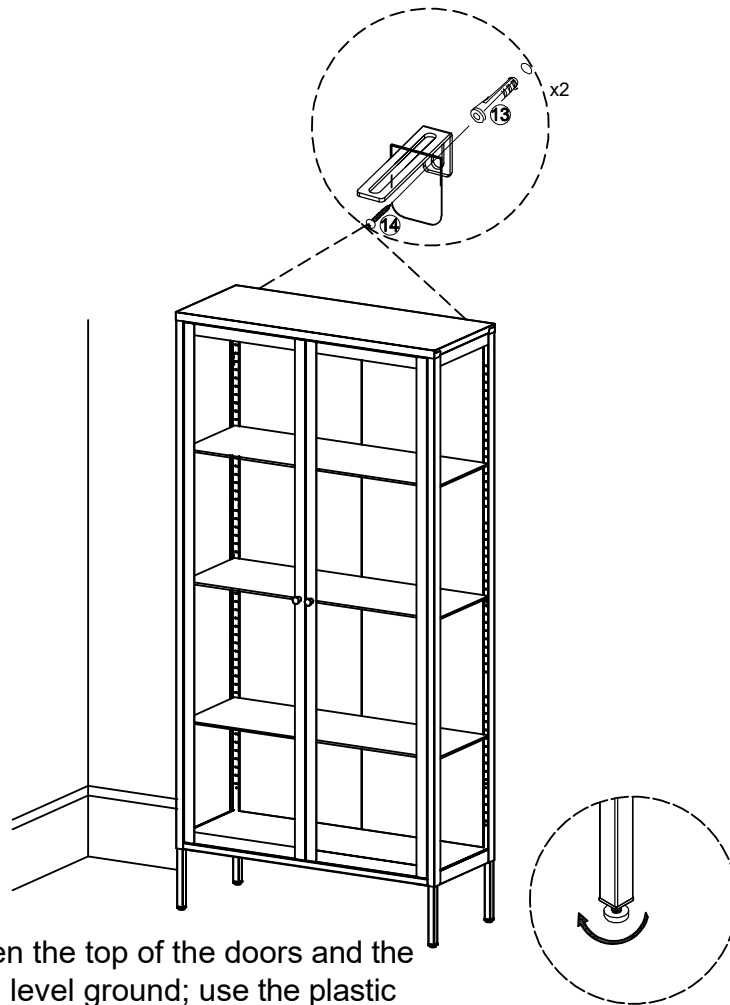

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

Open Concept

Great Job! You're done it

Don't forget to share how it looks in
your space and tag us on Instagram

@spacegeneralnz