

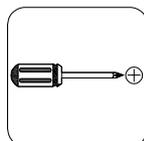
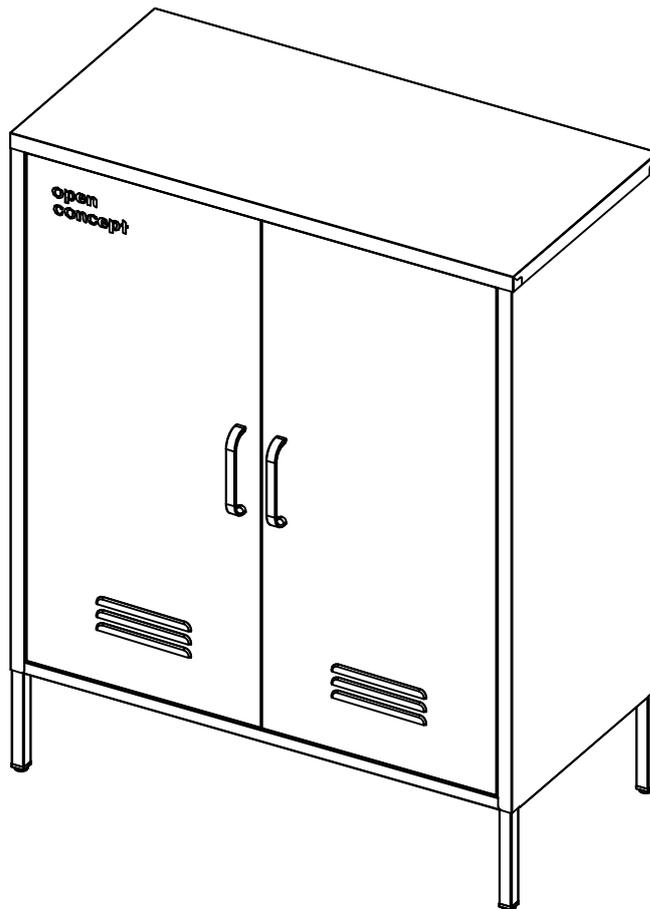


open concept









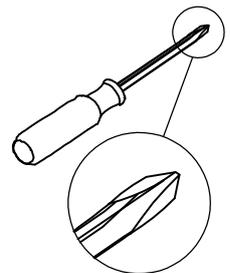











Important:

Please read through instructions carefully
Before assembly and keep for future reference.

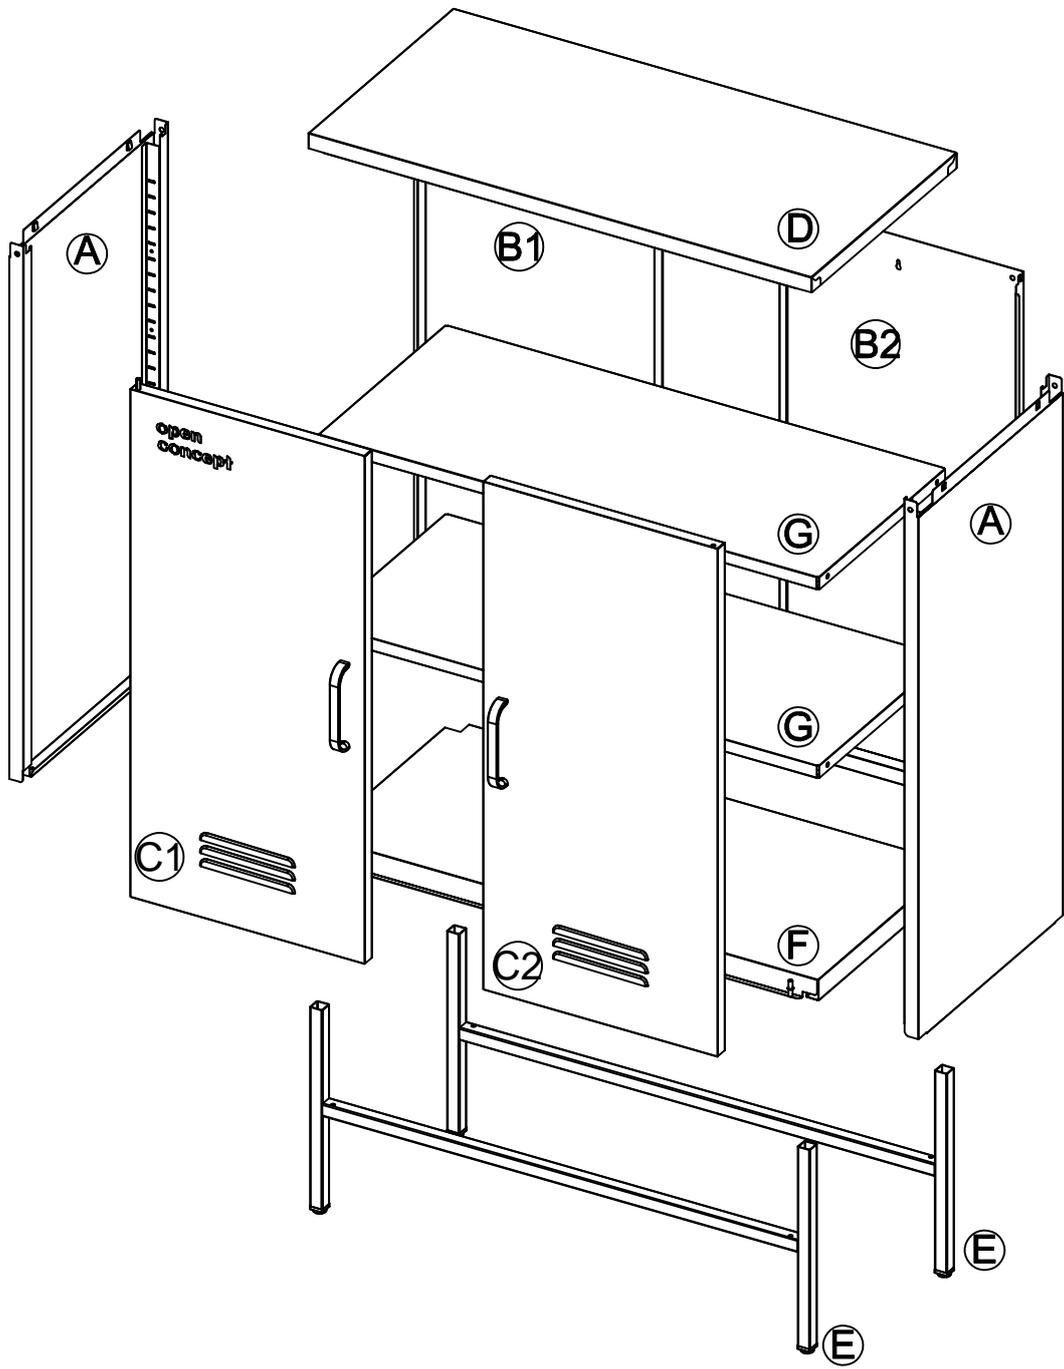


Hardware	Ctn No.	1
----------	---------	---

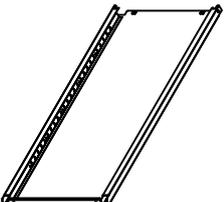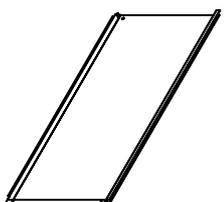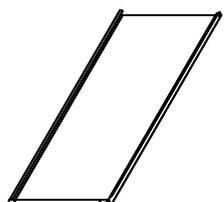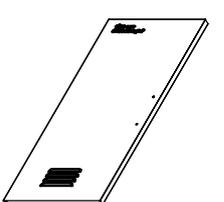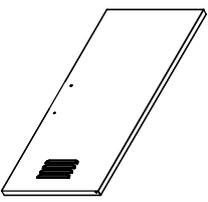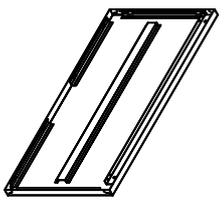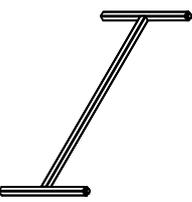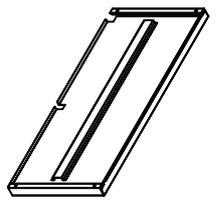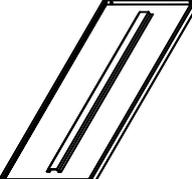
A x 2  864x400x23mm	B1 x 1  843x377x23mm	B2 x 1  843x377x23mm	C1 x 1  816x375x20mm
C2 x 1  816x375x20mm	D x 1  801x402x25mm	E x 2  798x320x20mm	F x 1  797x375x35mm
G x 2  797x352x20mm			

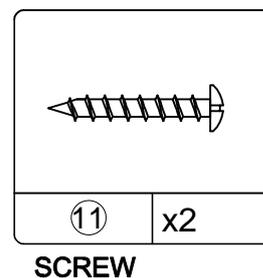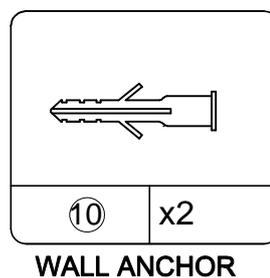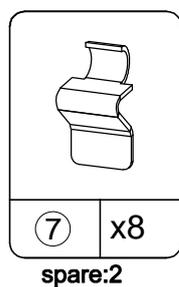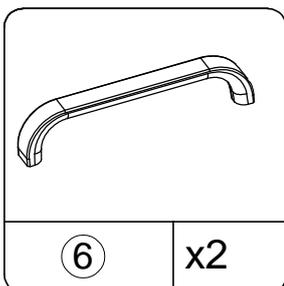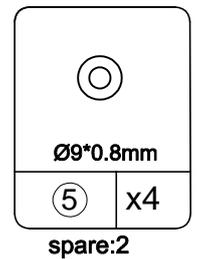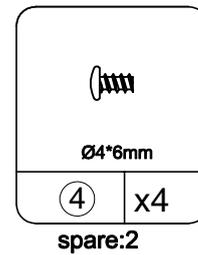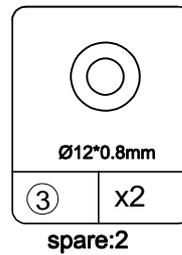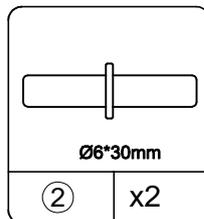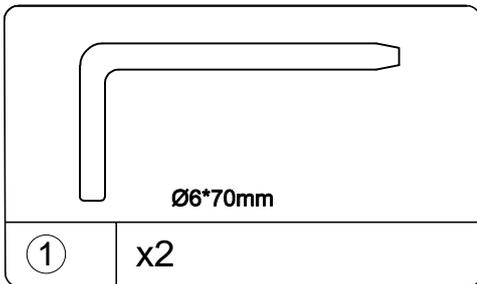


(1) - Attach (A) to (E) as below shown.

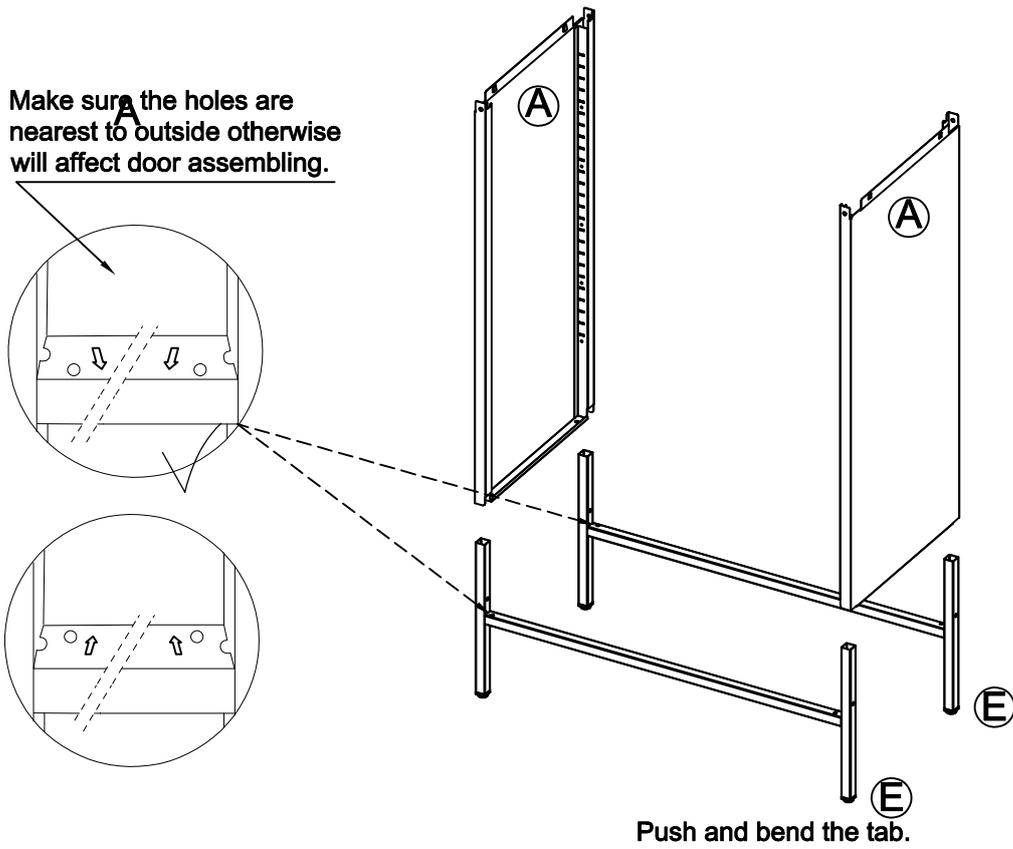


(2) - Attach (B1) & (B2) to (A) & (E) as below shown.

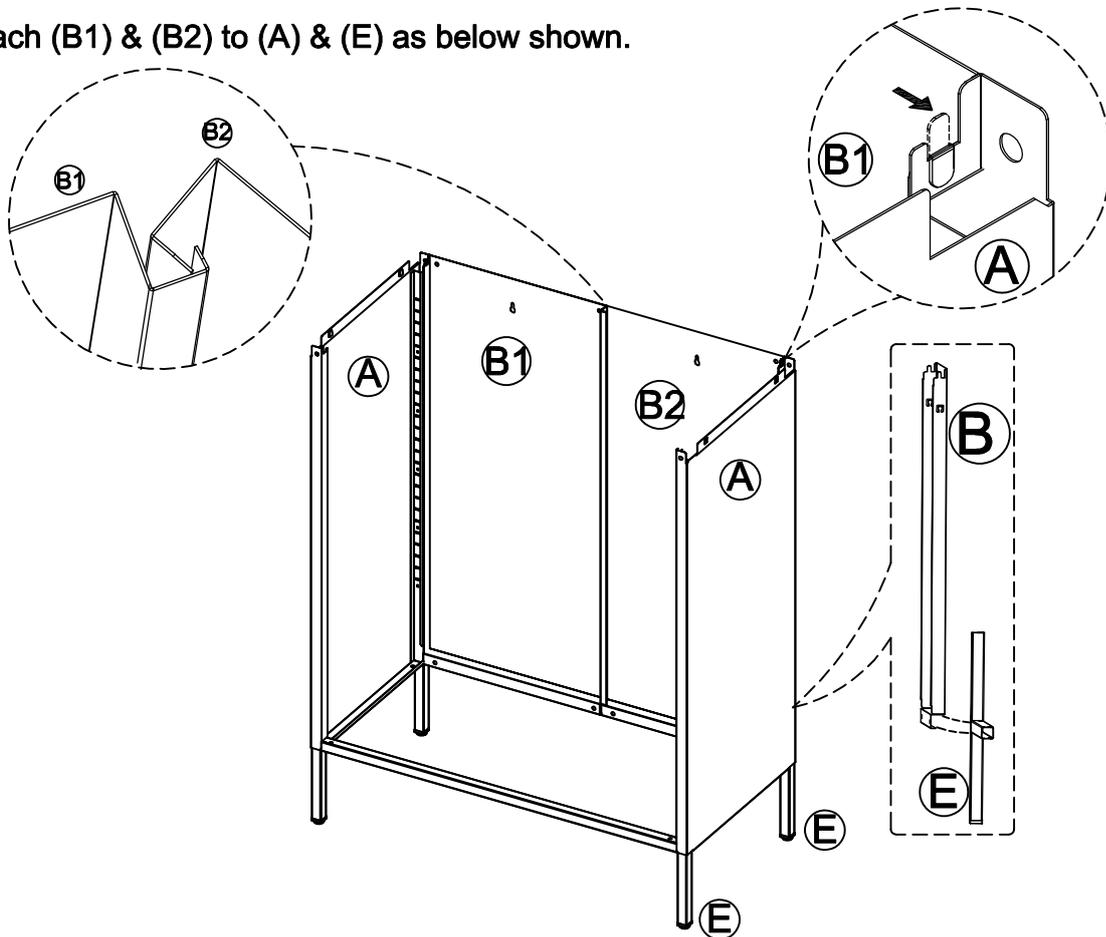



(3) - Attach (F) to (A) & (B) & (E) as below shown.

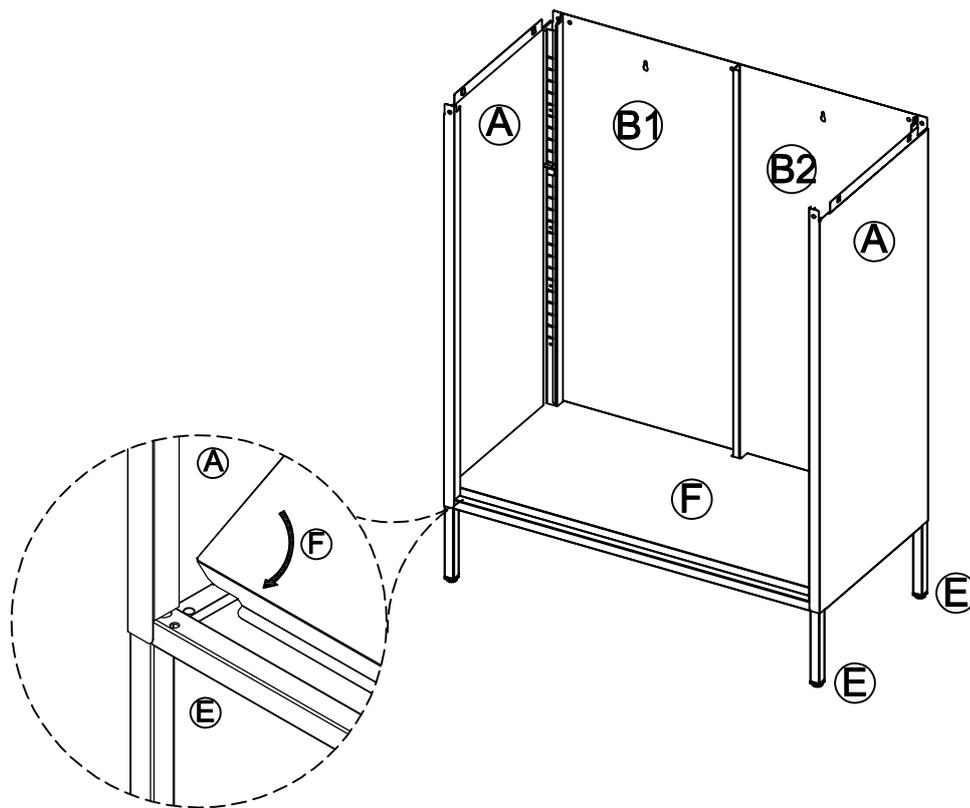




(4) - Attach (D) to (A) & (B) as below shown.

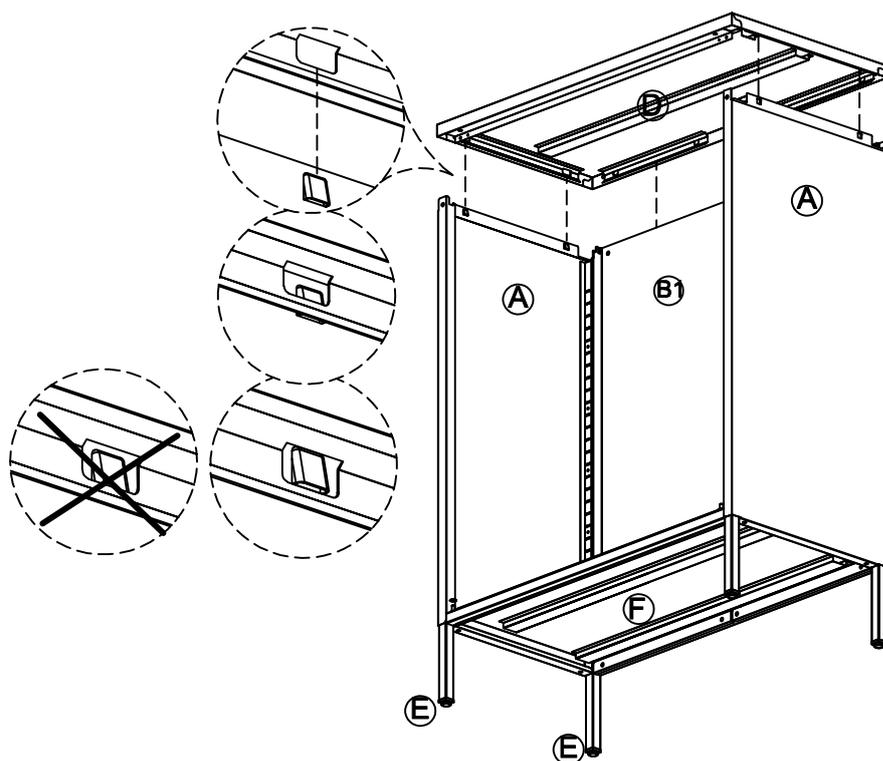


(5) - Attach (G) to pre-assembled unit as below shown.

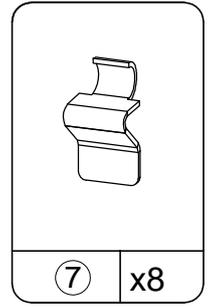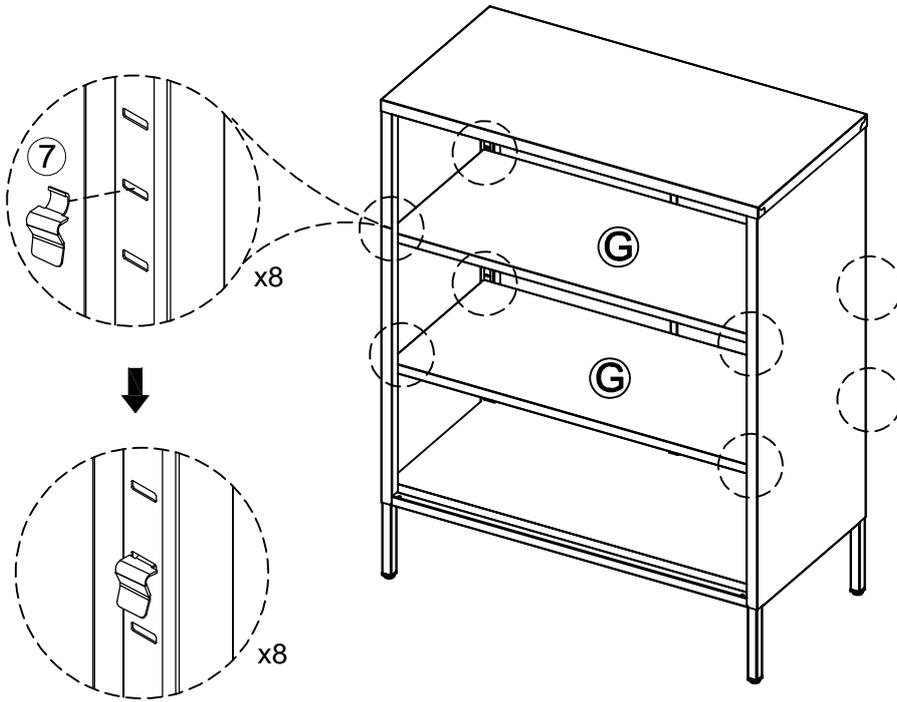

(6) - Attach (2) & (3) to pre-assembled unit as below shown.


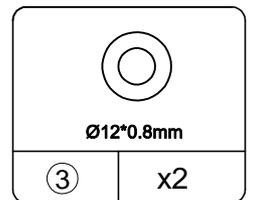
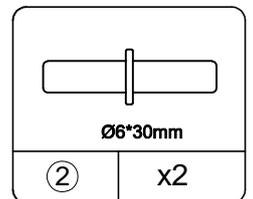
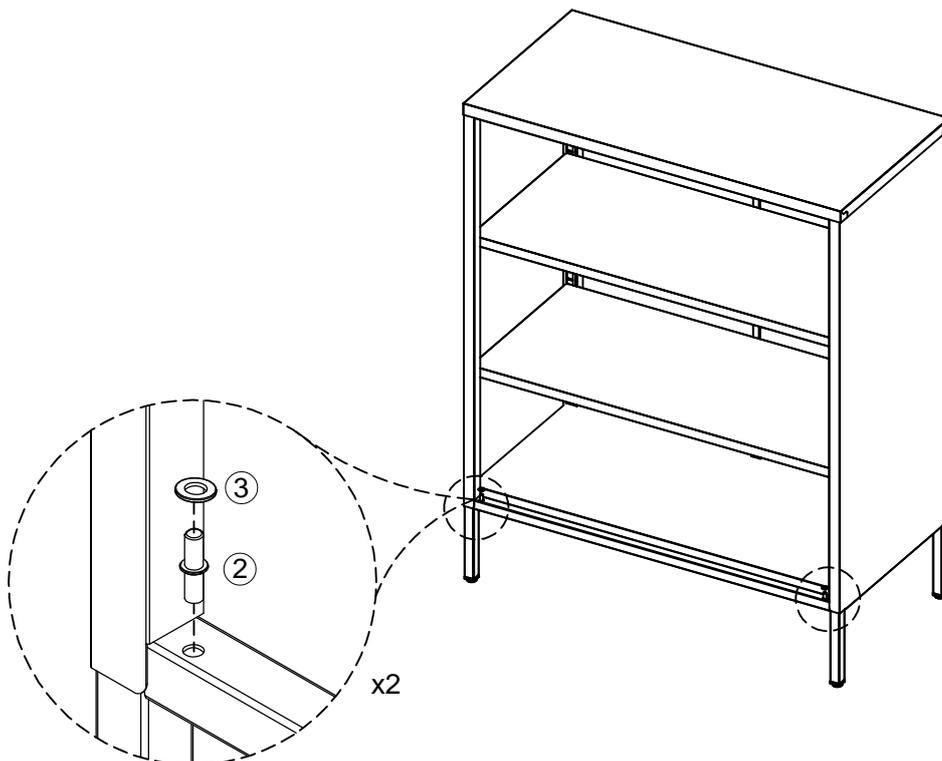


(7) - Attach (C1) & (C2) to pre-assembled unit as below shown.



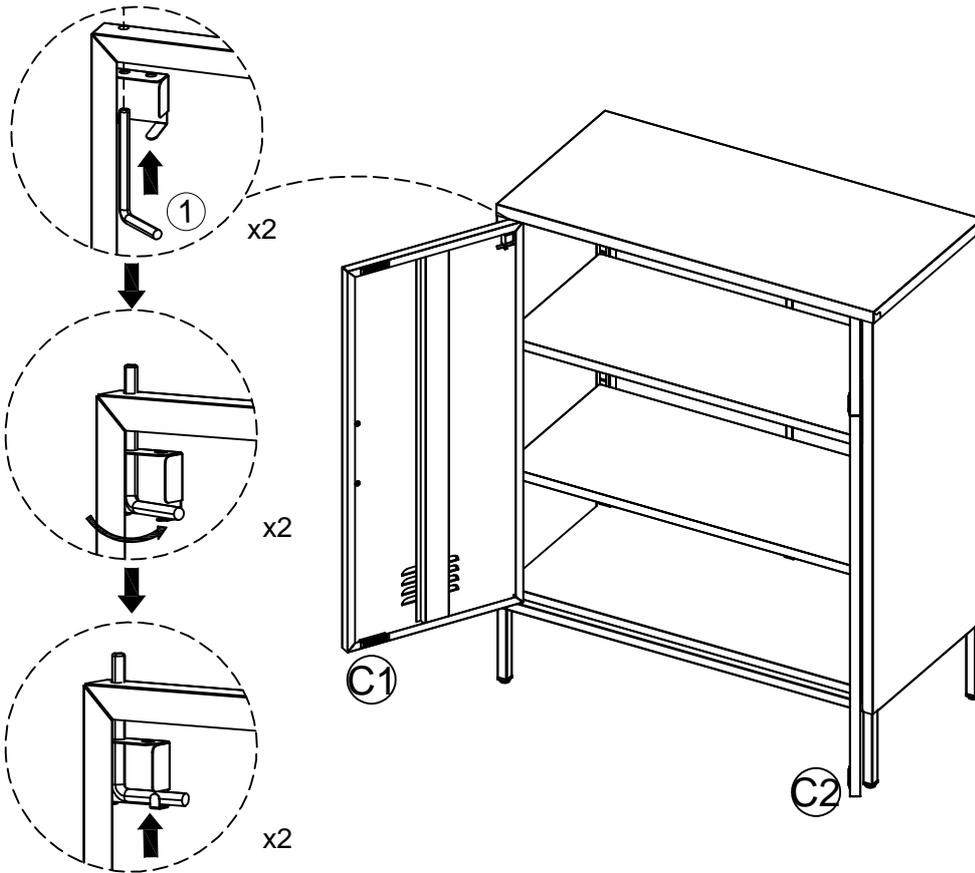


Push and bend the tab.


(8) - Attach (6) to (C1) & (C2) as below shown.

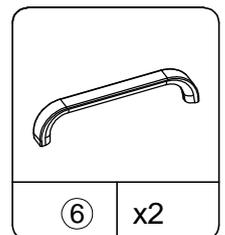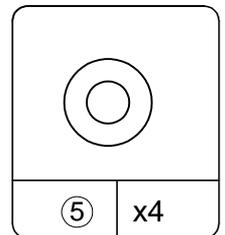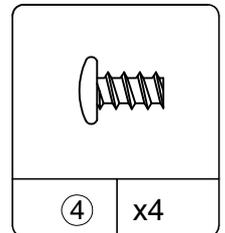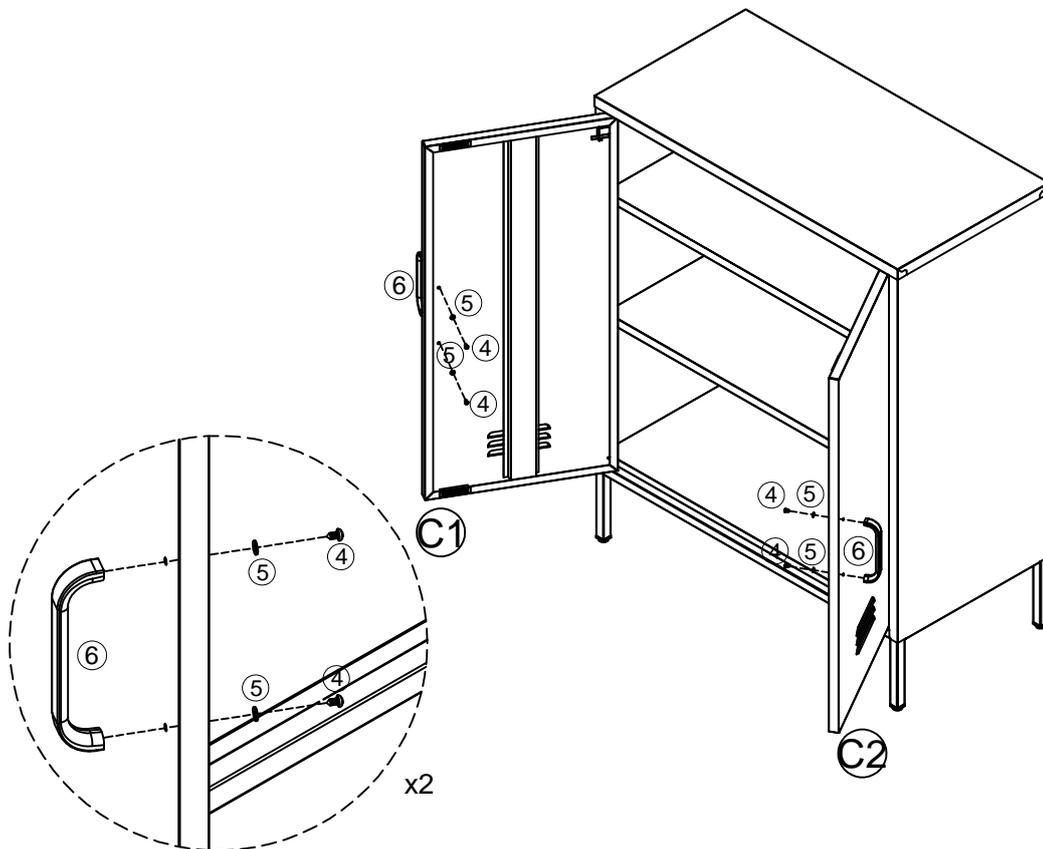

(9)

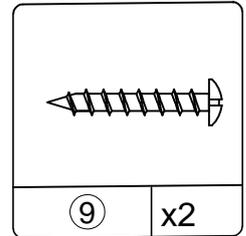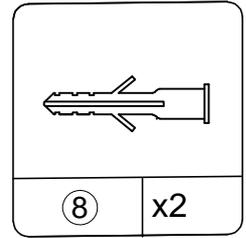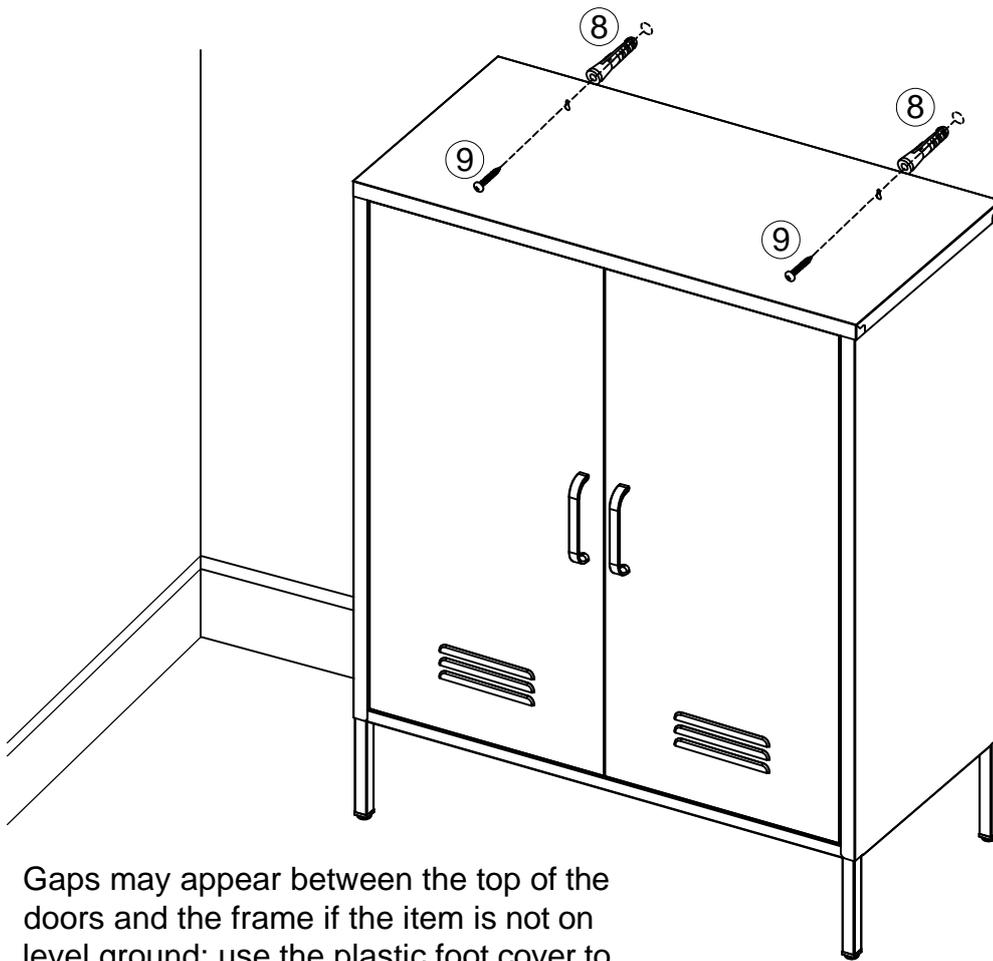

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

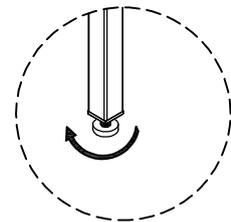

Open Concept

Great Job! You're done it

Don't forget to share how it looks in your space and tag us on Instagram

@spacegeneralnz