

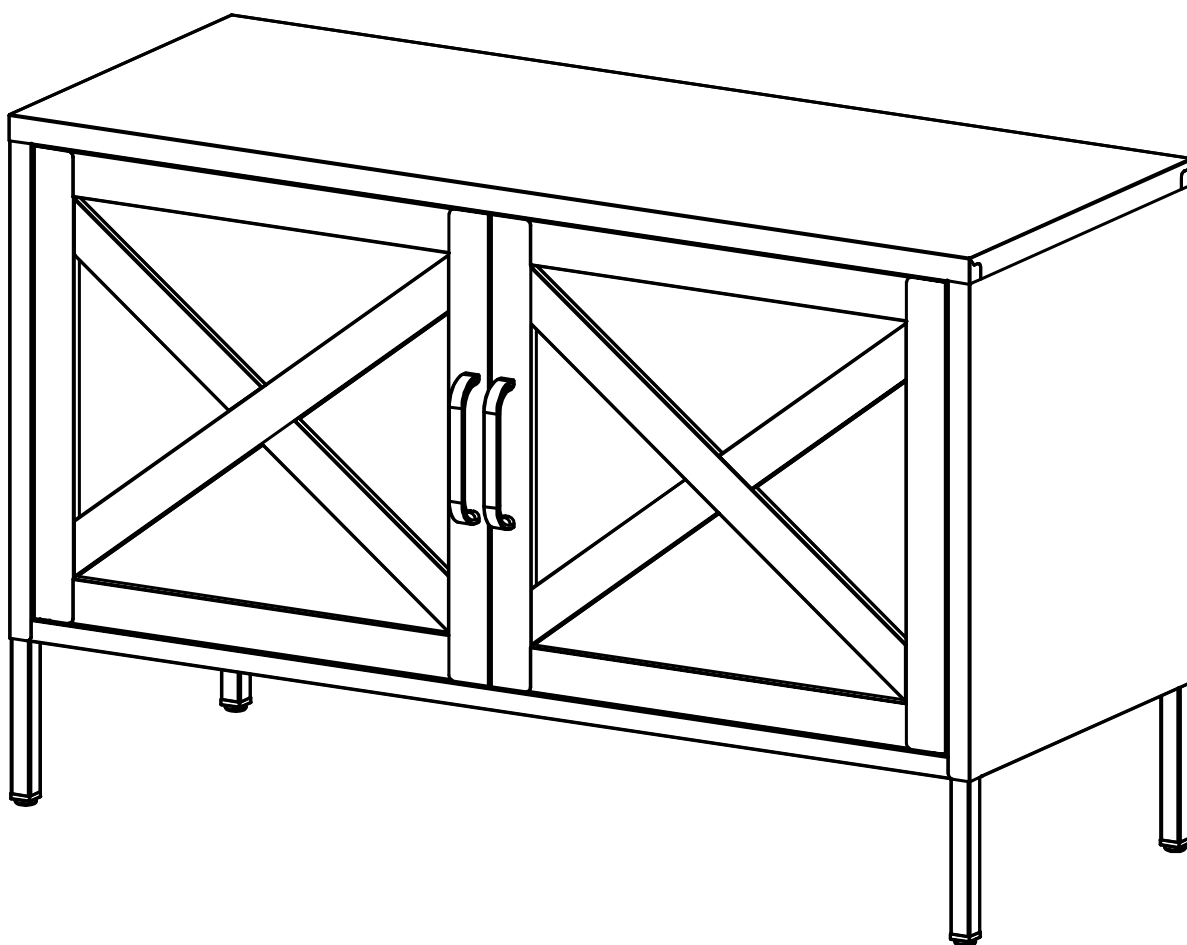


Open Concept


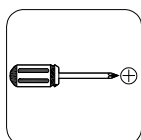


Thank you for purchase.
Instruction Manual









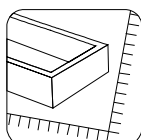





Important:

Please read through instructions carefully
Before assembly and keep for future reference.

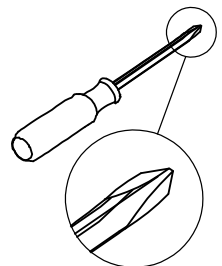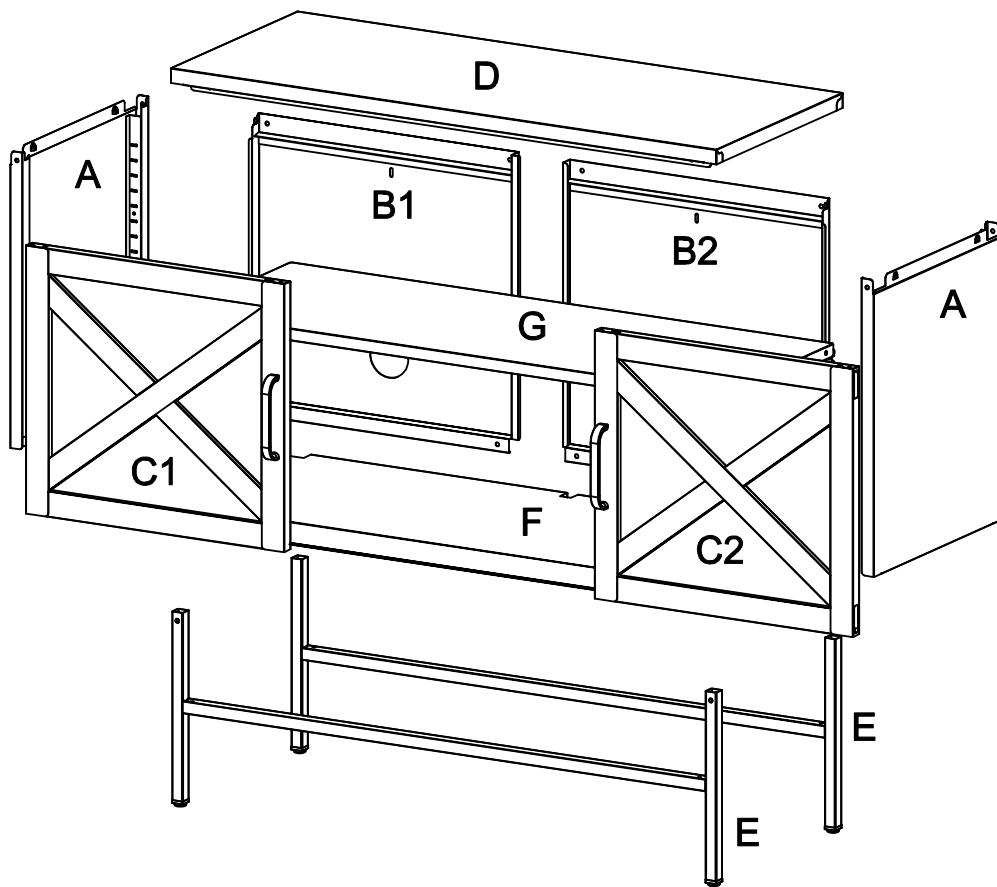


Hardware	Ctn No.	1
----------	---------	---

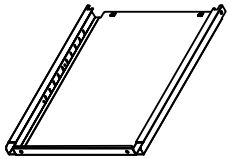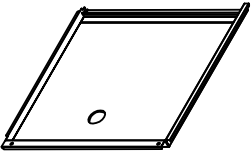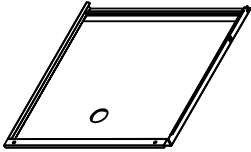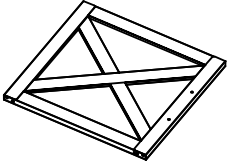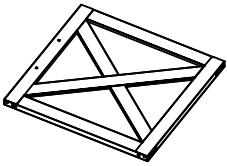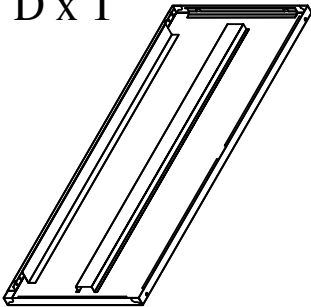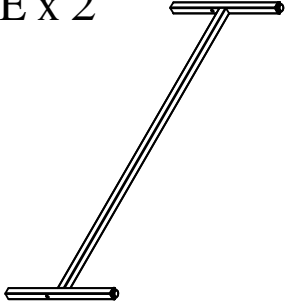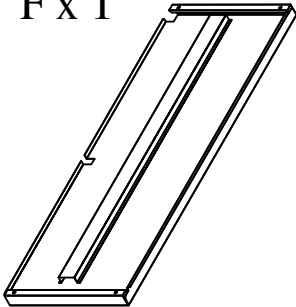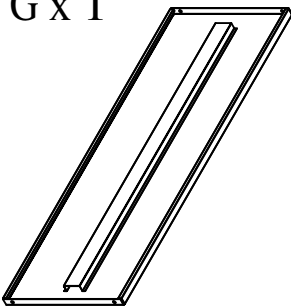A x 2  489x400x23mm	B1 x 1  468x477x23mm	B2 x 1  468x477x23mm	C1 x 1  441x475x20mm
C2 x 1  441x475x20mm	D x 1  1001x402x25mm	E x 2  998x320x20mm	F x 1  997x375x35mm
G x 1  997x352x20mm			


① x2  Ø6*30mm	② x6  12*0.8mm	③ x4  Ø4*22mm	④ x4 	⑤ x2  Ø8*38mm
⑥ x2 	⑦ x2  Ø4*38mm			

(1) - Attach (A) to (E) as below shown.


Make sure the holes are nearest to outside otherwise will affect door assembling.

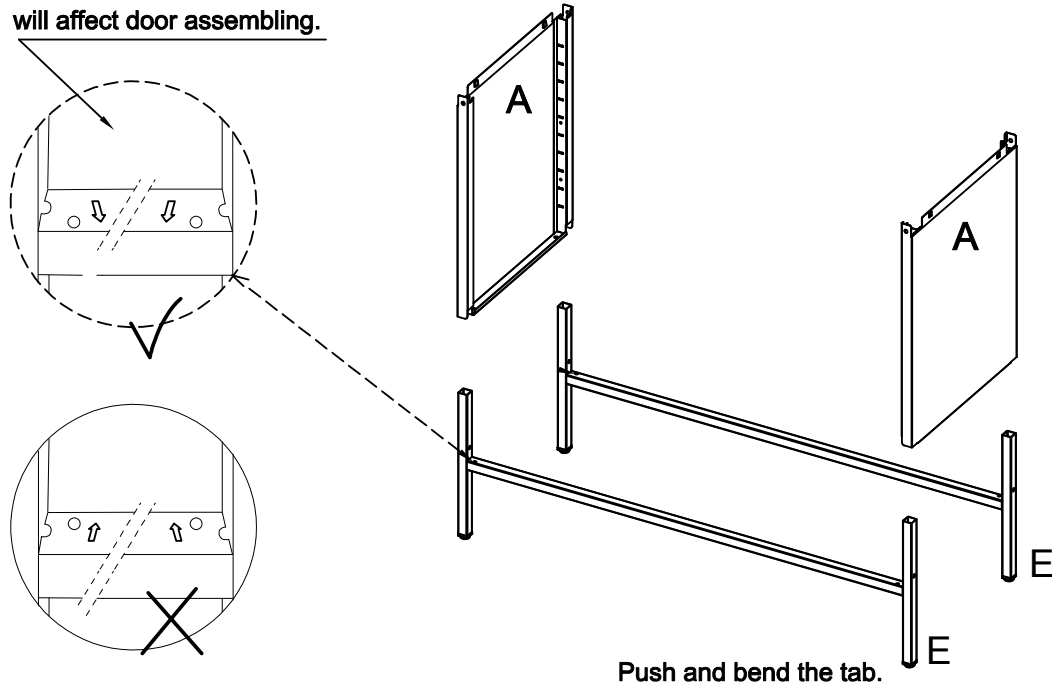


(2) - Attach (B1) & (B2) to (A) & (E) as below shown.

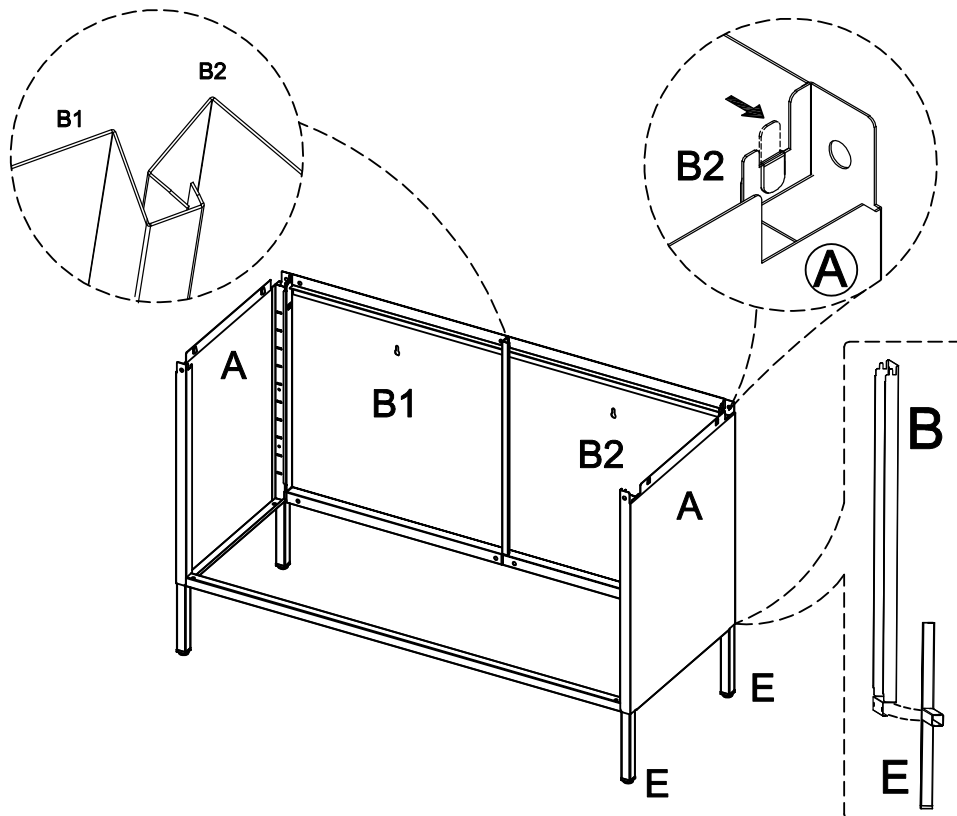



(3) - Attach (F) to (A) & (B) & (E) as below shown.

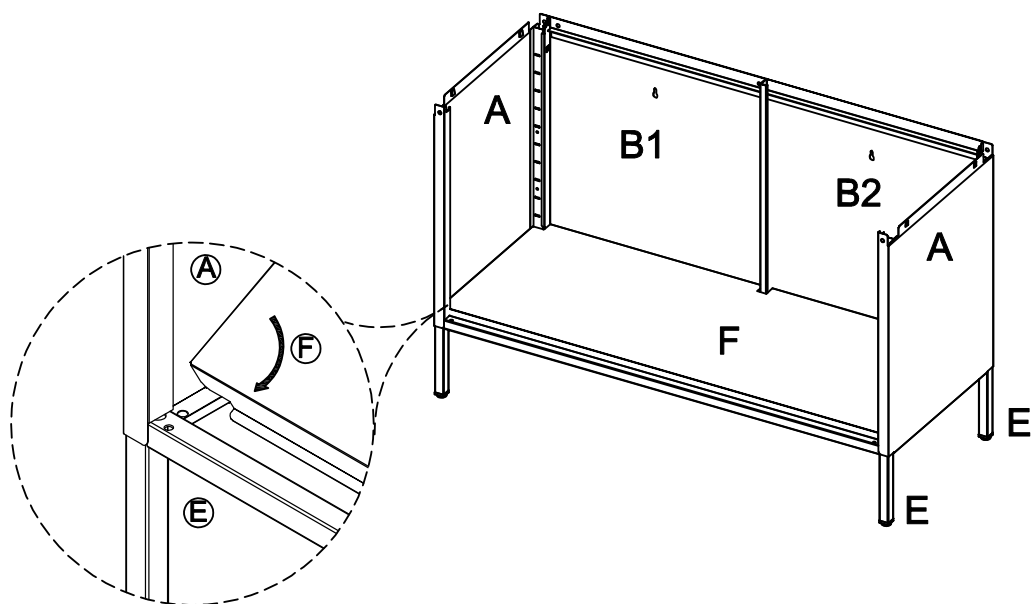




(4) - Attach (D) to (A) & (B) as below shown.

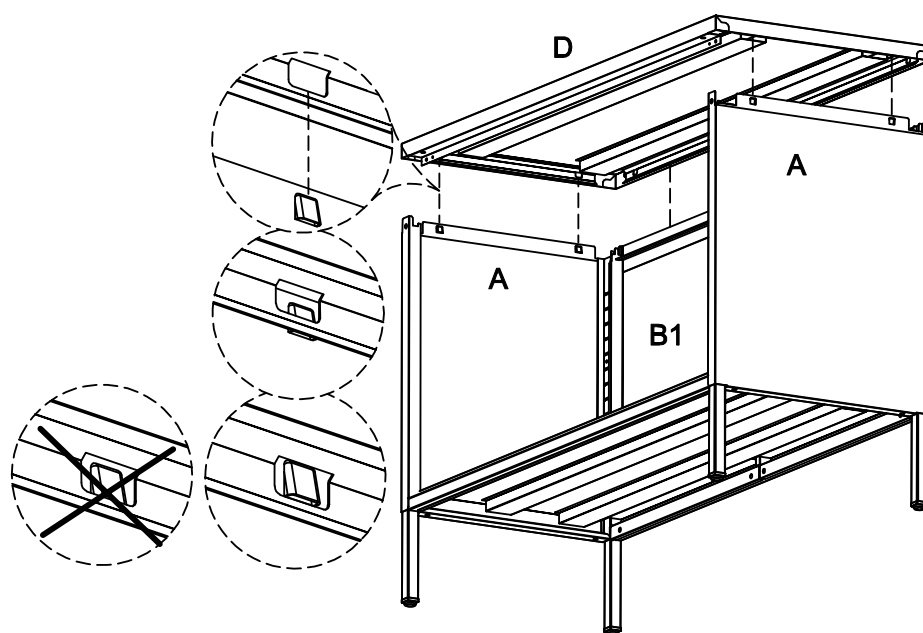


(5) - Attach (G) to pre-assembled unit as below shown.

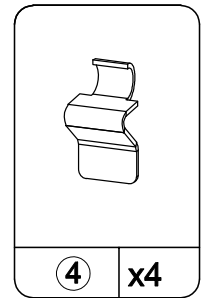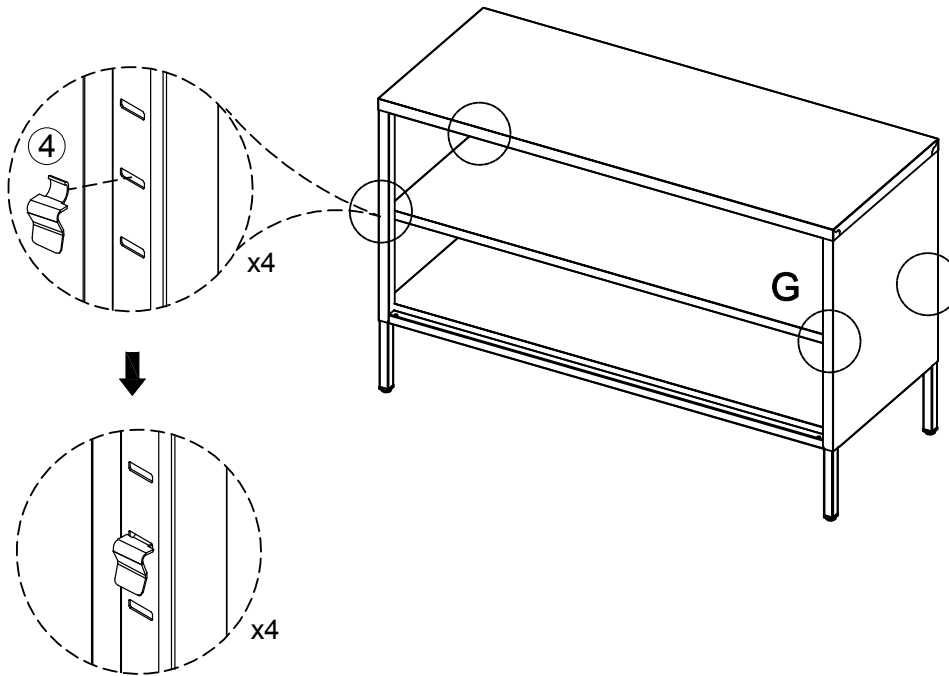


(6) - Attach (1) & (2) to pre-assembled unit as below shown.

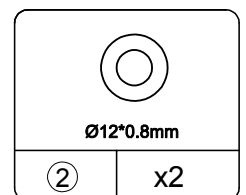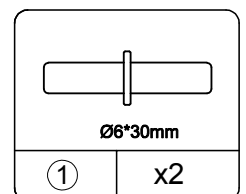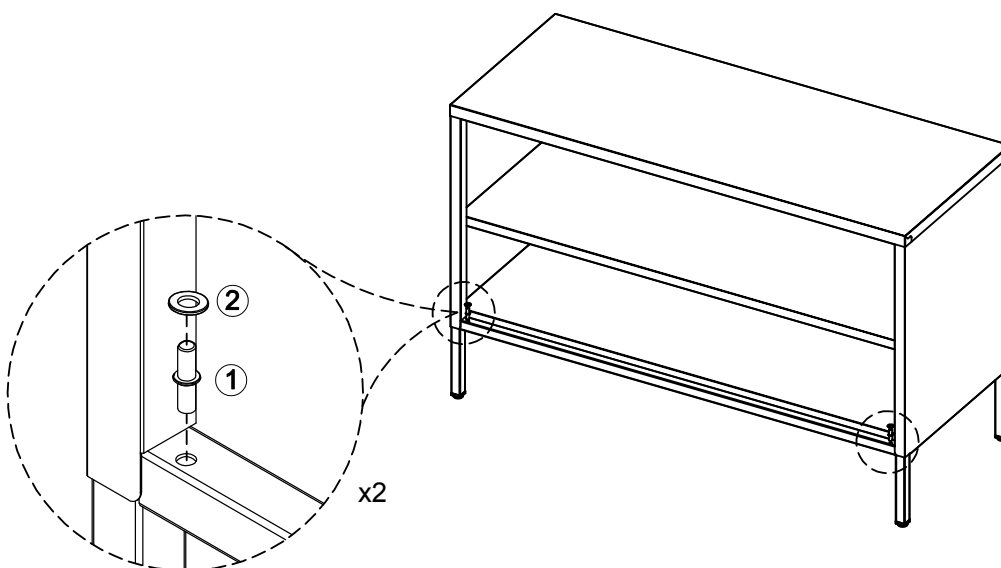




(7) - Attach (C1) & (C2) to pre-assembled unit as below shown.

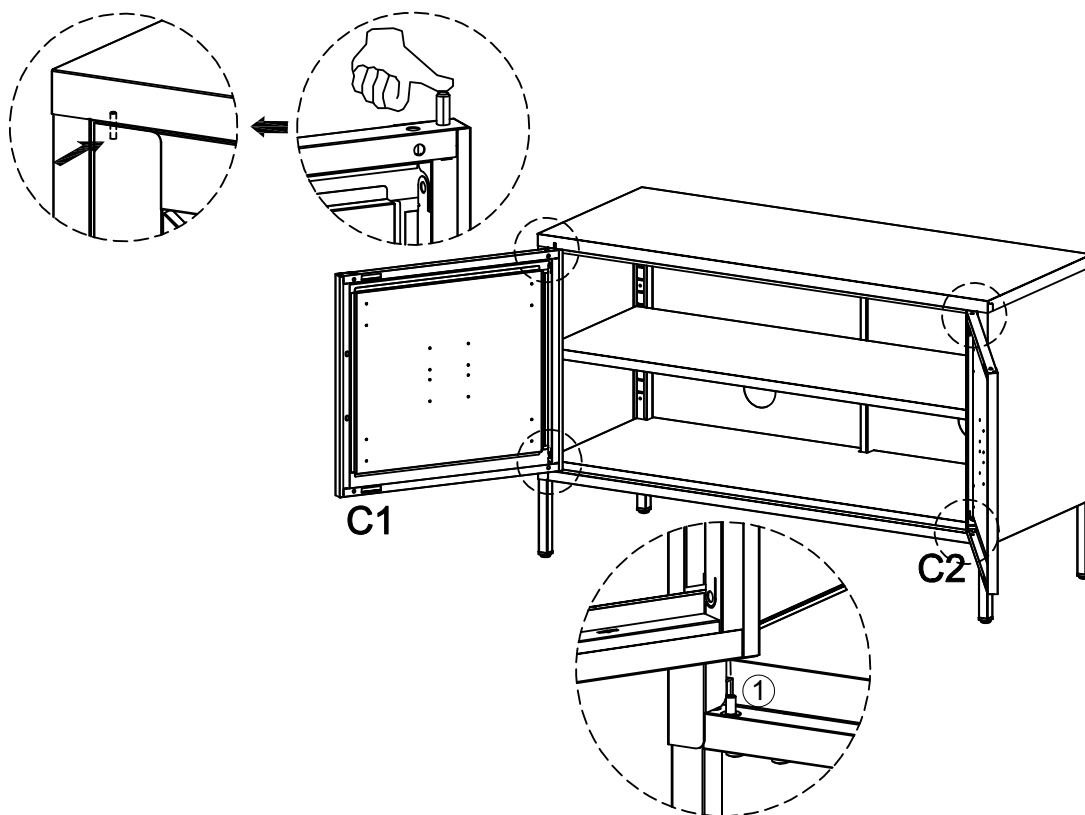


(8) - Attach (6) to (C1) & (C2) as below shown.

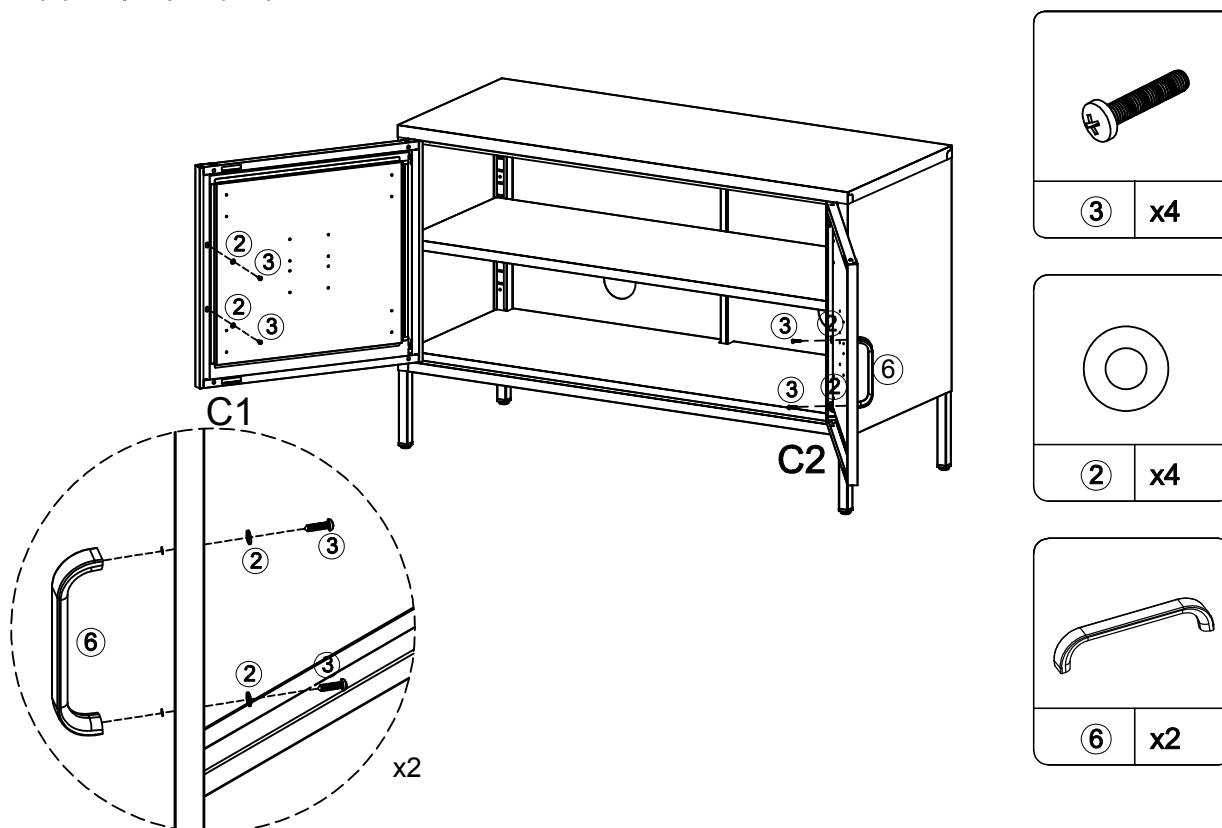

(9)

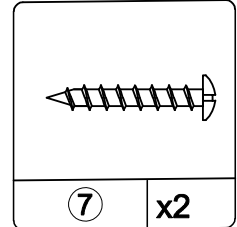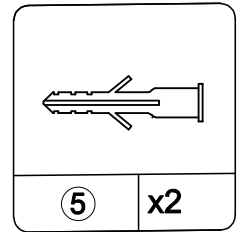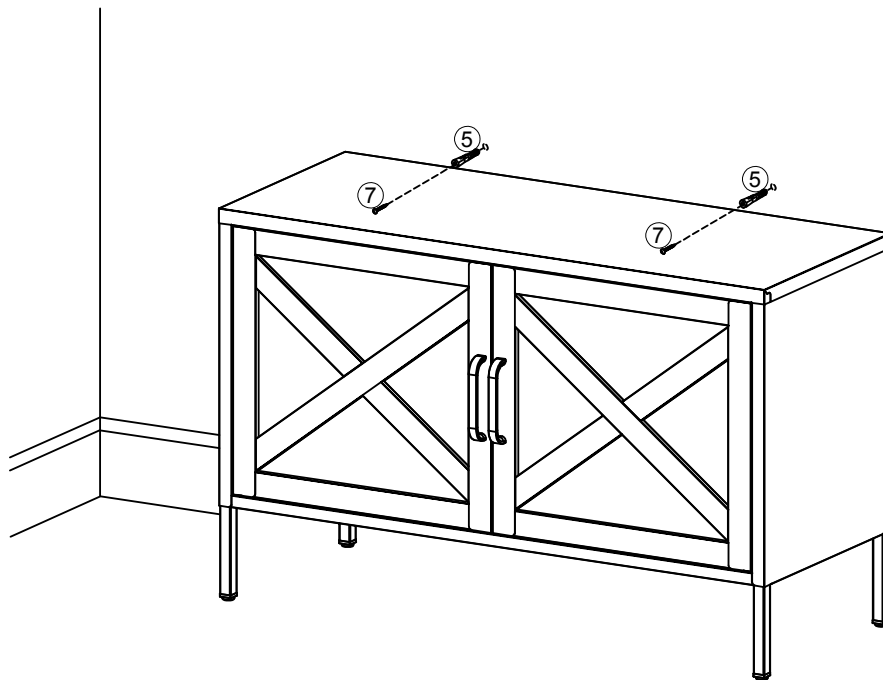

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

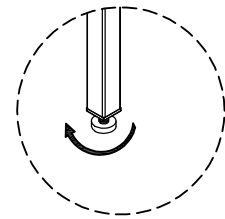

Open Concept

Great Job! You're done it

Don't forget to share how it looks in
your space and tag us on Instagram

@spacegeneralnz