
## Open Concept

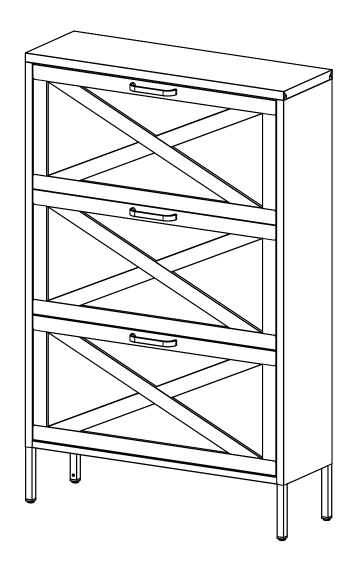

## Thank you for purchase. Instruction Manual












## Important:


Please read through instructions carefully Before assembly and keep for future reference.

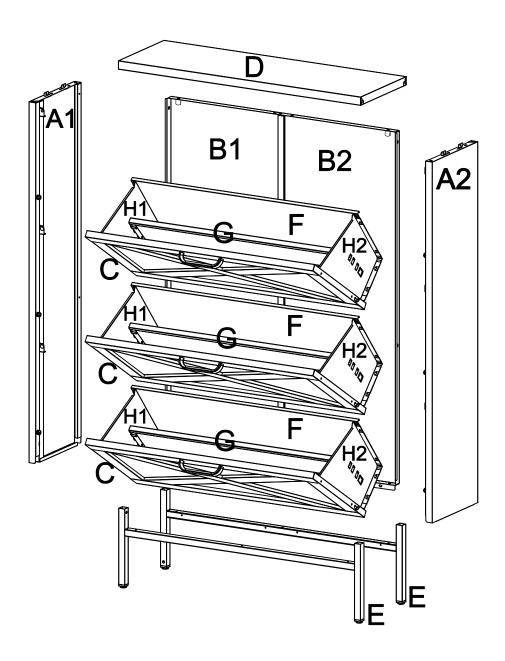

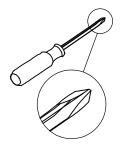


Hardware Ctn No. 1

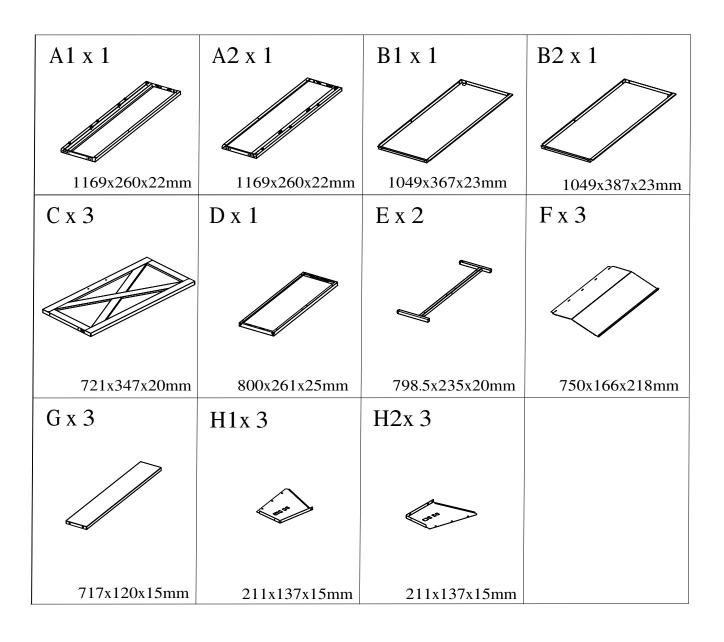


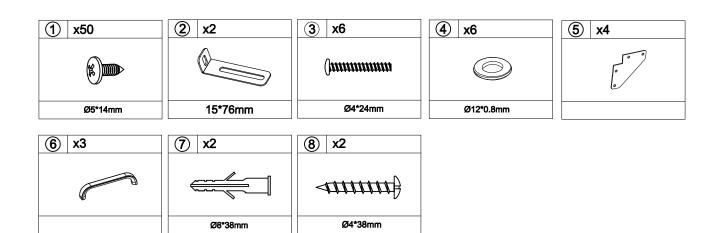


(1) - Attach (A1) & (A2) to (E) as below shown.

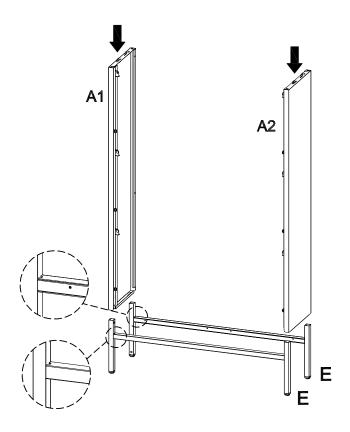



(2) - Attach (5) to (A1) & (A2) & (E) as below shown.

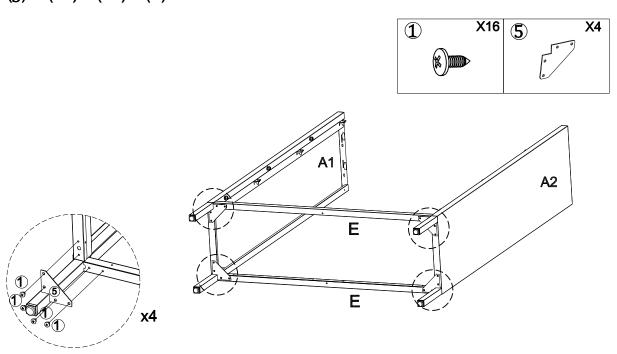

 $\left(3\right)\,$  - Attach (B1) & (B2) to (E) & (A1) & ( A2)as below shown.




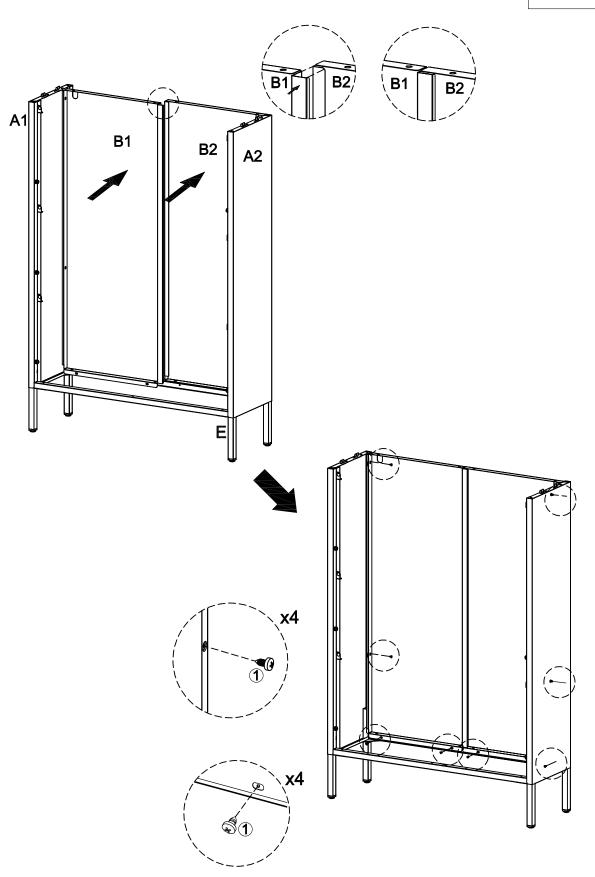


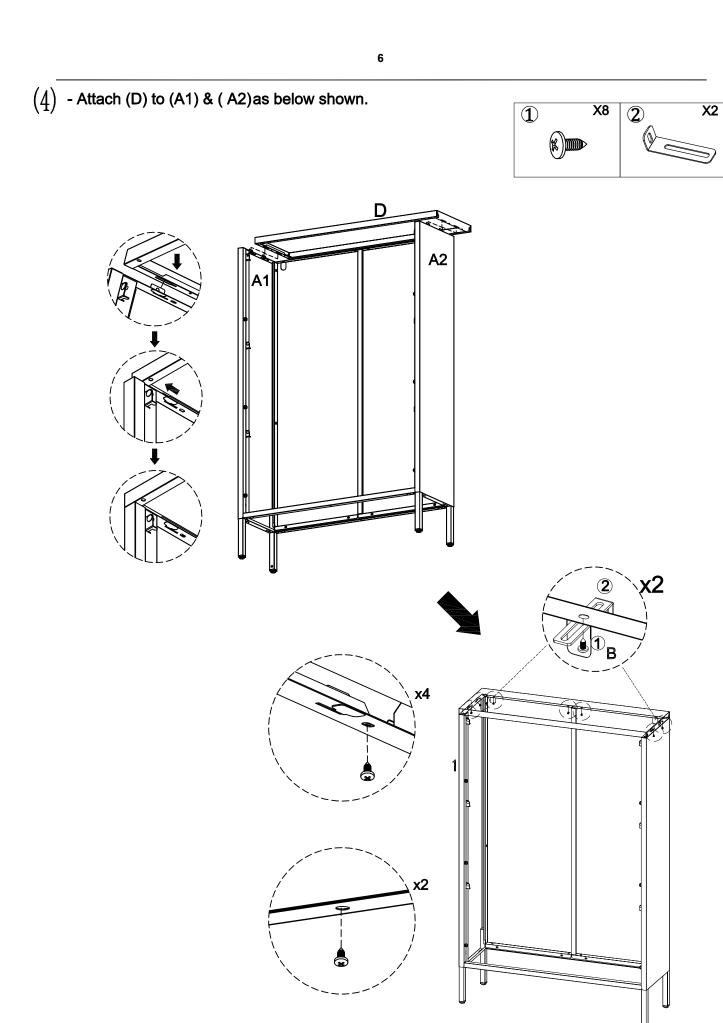


www.spacegeneral.co.nz

(5)




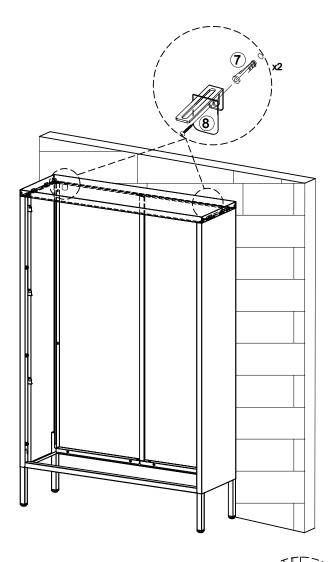


Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.





(6) - Attach (H1) & (H2) to (F) as below shown.

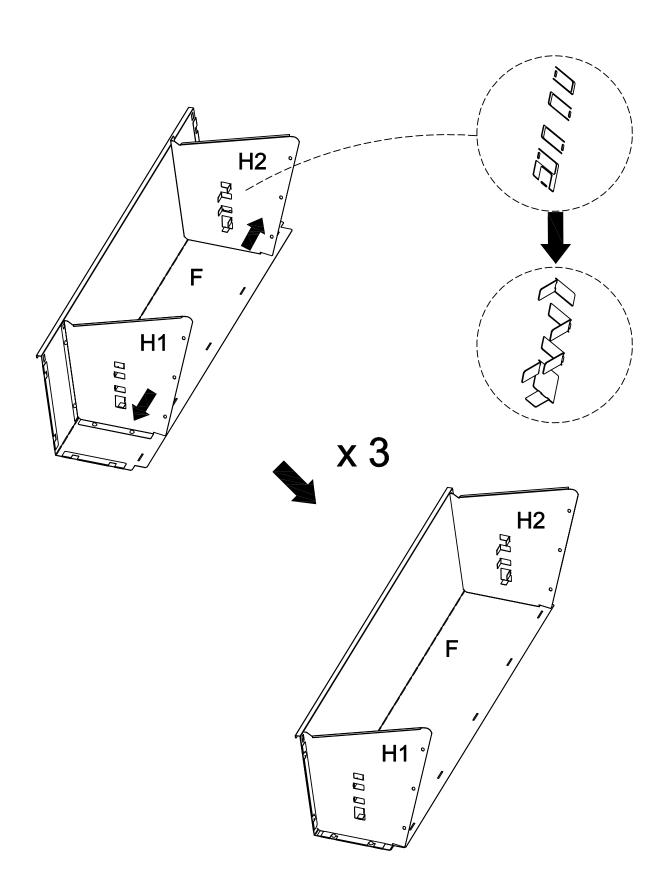


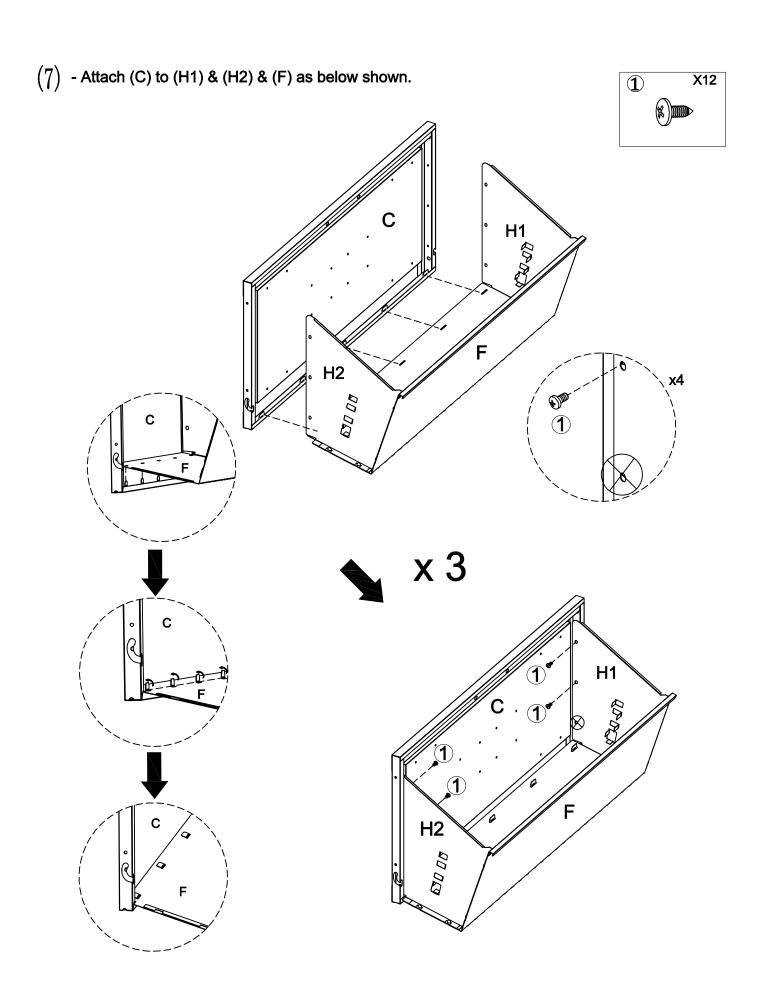


(8) - Attach (G) to pre-assembled unit as below shown.

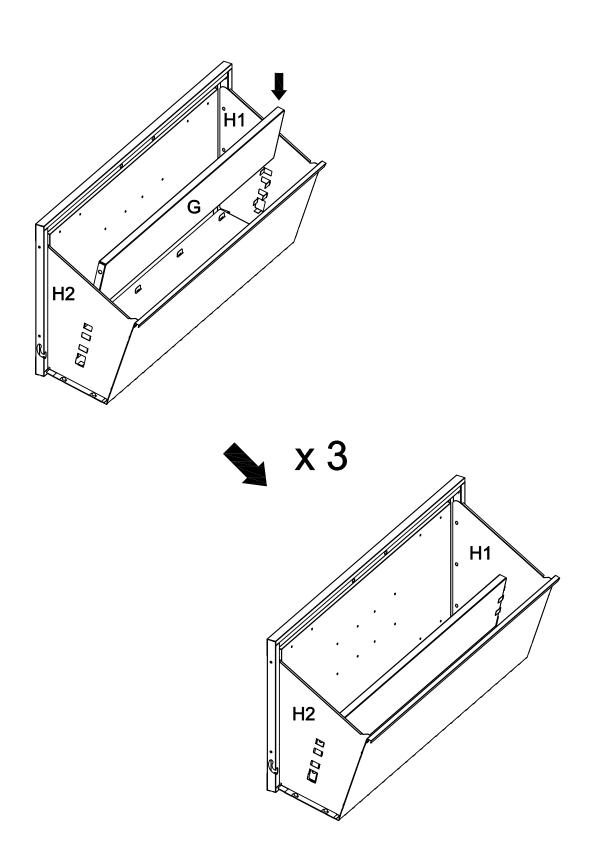







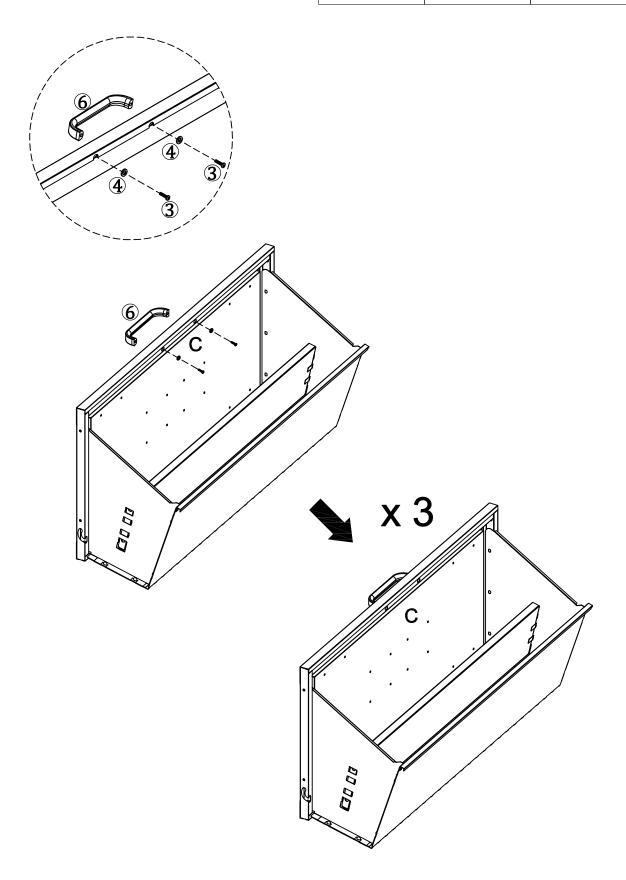

 $\begin{pmatrix} 10 \end{pmatrix}$  - Attach (C) to pre-assembled unit as below shown.

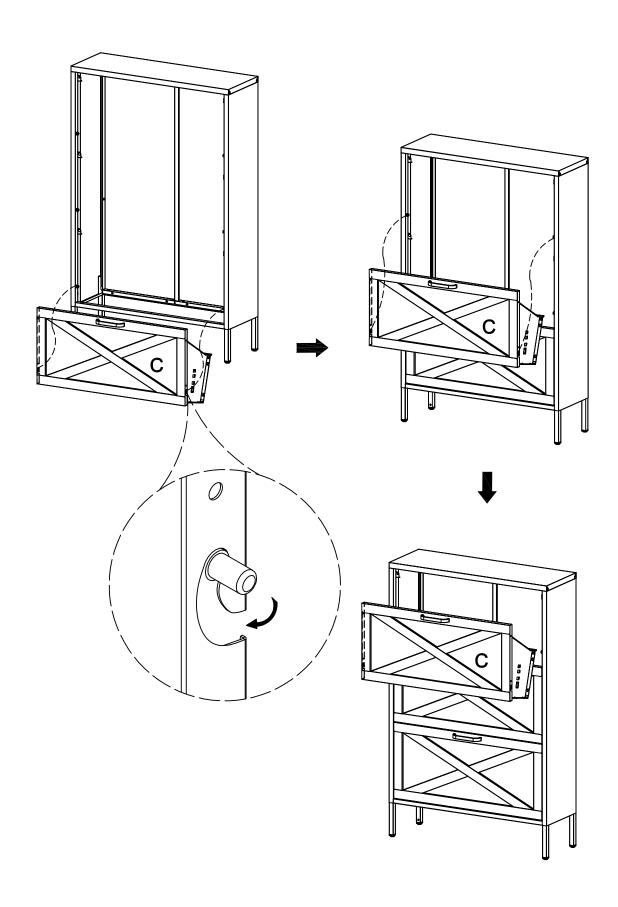

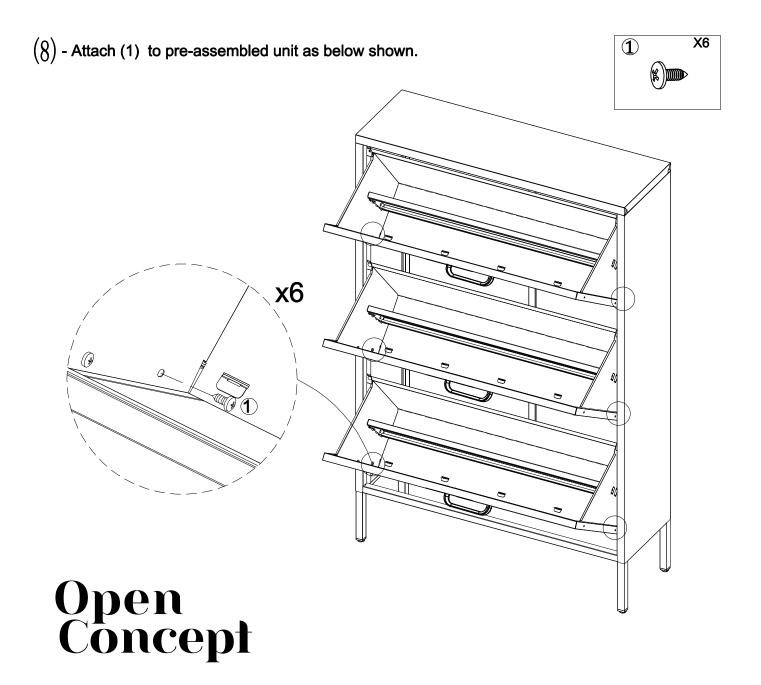

## Great Job! You're done it

Don't forget to share how it looks in your space and tag us on Instagram

@spacegeneralnz