


Space General

www.spacegeneral.co.nz

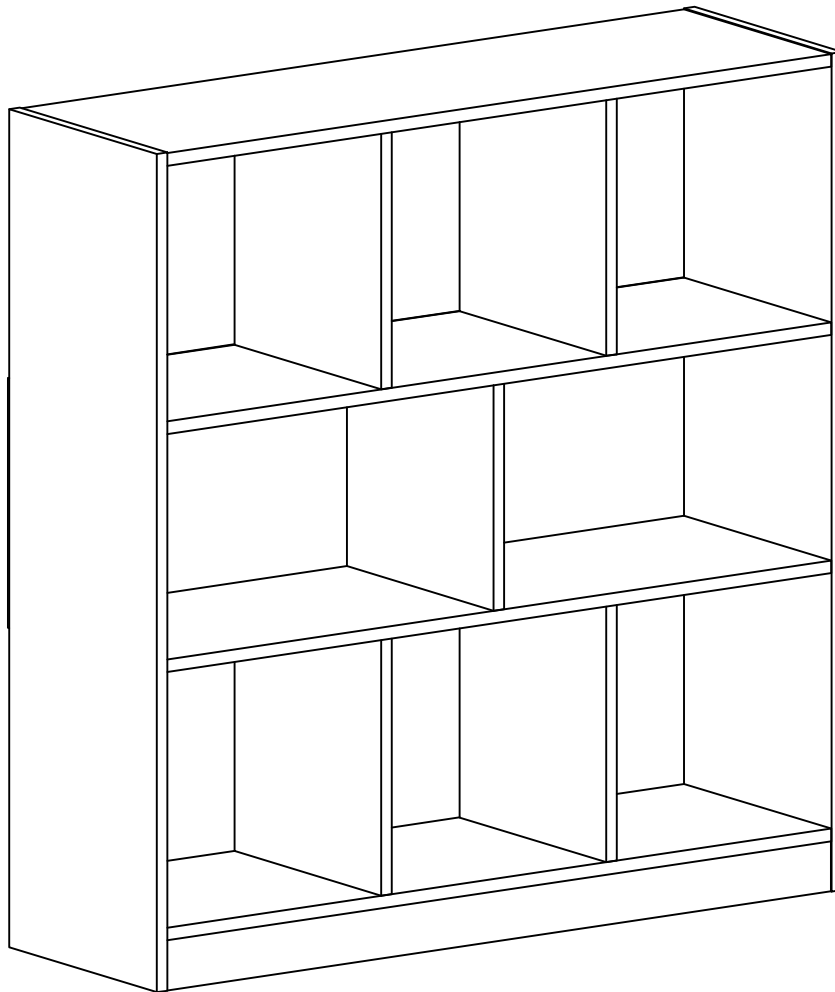

Assembly Instructions



Thank you for your purchase.

Please follow the instructions below for correct assembly.

Safety and Care Advice

IMPORTANT - Please Read This Instruction Carefully Before Assembly.


- Check you have all the components and tools listed on page 3.
- Remove all settings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before assembly.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to it's intended position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit.
- Parts of the assembly will be easier with 2 people.
- Do not use power drill/drivers for assembly, or the unit may be damaged.
- Dispose of all packaging carefully and responsibly.

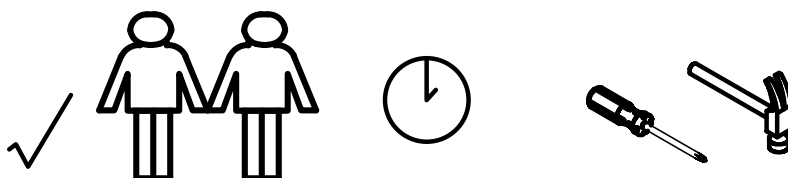

CARE and MAINTENANCE

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.


General Hints & Tips







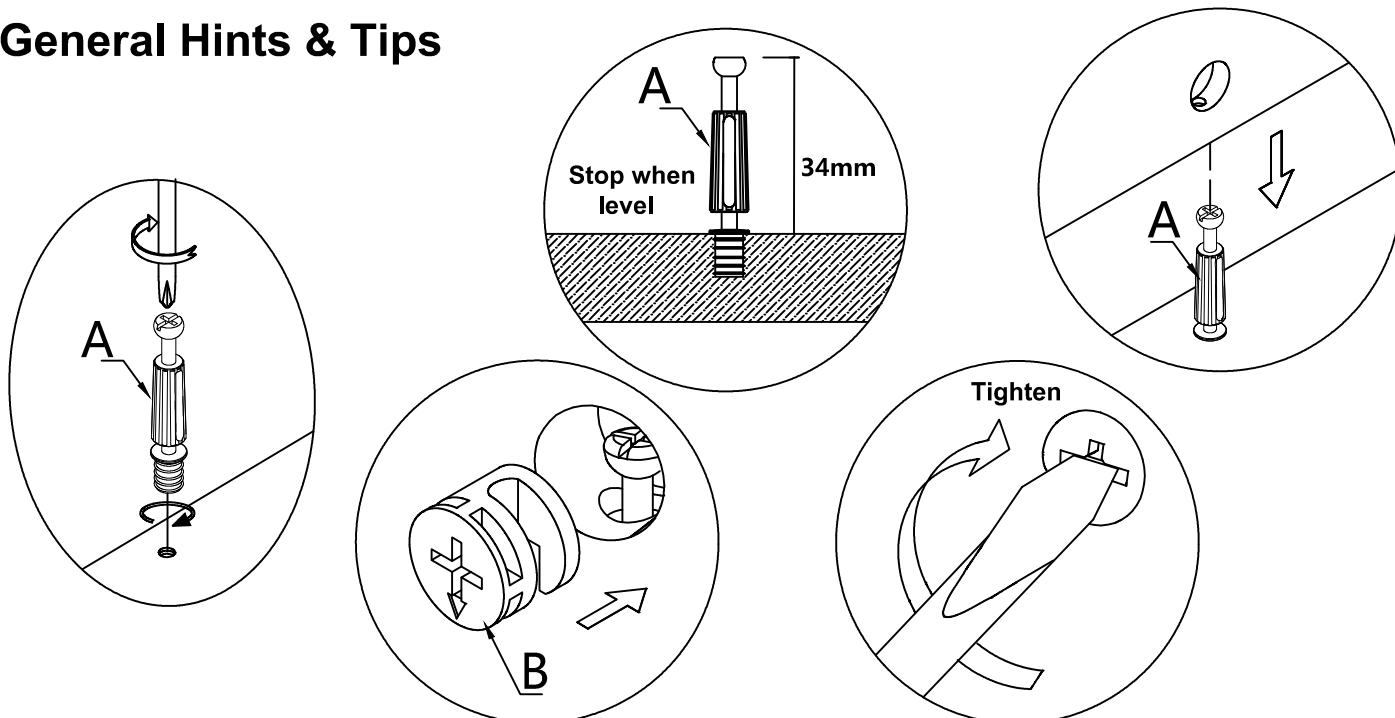


Components and Tools


IMPORTANT - Please Check If You Have All The Components and Tools.


Note: The quantities below are the correct amount to complete the assembly. In some cases more pieces may be supplied than are required.


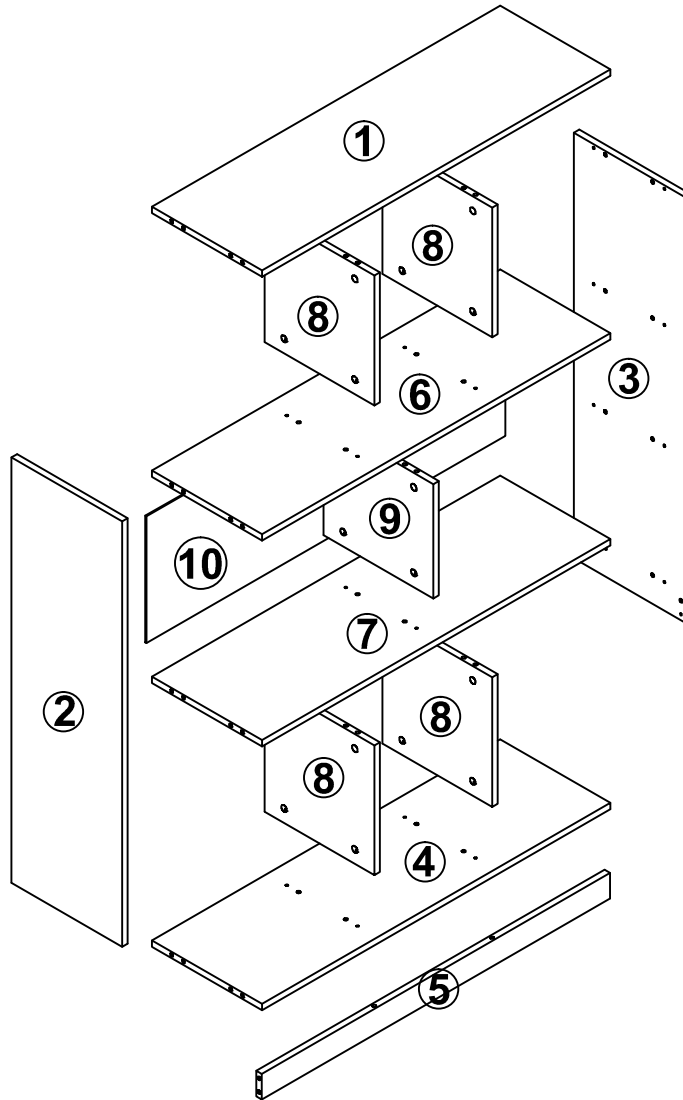


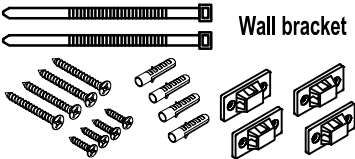
| | | | | | |
|---|--|--|---|--|--|
| A=40  Peg M6*34mm | B=40  Lock M15*12mm | C=38  Dowel M6*30mm | D=35  | F=6  Plastic Feet | G=10  Pin |
| P=1  Wall bracket | | | | | |

Assembly Instruction



| Step 1 | |
|--|--|
| A=18 | |
|  | |
| Peg | |

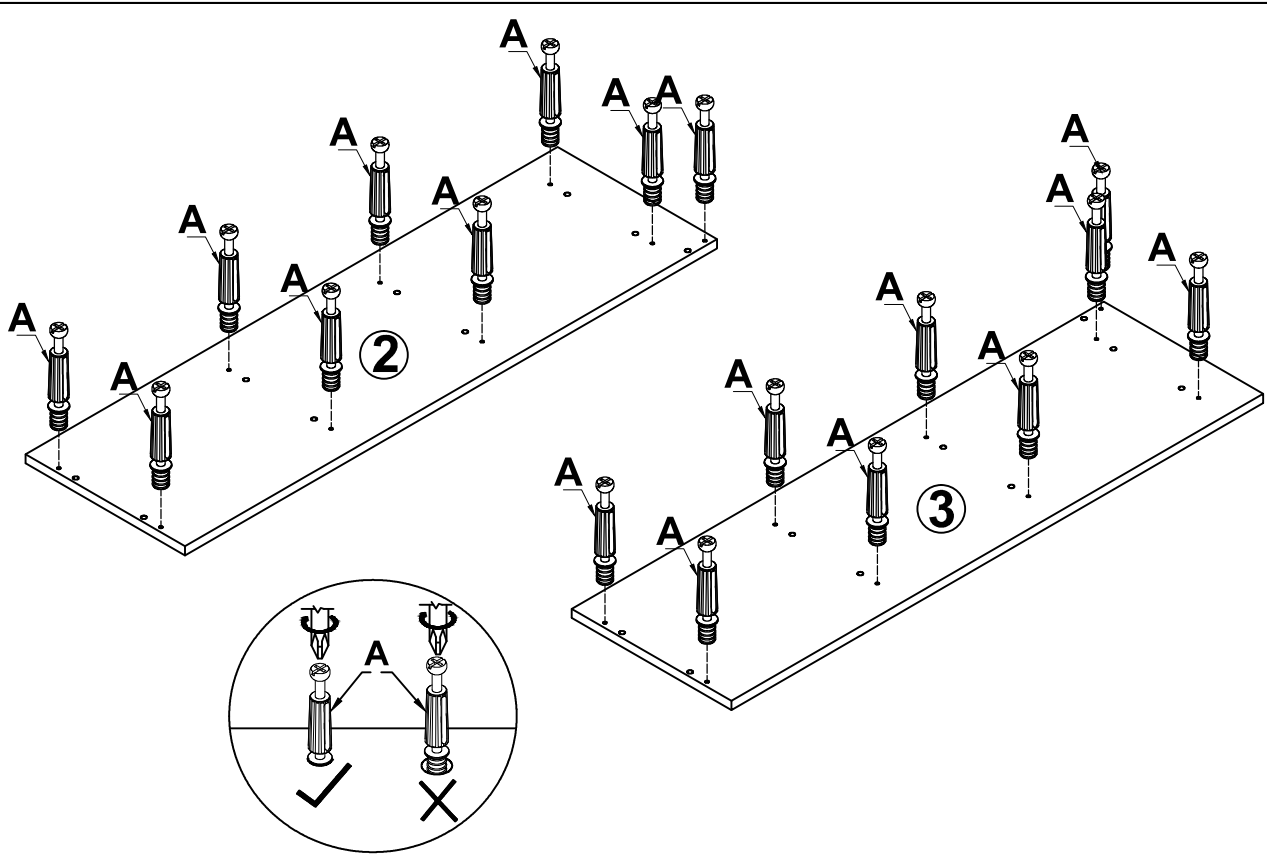



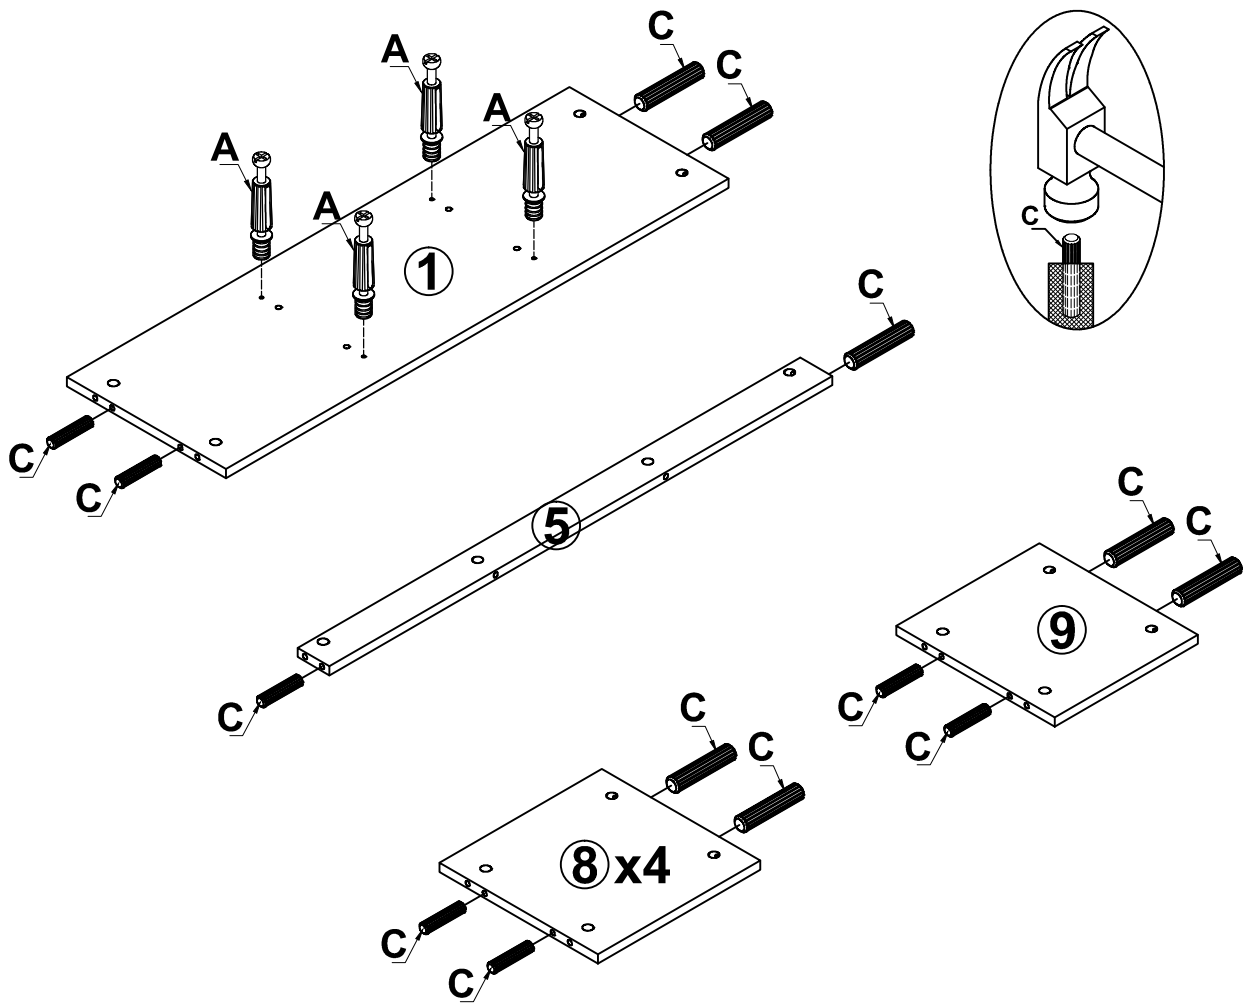
| Step 2 | |
|--|---|
| A=4 | C=26 |
|  |  |
| Peg | Dowel |




Assembly Instruction

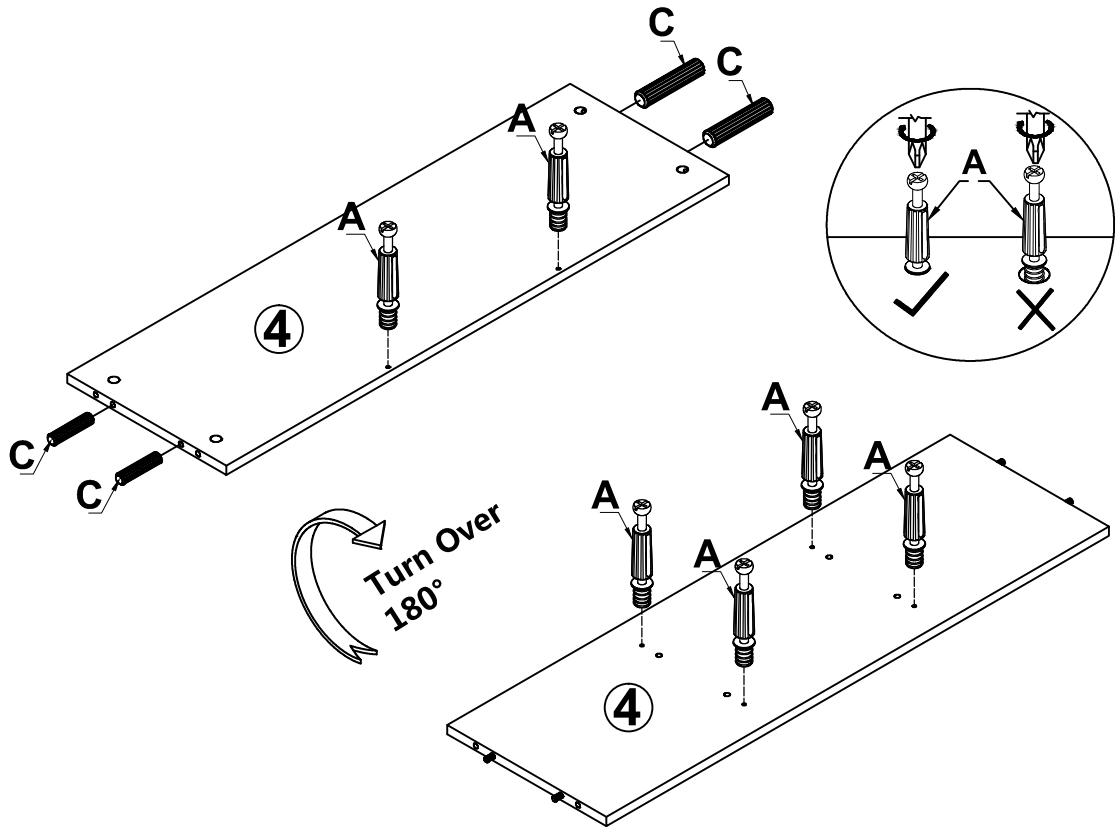

| Step 3 | |
|--|---|
| A=6 | C=4 |
|  |  |
| Peg | Dowel |





| Step 4 | |
|--|---|
| A=6 | C=4 |
|  |  |
| Peg | Dowel |

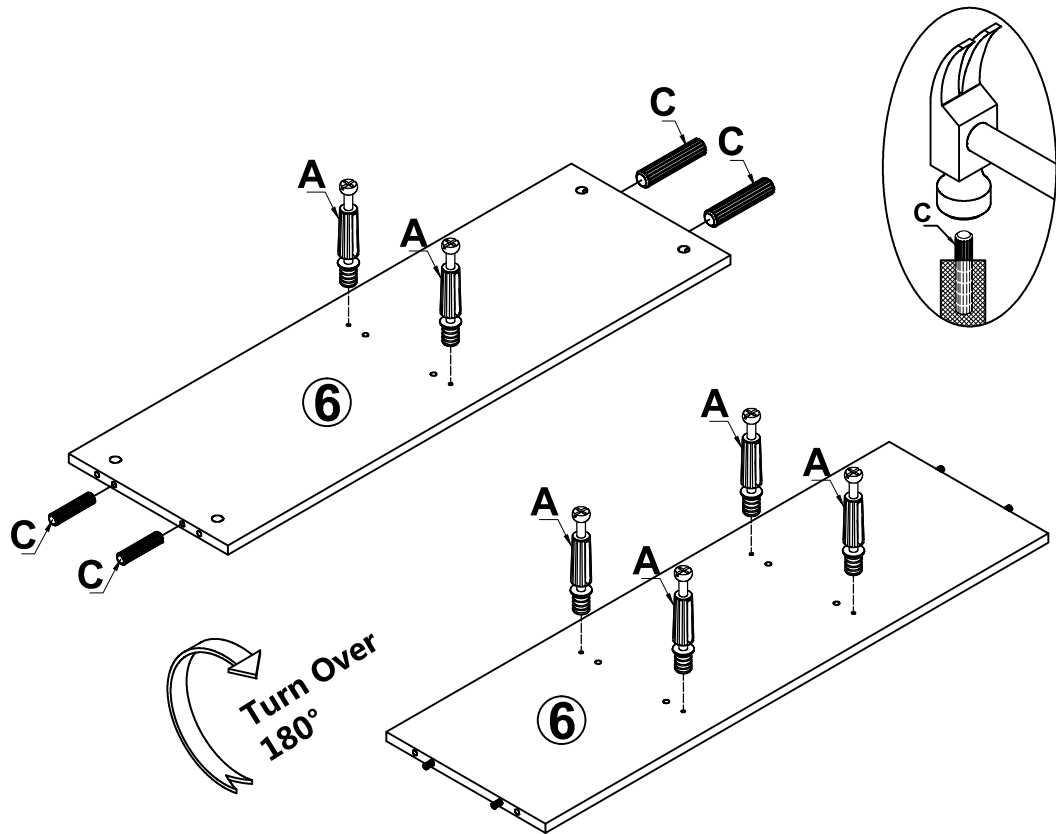


Assembly Instruction


| Step 5 | |
|--|---|
| A=6 | C=4 |
|  |  |
| Peg | Dowel |

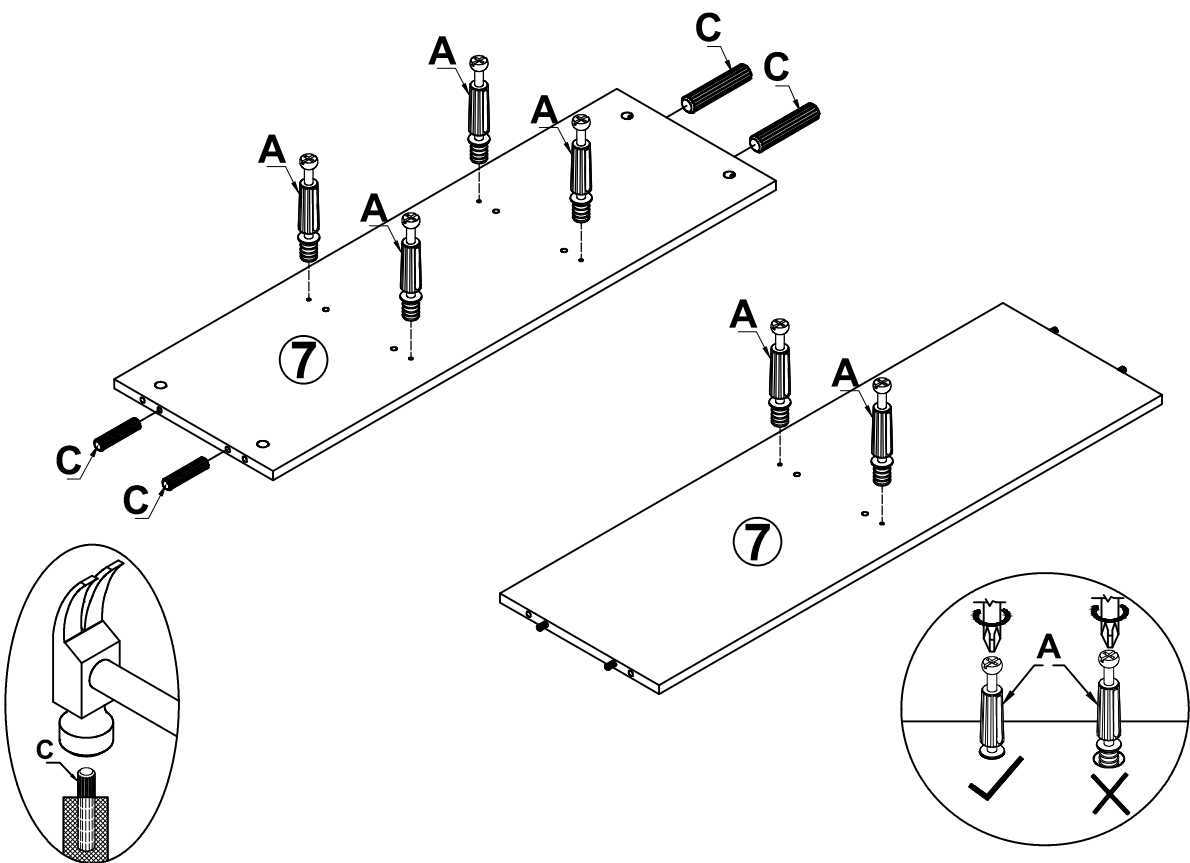



| Step 6 | |
|--|--|
| B=2 | |
|  | |
| Lock | |


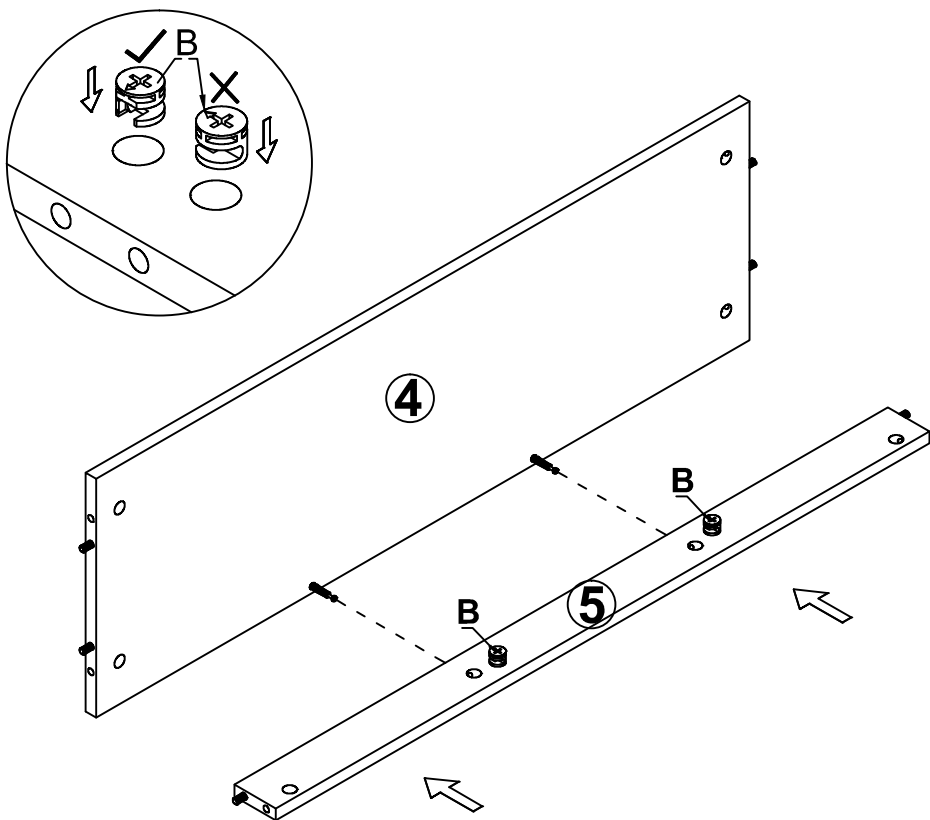


Assembly Instruction


| Step 7 | |
|--|--|
| B=4 | |
|  | |
| Lock | |

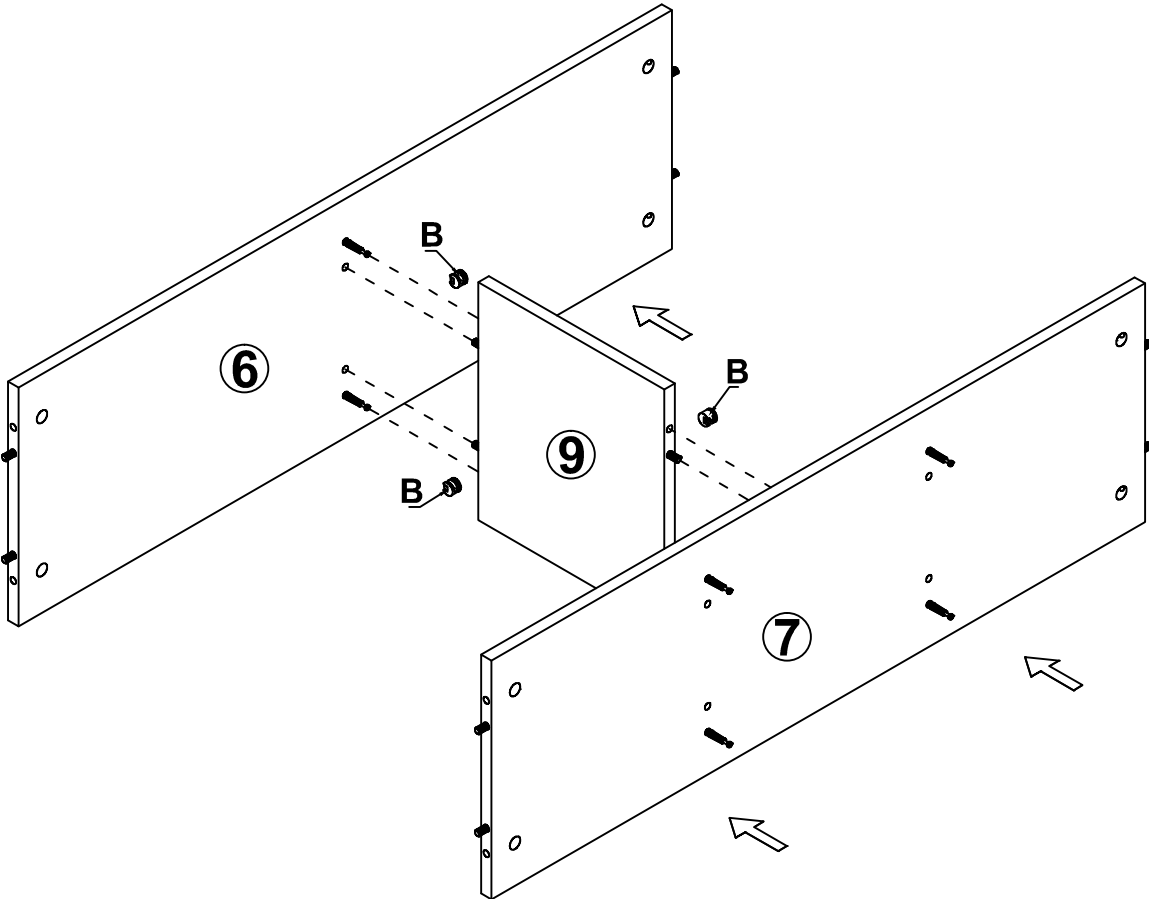



| Step 8 | |
|--|--|
| B=4 | |
|  | |
| Lock | |

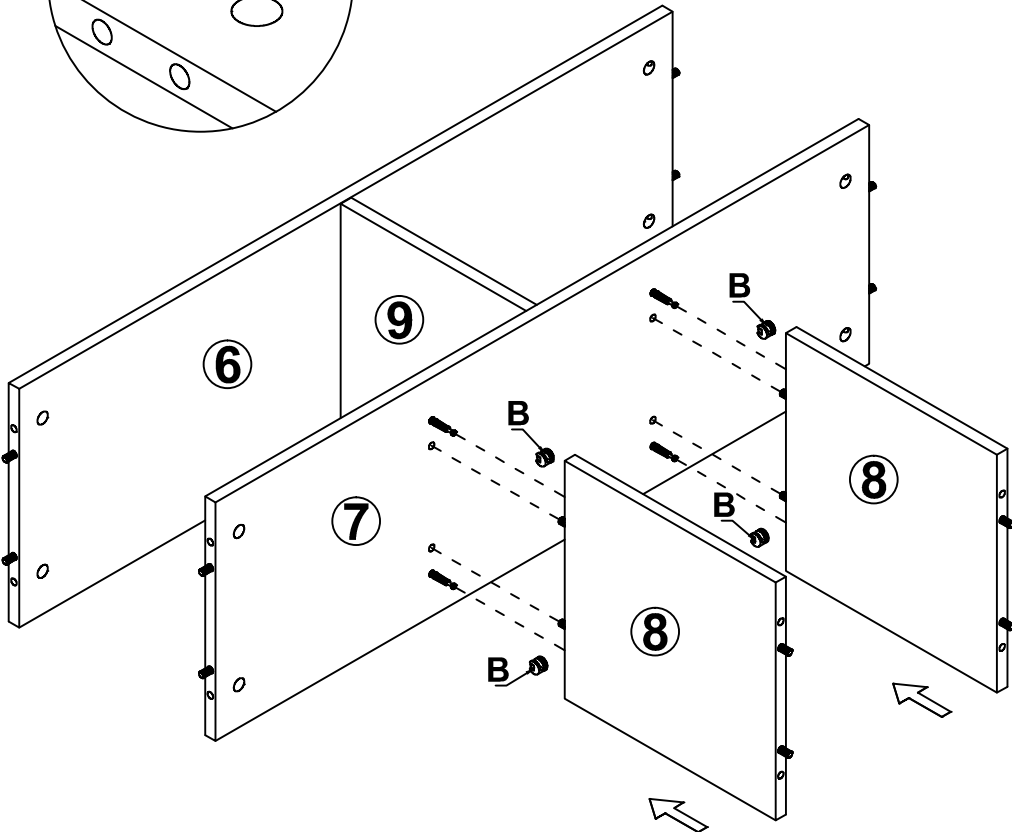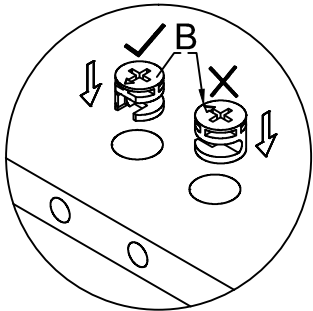


Assembly Instruction

| Step 9 | |
|--|--|
| B=4 | |
|  | |
| Lock | |

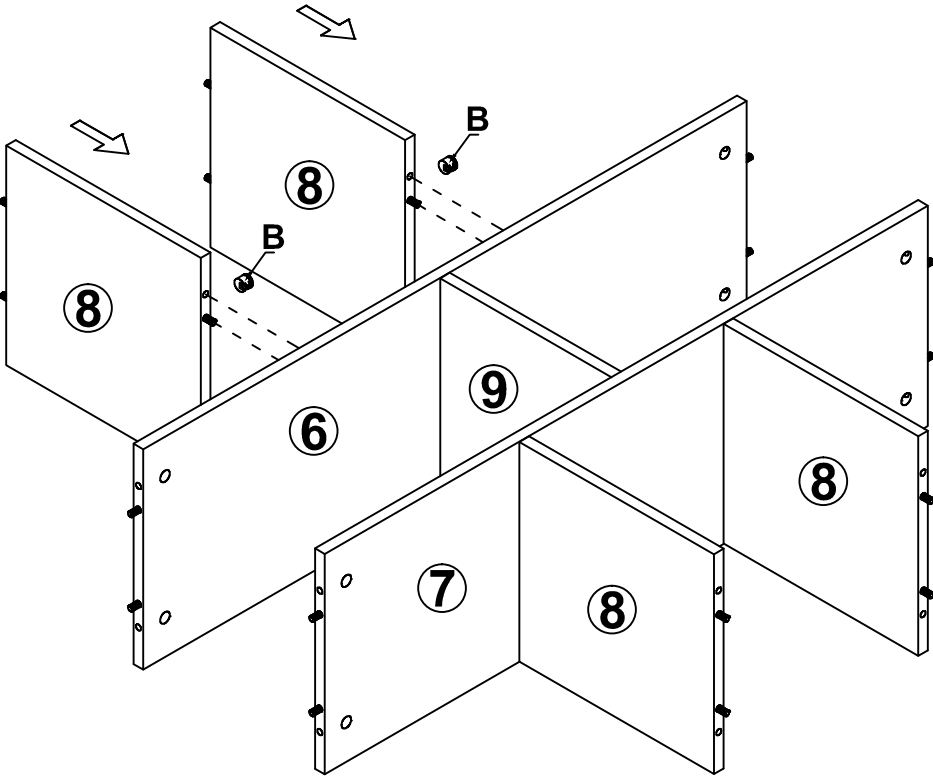

| Step 10 | |
|--|--|
| B=4 | |
|  | |
| Lock | |

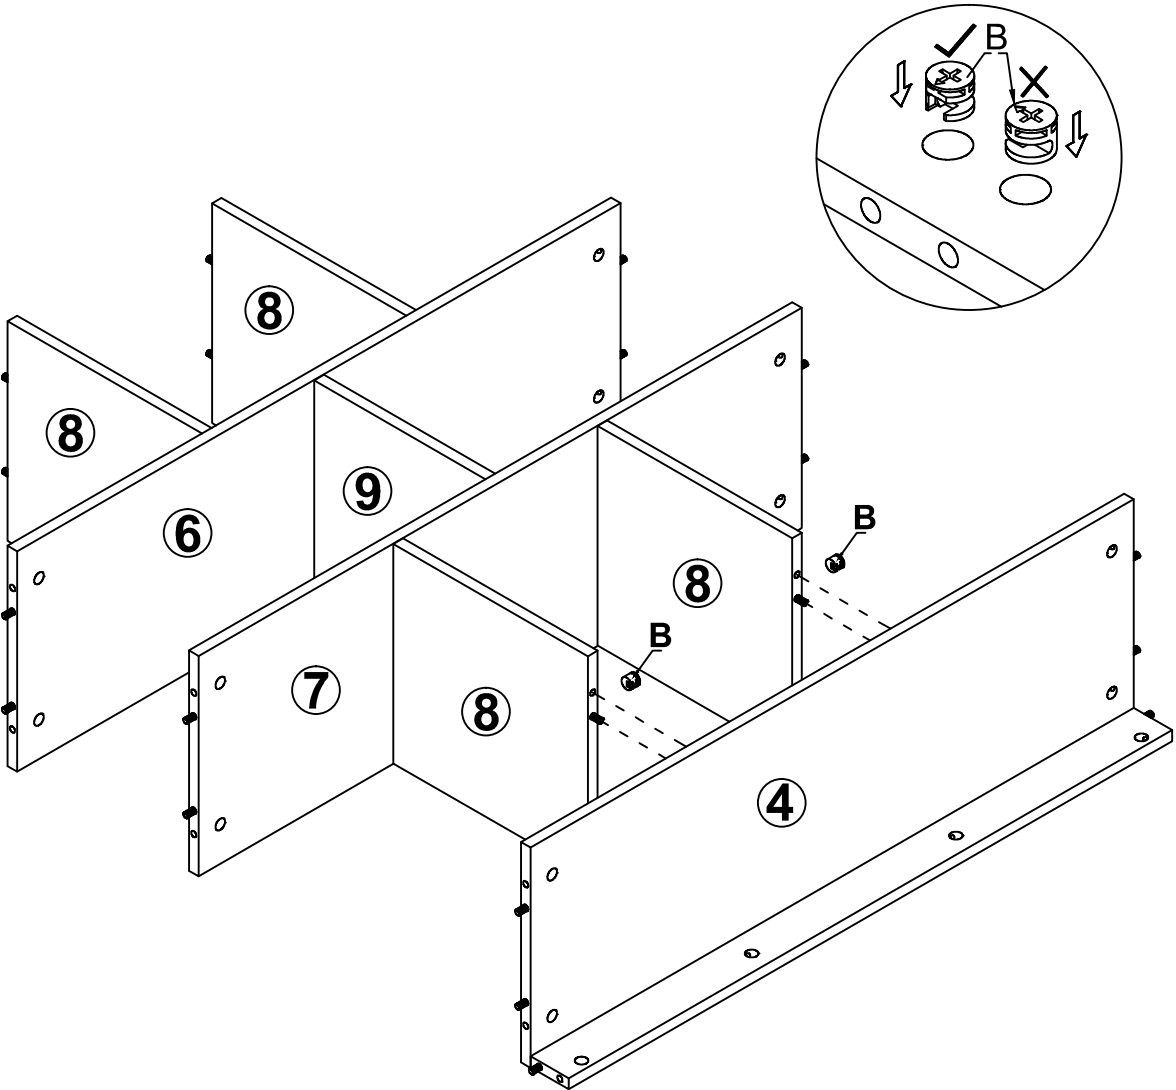



Assembly Instruction

Step 11

B=4



Lock

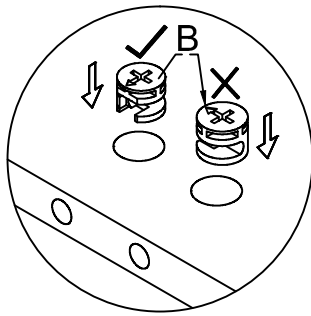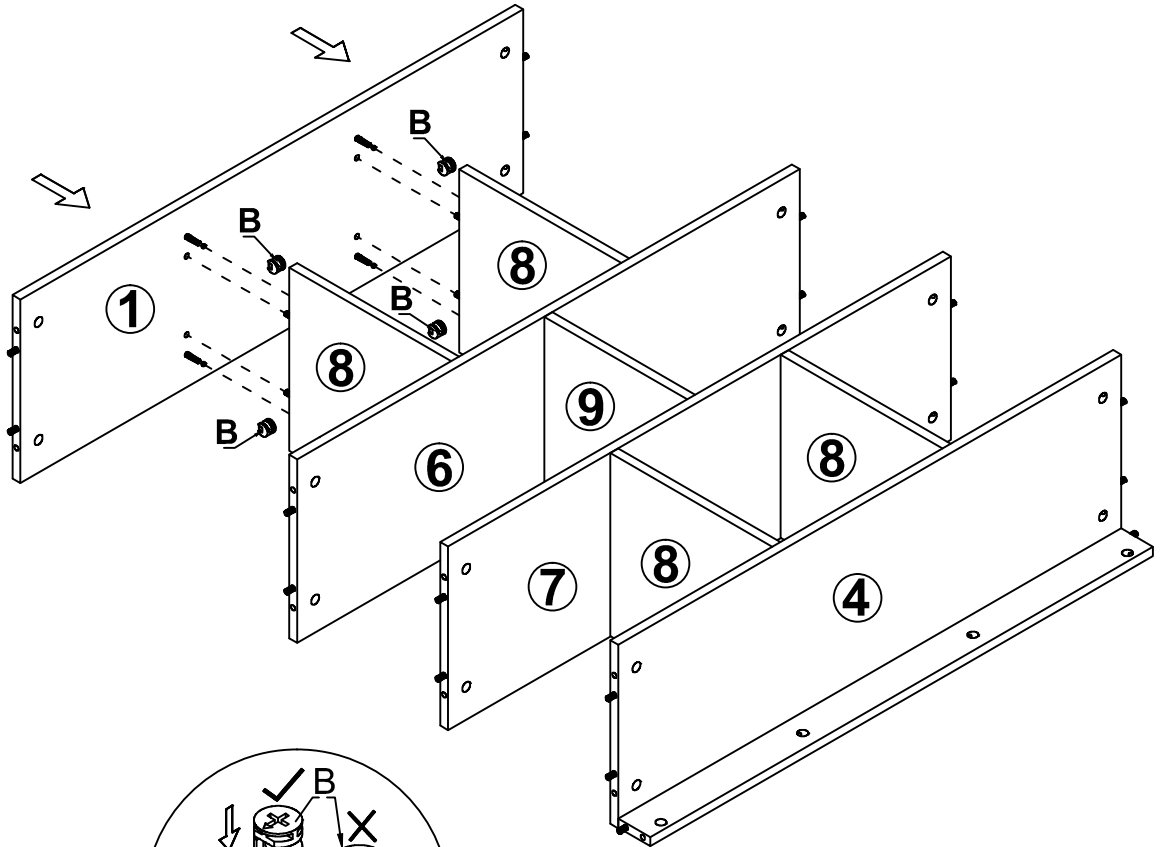


Step 12

B=9



Lock

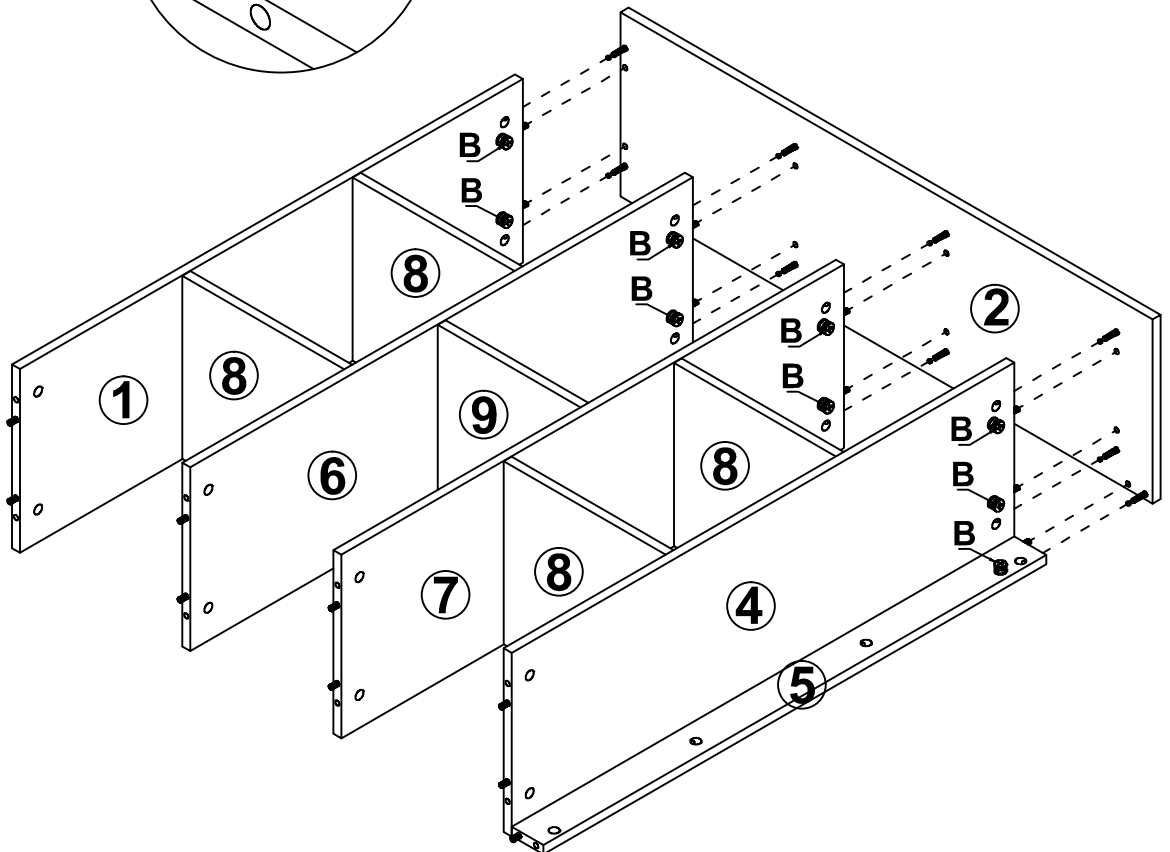



Assembly Instruction

Step 13

B=9



Lock

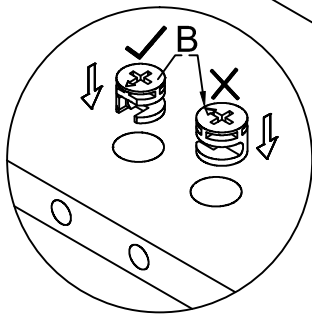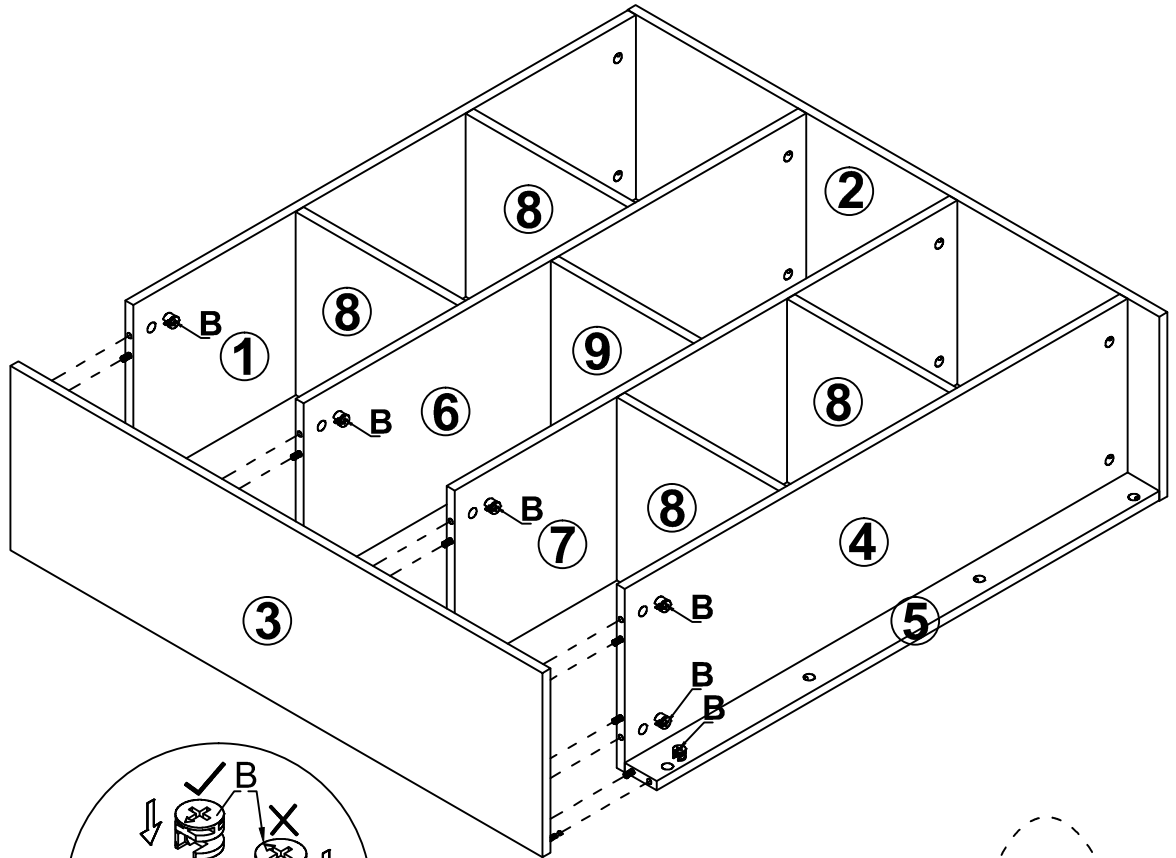

Step 14


G=10

F=6



Pin



Plastic Feet

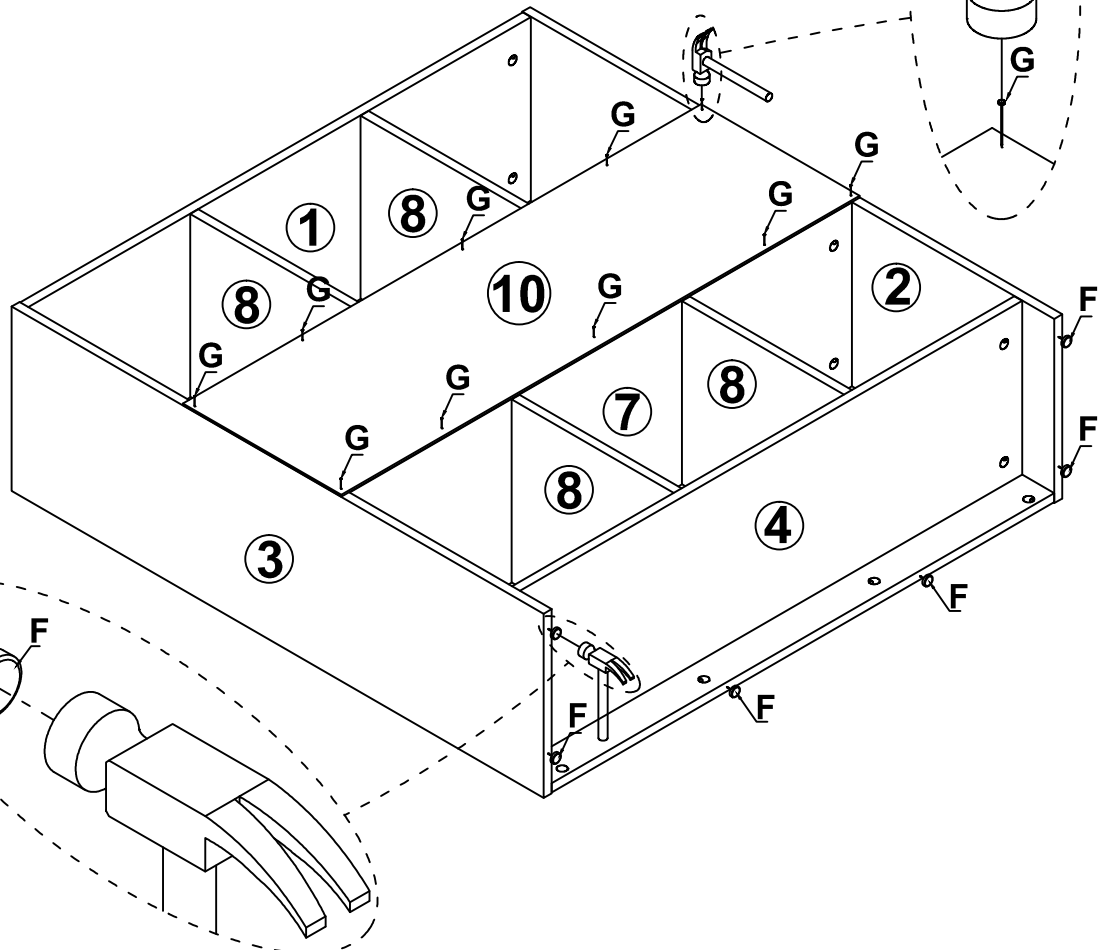


Assembly Instruction

Step 15

D=40






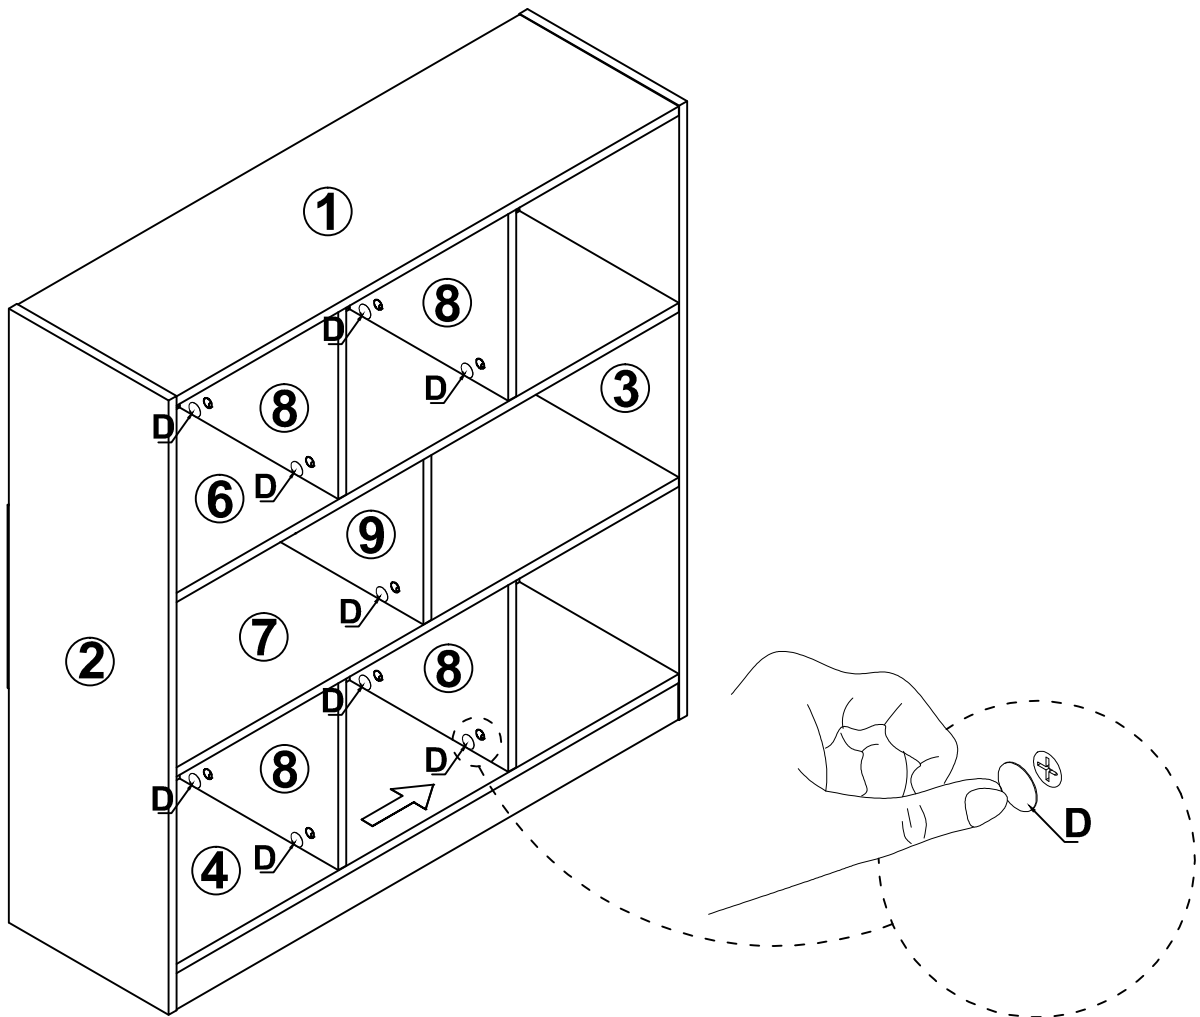



Step 16

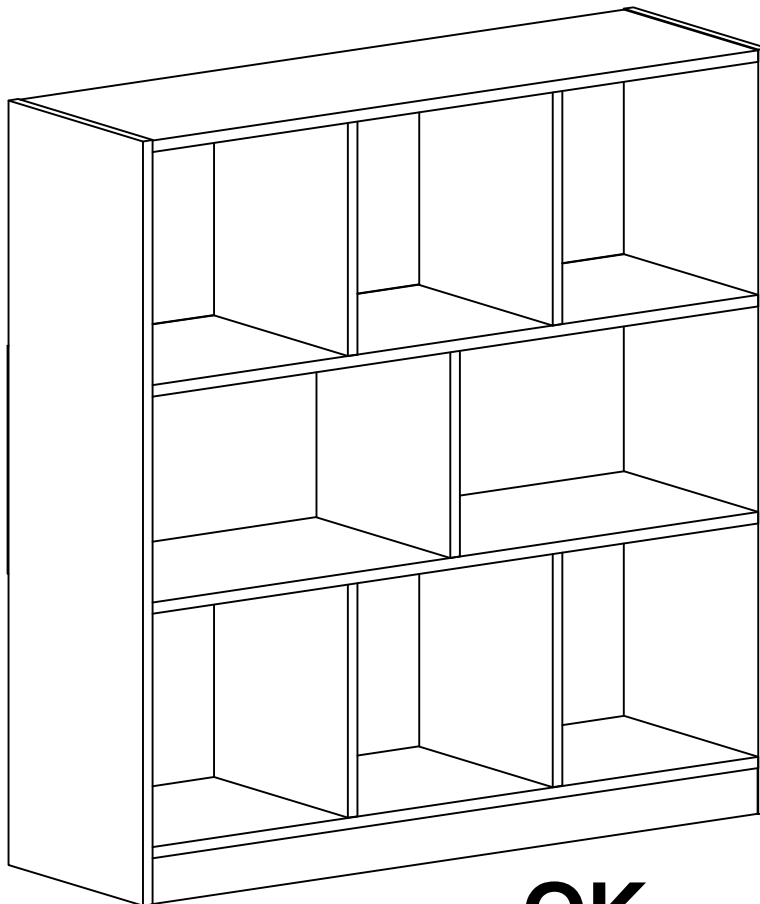

OK

P=1

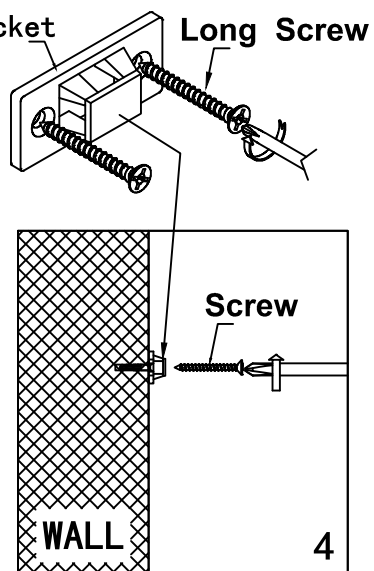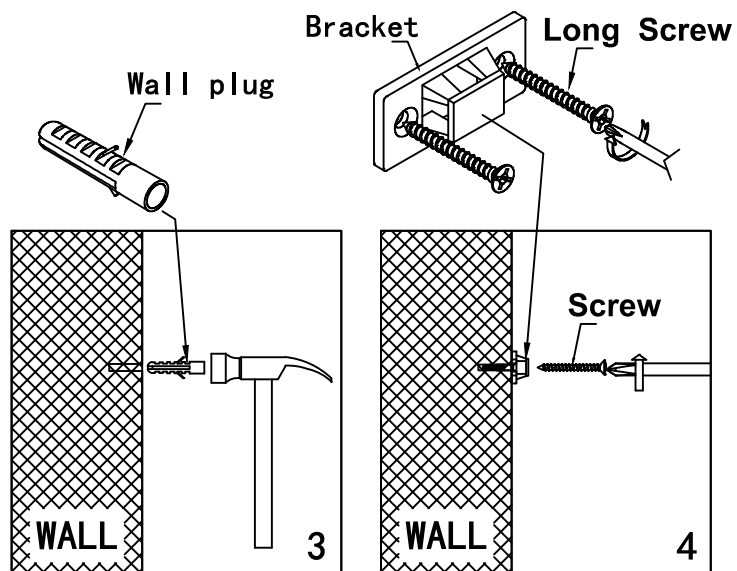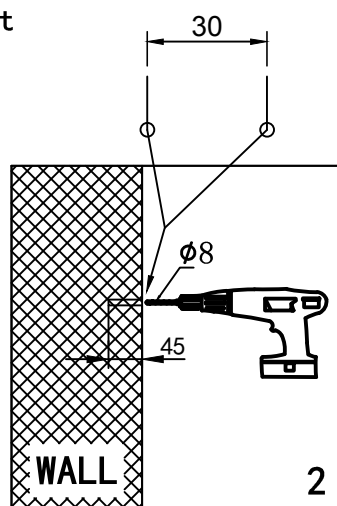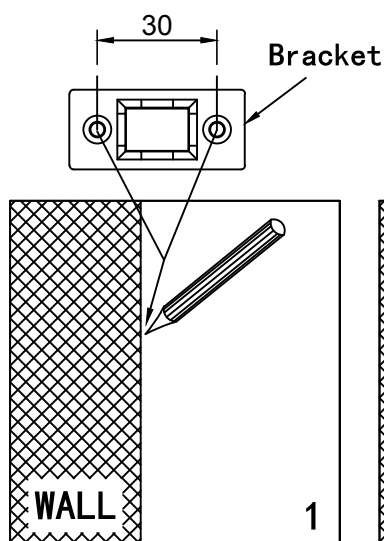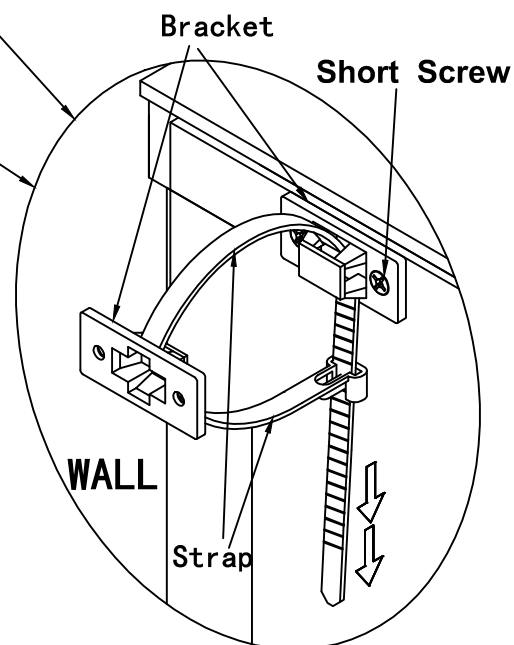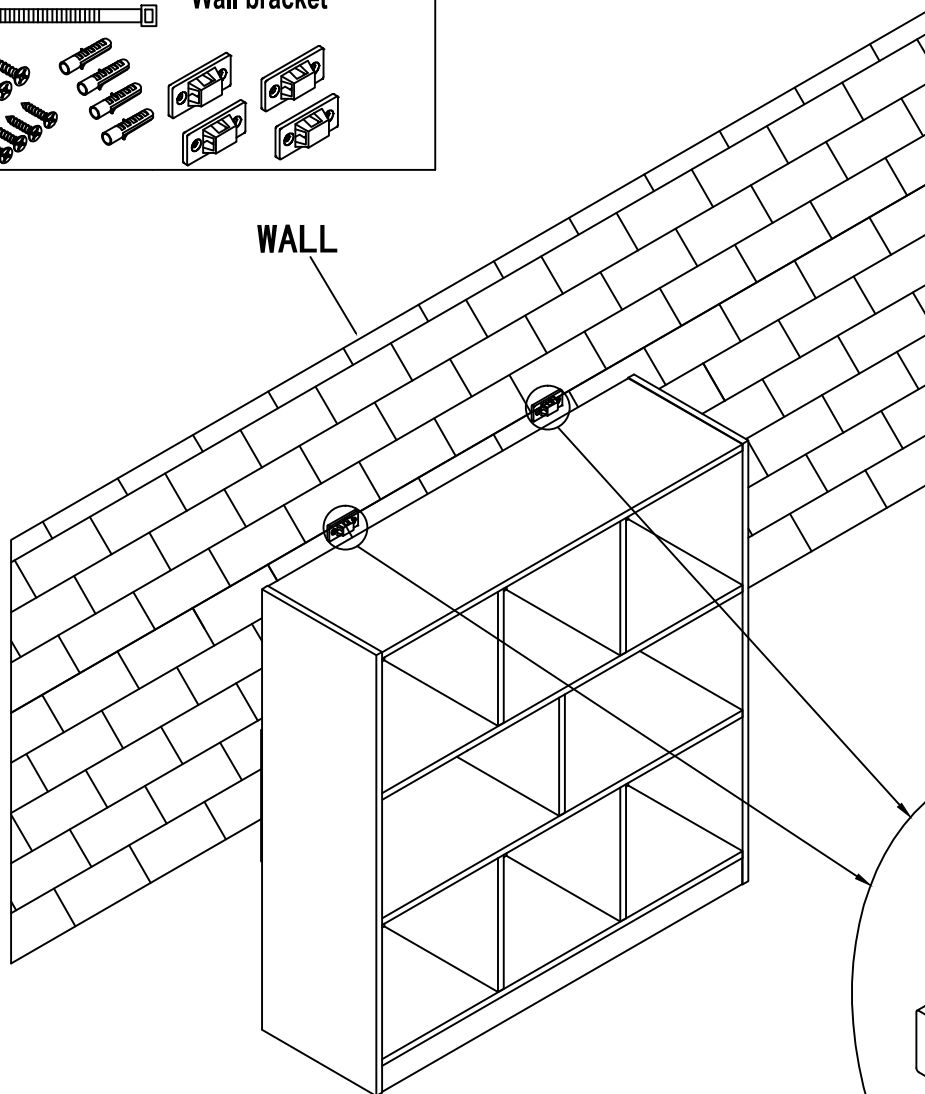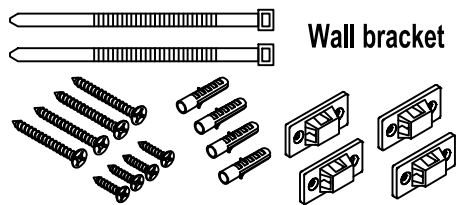

Awesome! **You did it!**

We'd love to see how it looks in your space—share your setup and tag us on

Instagram @spacegeneralnz

Visit us at www.spacegeneral.co.nz.