open concept

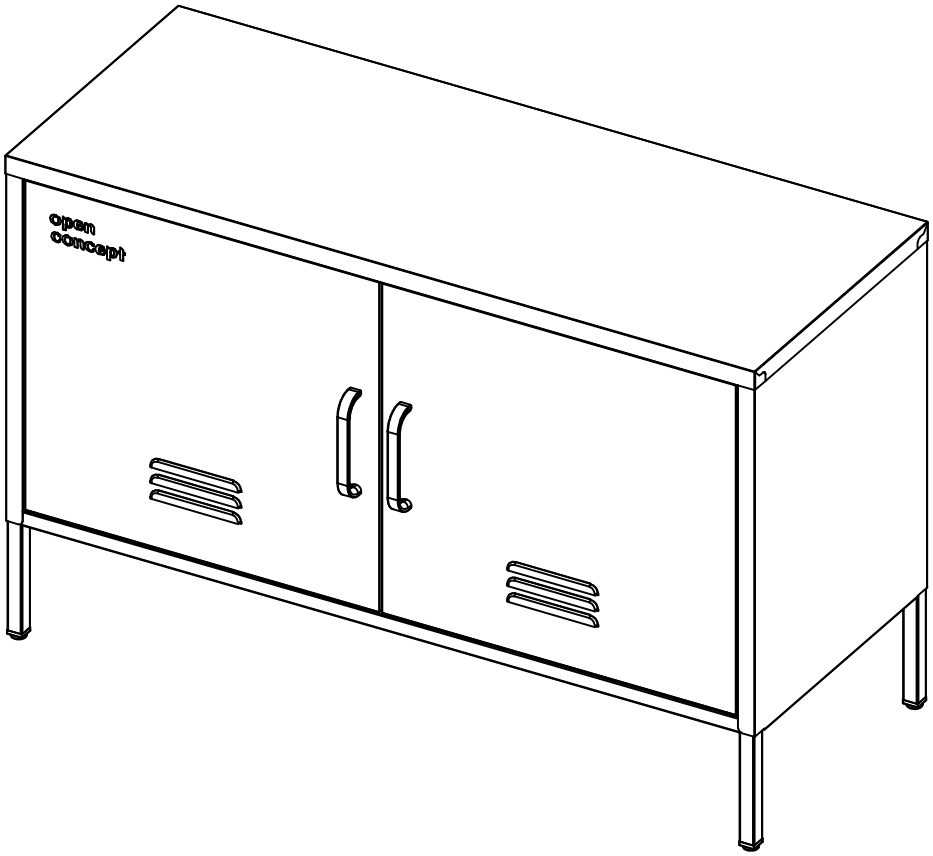

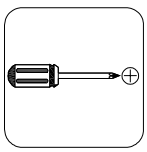

Important:
Please read through instructions carefully
Before assembly and keep for future reference.

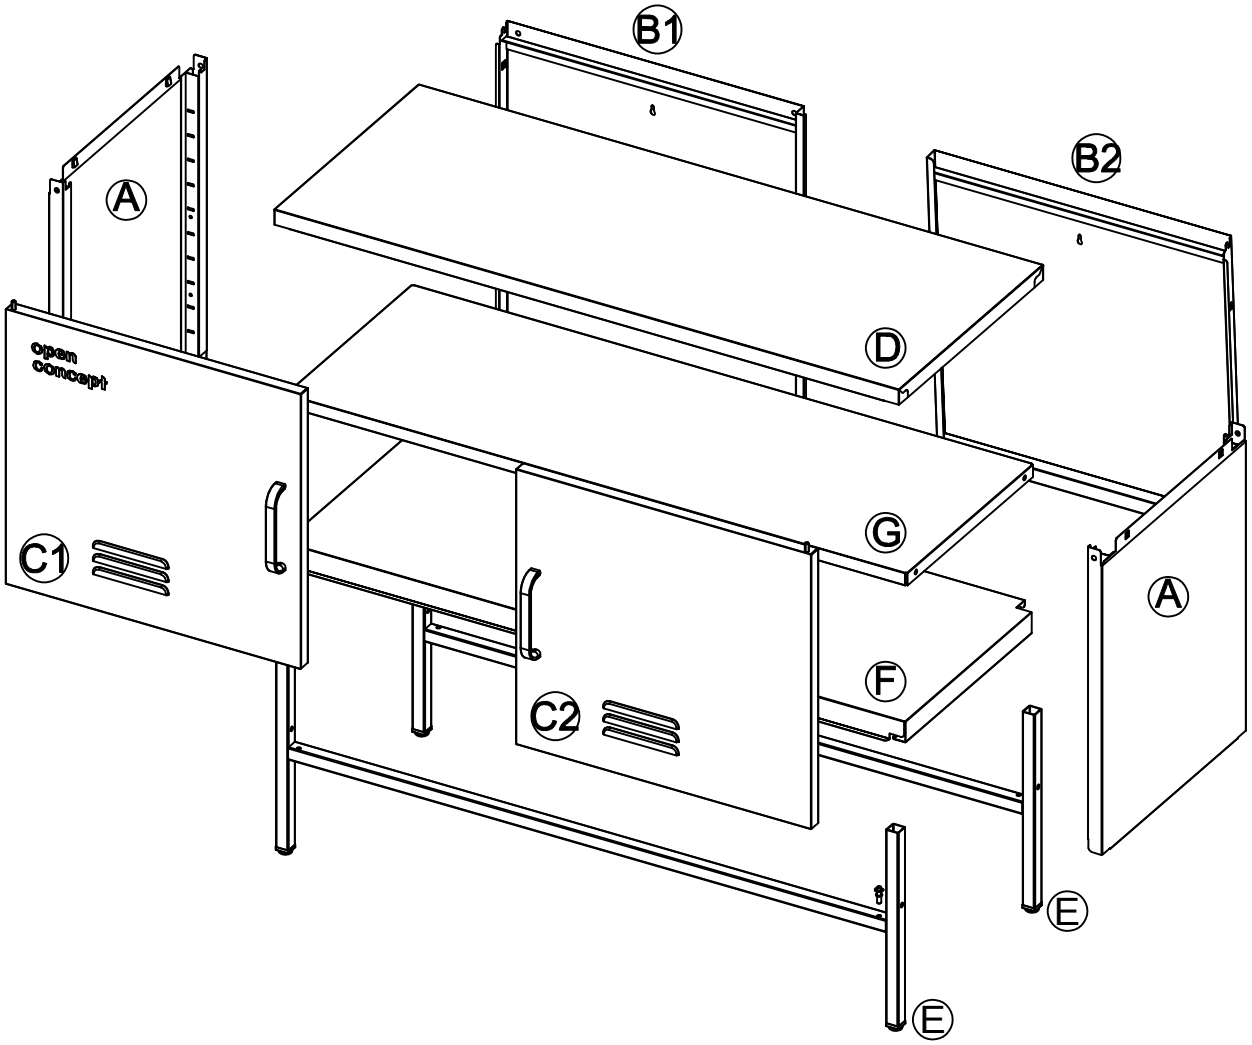

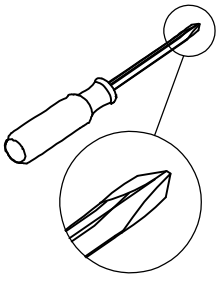

Hardware Ctn No.	1

A x 2 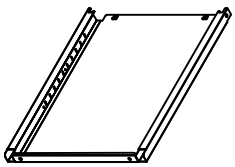 489x400x23mm	B1 x 1 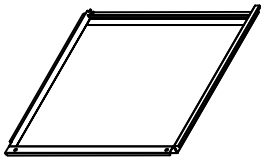 468x477x23mm	B2 x 1 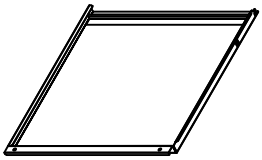 468x477x23mm	C1 x 1 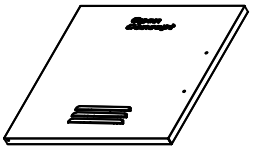 441x475x20mm
C2 x 1 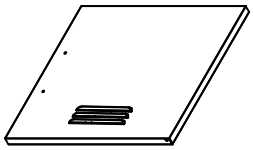 441x442x20mm	D x 1 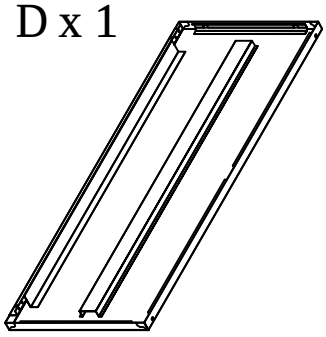 1001x402x25mm	E x 2 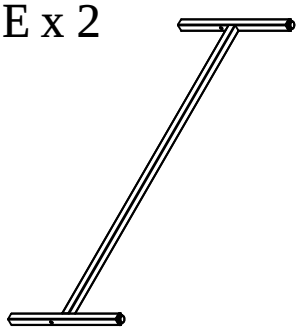 998x320x20mm	F x 1 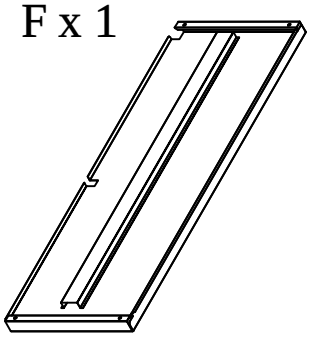 997x375x35mm
G x 2 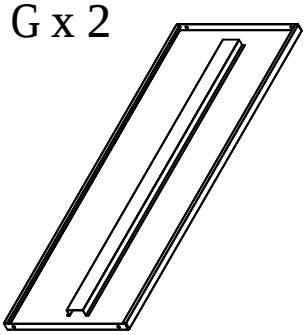 997x352x20mm			

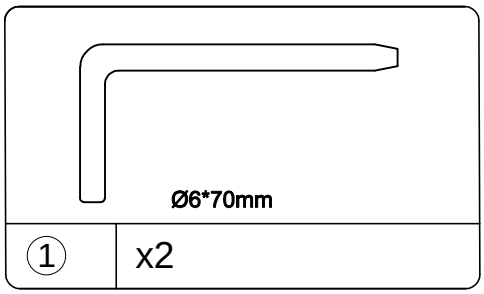

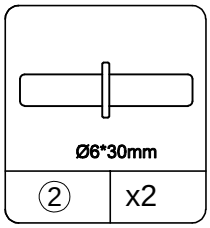

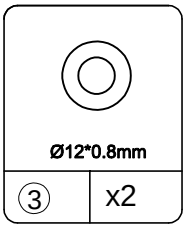

spare:2

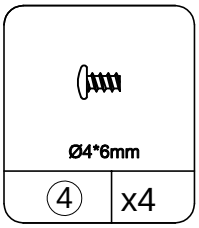

spare:2

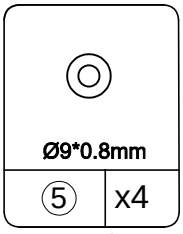

spare:2

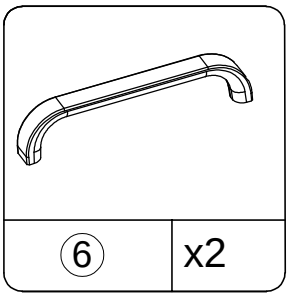

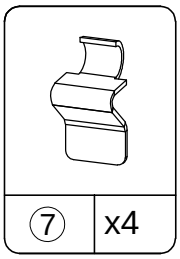

spare:2

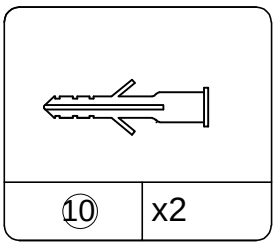

WALL ANCHOR

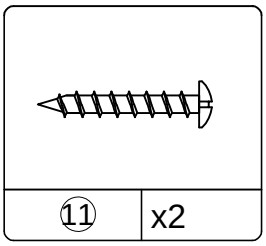

SCREW

(1) - Attach (A) to (E) as below shown.

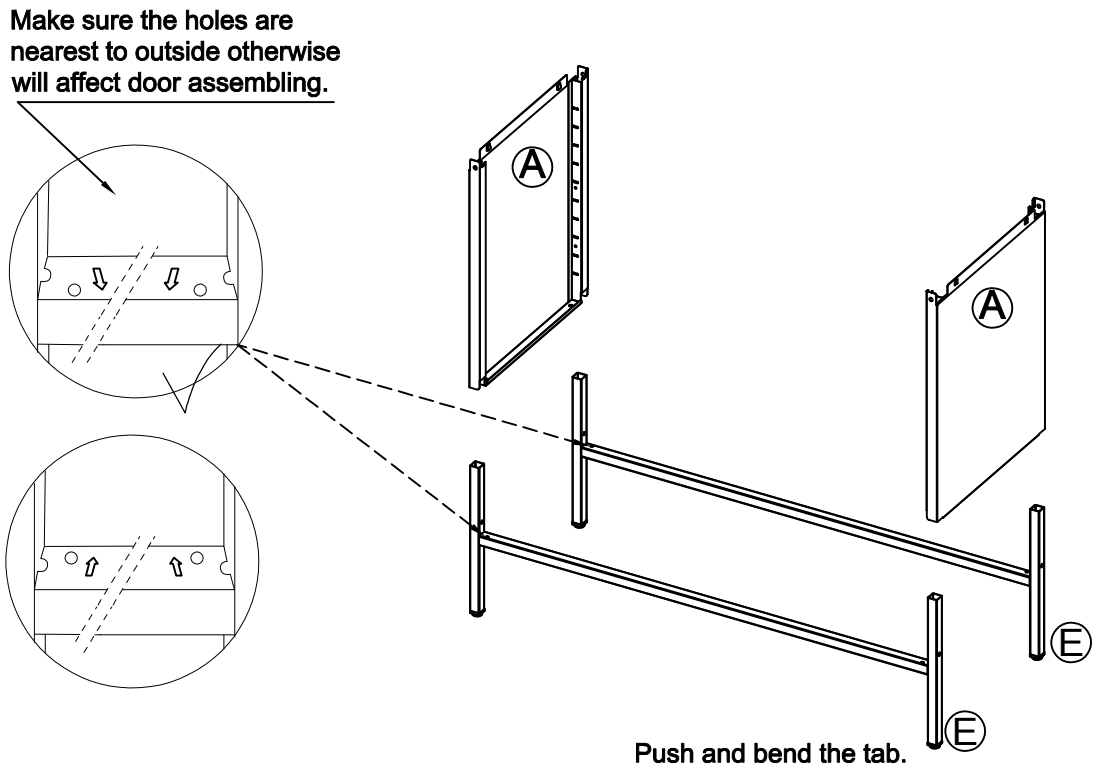

(2) - Attach (B1) & (B2) to (A) & (E) as below shown.

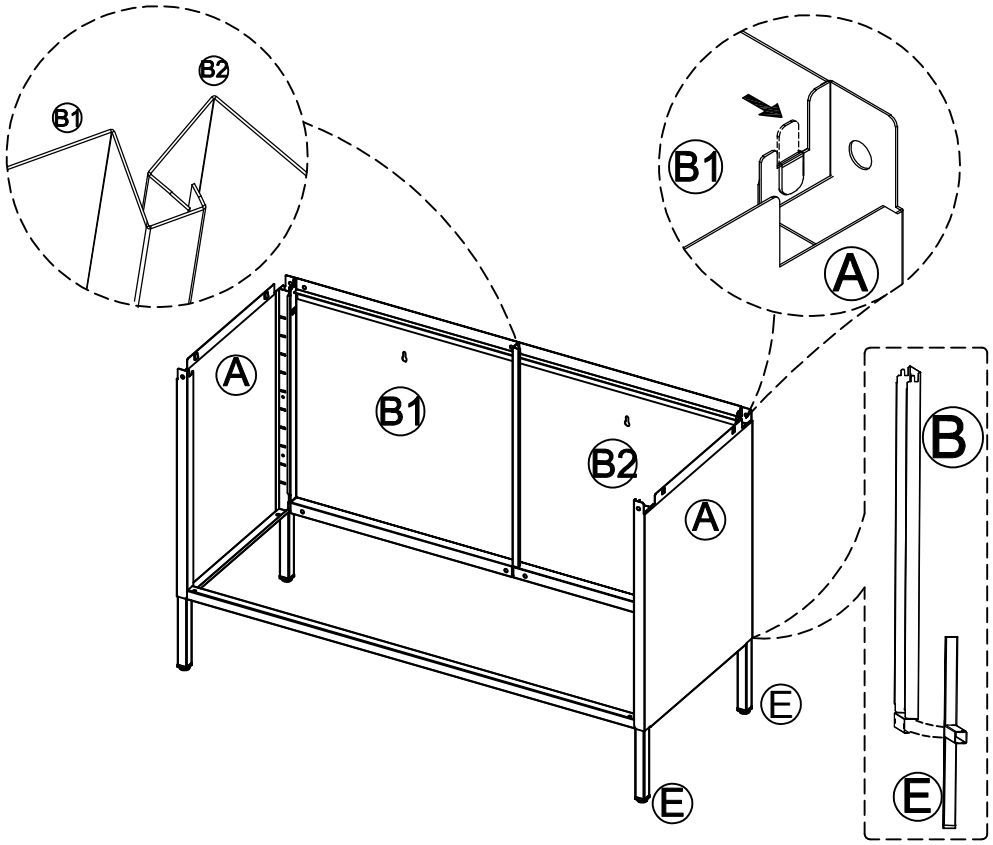

(3) - Attach (F) to (A) & (B) & (E) as below shown.

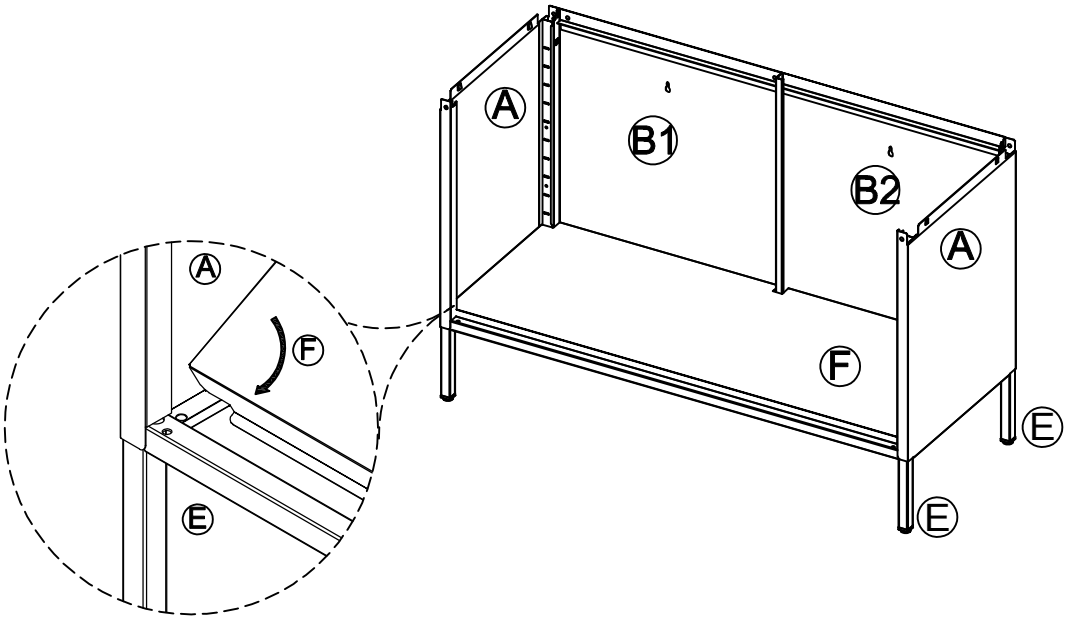

(4) - Attach (D) to (A) & (B) as below shown.

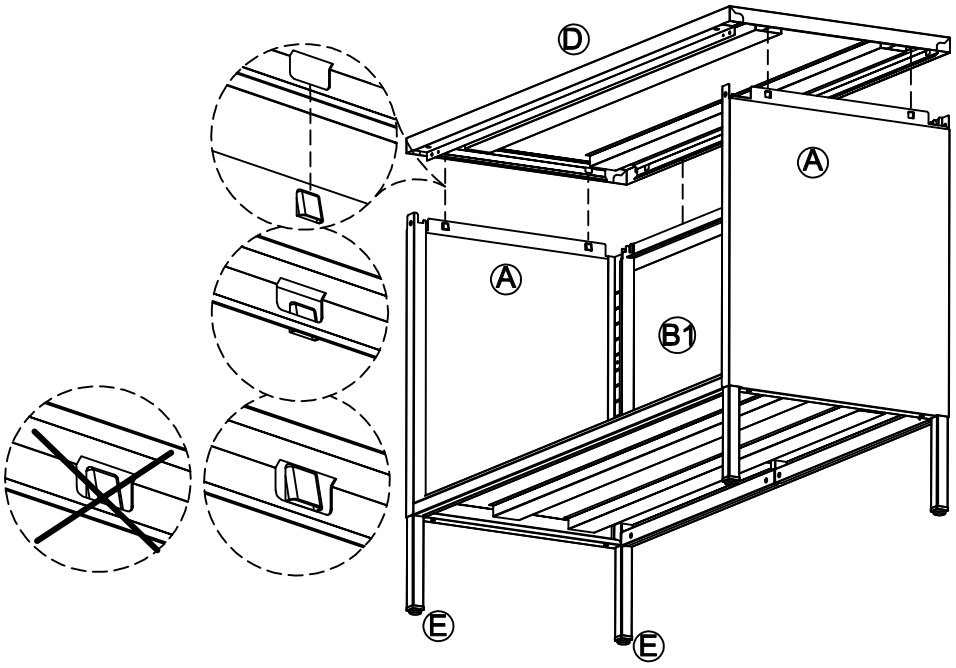

(5) - Attach (G) to pre-assembled unit as below shown.

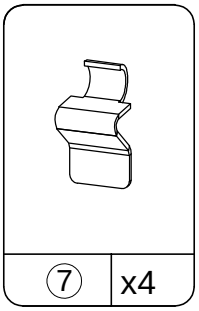

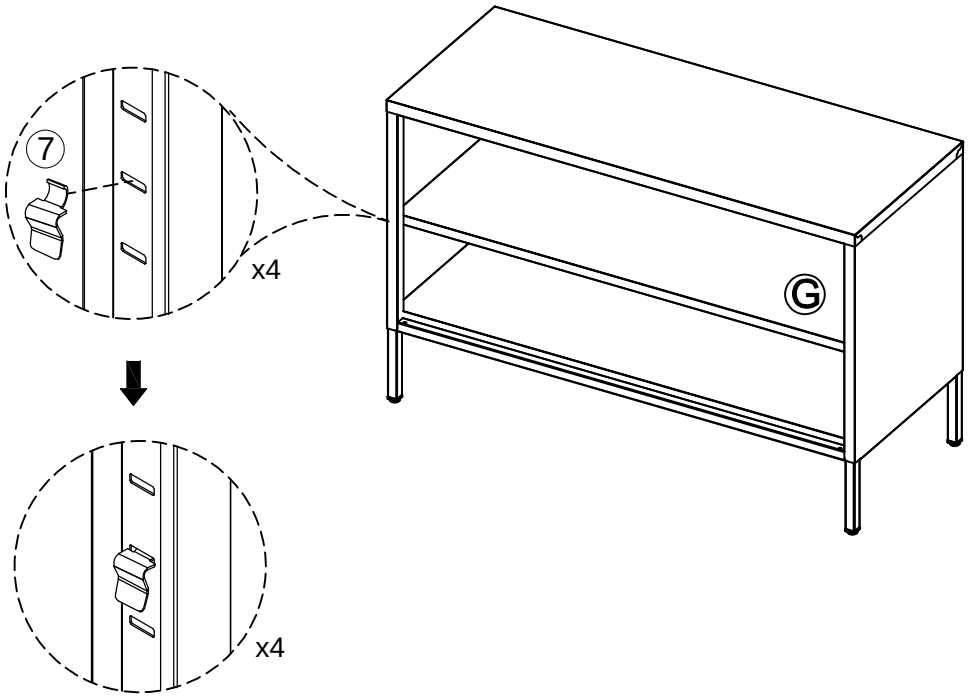

(6) - Attach (2) & (3) to pre-assembled unit as below shown.

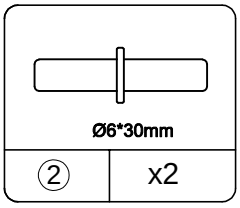

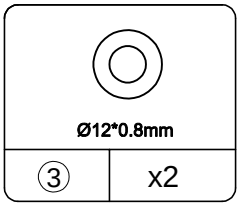

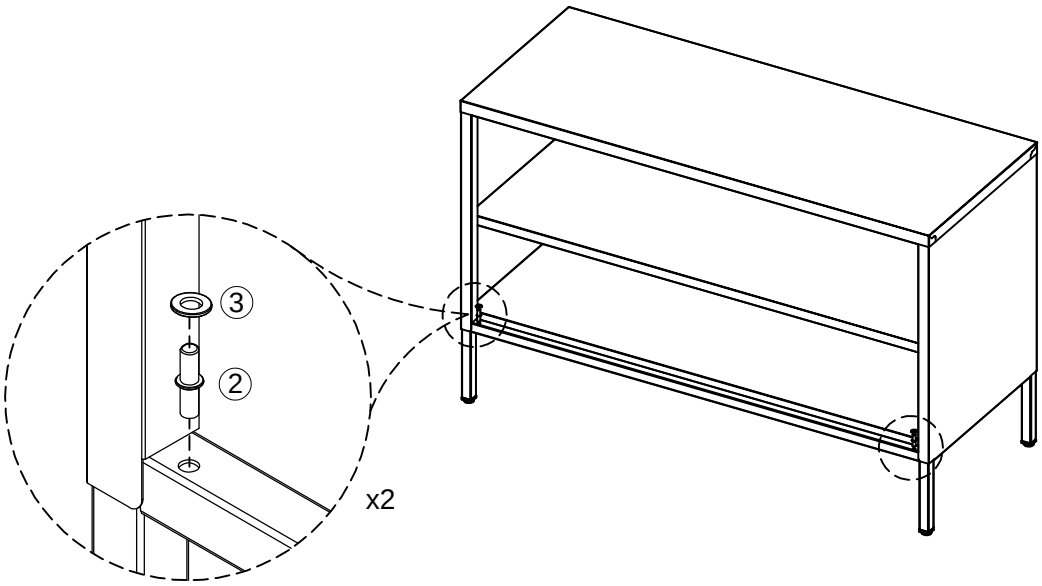

(7) - Attach (C1) & (C2) to pre-assembled unit as below shown.

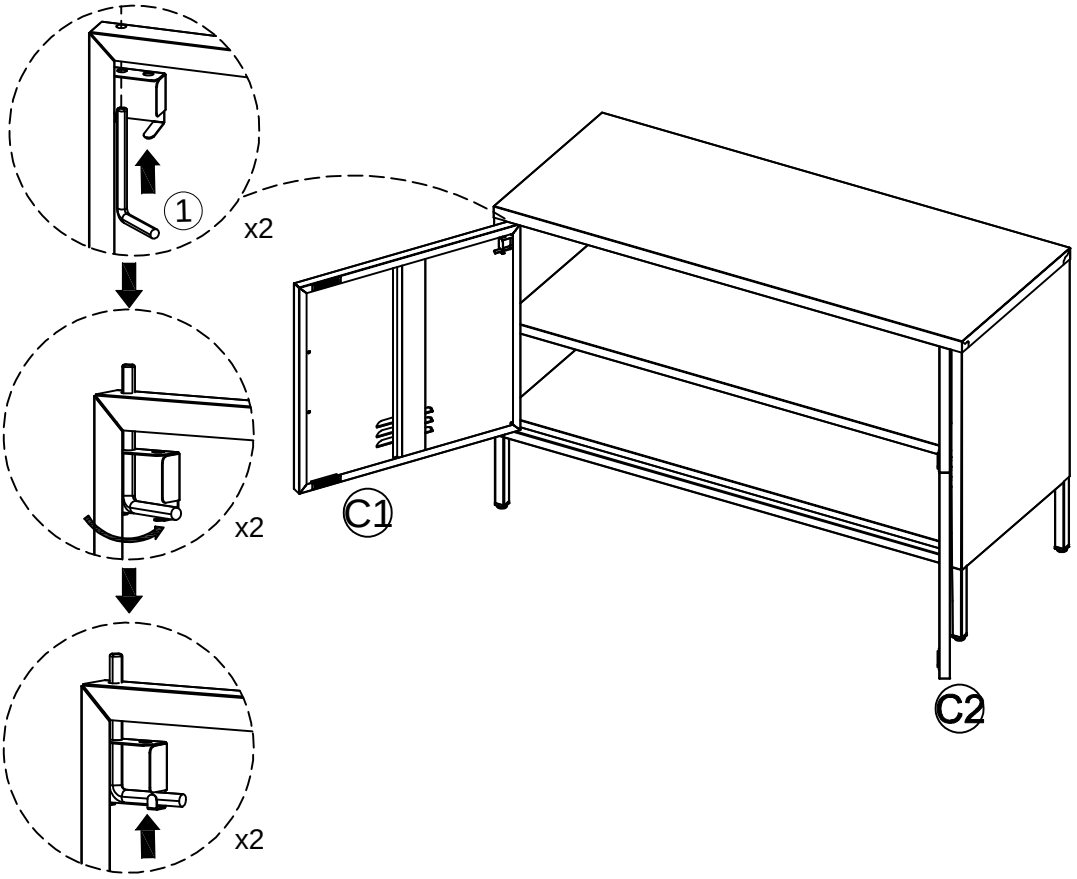

Push and bend the tab.

(8) - Attach (6) to (C1) & (C2) as below shown.

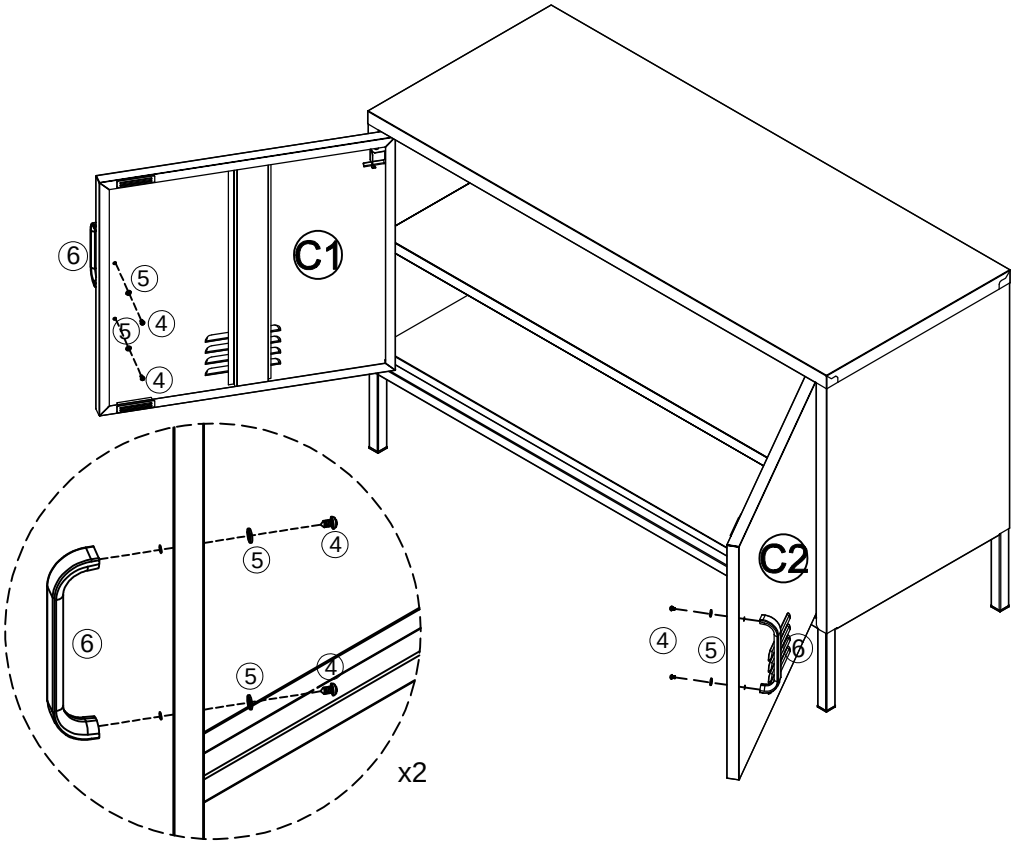

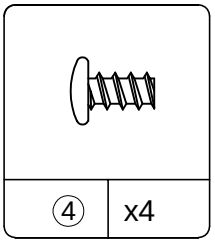

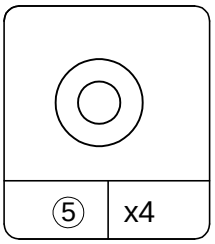

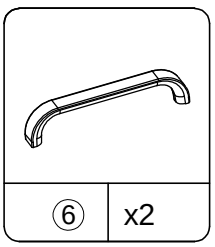

(9)

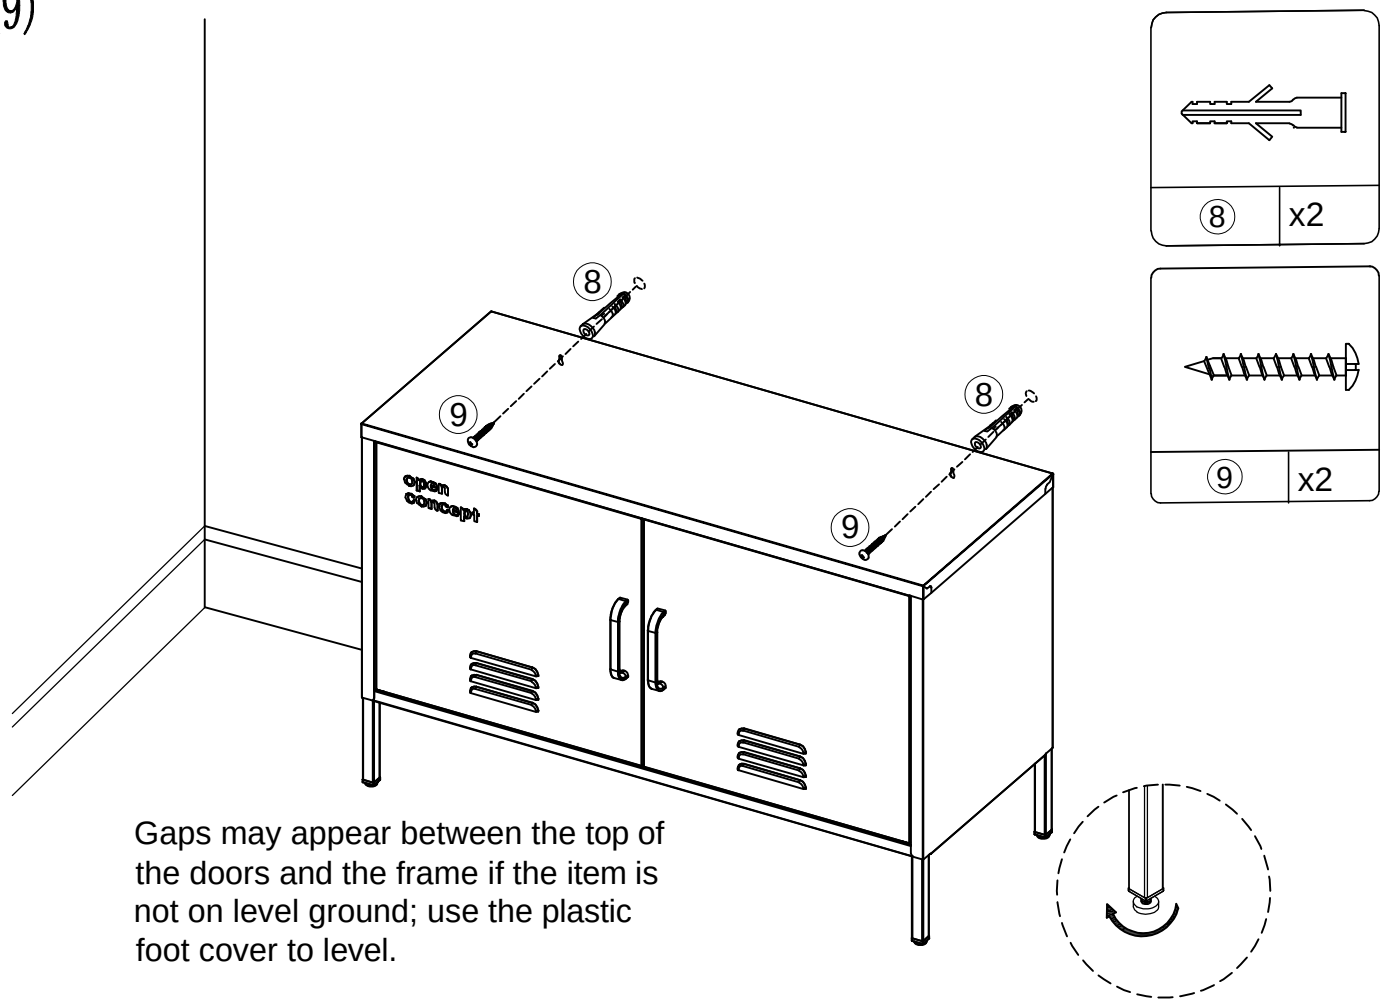

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

Open Concept

Great Job! You're done it

Don't forget to share how it looks in your space and tag us on Instagram

@spacegeneralnz